

The Critical State as a Steady-State solution of Granular Solid Hydrodynamics

Stefan Mahle,¹ Yimin Jiang,² and Mario Liu¹

¹Theoretische Physik, Universität Tübingen, Germany

²Central South University, Changsha 410083, China

(Dated: February 11, 2019)

The approach to the critical state – the transition from partially elastic to perfectly plastic behavior – is considered the most characteristic of granular phenomena in soil mechanics. By identifying the critical state as the steady-state solution of the elastic strain, and presenting the main results as transparent, analytic expressions, the physics underlying this important phenomenon is clarified.

PACS numbers: 81.40.Lm, 46.05.+b, 83.60.La

Shearing an solid body continually will permanently deform or bend it – if it does not break first – with a concentration of shear rate to the region of bend. Similar things may also happen in granular media, which are then referred to as a shear zone. But there is also a uniform state, continually deforming yet of constant stress. This ideally plastic state is called *critical* in soil mechanics [1], to emphasize its singularity, and convey the idea that the system is on the verge of stability. Engineering theories are all constructed to yield a realistic rendering of this state, also the approach to it – though the physics behind the phenomenon is murky. For instance, why is the critical state rate-independent, but dense flow is not? Or, why does a *critical* state appear smooth and stable?

In what follows, we shall first give an introduction to the present thinking on the critical state; then briefly present granular solid hydrodynamics (GSH), a continual mechanical theory that, starting from a few ideas about the basic physics of sand, deduce many aspects of its behavior. Two of these ideas are: • Grains are deformed under stress, and there is an one-to-one relation between this elastic deformation and the stress. • The deformation is slowly lost when grains jiggle and briefly lose contact with one another. A consequence of the two is: A constant shear rate not only increases the deformation, but also decreases it, because grains will jiggle being sheared past one another. A steady state is reached when both processes balance each other, and the deformation remains constant over time, as does the stress. Finally, we quantify the deformation by an elastic strain tensor, complete with an evolution equation, and identify its steady-state solution as the critical state.

The simplest version of *elasto-plastic theory* captures the salient features of granular behavior by patching linear elasticity with perfect plasticity: Plotting shear stress σ_s versus shear strain ε_s , the first portion is taken as elastic, $\sigma_s \sim \varepsilon_s$, the second as perfectly plastic, or critical, $\sigma_s = \text{const}$. The point at which both lines intersect, where the elastic behavior becomes unstable and switches to the critical one, is called *yield*. If the critical stress is equal to the maximal elastic stress, the critical state is on the verge of stability. But it may also be less – just

as the kinetic friction may be less than the static one.

More realistically, one needs to include the density dependence. The approach to the critical state, typically observed in triaxial tests and described employing the three principle stress components, $\sigma_1 = \sigma_2 \neq \sigma_3$, is then more varied, see Fig 1. (See [1, 2] for more details, and [3] for a presentation well suited for physicists.) Keeping σ_1 constant, one applies a slowly increasing strain, ε_3 , and measures $q \equiv \sigma_3 - \sigma_1$, along with the density ρ , or void

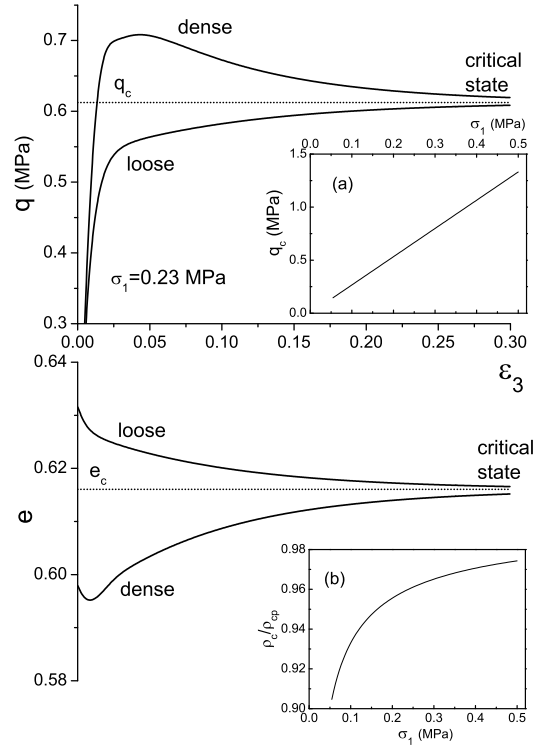


FIG. 1: Seemingly a textbook illustration of the critical state, this is the result of a calculation employing GSH, specifically the solution of Eqs (3,7), plotting the stress $q \equiv \sigma_3 - \sigma_1$ and the void ratio e against the strain ε_3 in triaxial tests (cylinder axis along 3), at given σ_1 and strain rate ε_3/t , respectively for an initially dense and loose sample. Insets are variations with σ_1 of the critical stress q_c and density ρ_c . See the text for details, and the caption of Fig 2 for the parameter values.

ratio $e \equiv V_e/V_g$, where V_e, V_g are the void and grain volumes. [Similar results are obtained if one keeps the pressure, $P \equiv \frac{1}{3}(\sigma_1 + \sigma_2 + \sigma_3)$, constant.] Provided no shear zones are formed, the findings are as rendered in Fig. 1: (1) q increases monotonically in loose systems, but display a maximum in dense ones. Both approach asymptotically the stationary value q_c . (2) Dense systems dilate, loose systems contract, until a universal ρ_c (or e_c) is reached. (3) All stress-strain curves are rate-independent, retaining their form for whatever strain rate. (4) The steady state, characterized by q_c and ρ_c for given σ_1 (or P), is referred to as the critical state. (5) The friction angle φ_c , defined by $\sqrt{3}\tan\varphi_c \equiv q_c/P$, is essentially constant, implying $q_c \sim P$. (6) Lacking an obvious choice for the yield point in the upper two curves of Fig.1, one may take it as given by q_c for loose sand, and by q 's maximum for dense sand. The vague rational behind the second choice is the fact that in an elastic medium, the positivity of the stiffness coefficient, $\partial q/\partial \varepsilon_3 = \partial \sigma_3/\partial \varepsilon_3 > 0$, is required by stability. So a negative one implies instability (and is in fact never observed). Being strongly plastic, granular media are of course different, but where, why and how?

There are many engineering theories capable of a realistic account of these experimental observations. A mathematically elegant and comparatively simple one is the *hypoplastic theory* [2, 4] that starts from a postulated relation between the stress σ_{ij} and strain ε_{kl} :

$$\dot{\sigma}_{ij} = H_{ijkl} \dot{\varepsilon}_{kl} - \Lambda_{ij} \sqrt{\dot{\varepsilon}_{ij}^0 \dot{\varepsilon}_{ij}^0 + \bar{\varepsilon} (\dot{\varepsilon}_{\ell\ell})^2}. \quad (1)$$

A dot – such as in $\dot{\sigma}_{ij}$ – is an appropriately objective time derivative; and the superscript 0 denotes the traceless part, here and below. The tensors H_{ijkl}, Λ_{ij} are taken as functions of σ_{ij}, ρ , specified using experimental data. The critical state is given by $\dot{\sigma}_{ij} = 0$.

Nevertheless, being descriptive rather than explaining, hypoplasticity (same as various elasto-plastic models) is not a complete theory: As many features (such as rate-independence or the so-called *incremental nonlinearity*) are put in via Eq (1), there is no way to understand them. The hypoplastic description is also narrow: None of the rate-dependent phenomena, say dense flow [5], or the transition to elastic behavior, needed for an account of sound propagation [6], are described; and it fails at accounting for static stress distributions. More fundamentally, it does not specify a complete set of state variables, and lacks energetic and entropic considerations.

In contrast, starting from a few ideas about the physics of sand and derived from general principles (including energy conservation and thermodynamics), GSH is a full-fledged theory [7–9] that aims to model granular behavior in all its facets. GSH was first developed to calculate static stress distribution for various geometries, including sand piles, silos, and point load, achieving results in agreement with observation [10]. It was then generalized

to dynamic situations, and an initial success [11] are the similarity of its response envelopes with those of modern hypoplastic theories, also the clarification of when and why rate-independence holds. Meanwhile, preprints on elastic waves and compaction have been submitted, those on shear bands and dense flow are being drafted. Here, we consider the critical state.

GSH consists of five conservation laws (for the energy w , mass ρ , and momentum ρv_i), an evolution equation for the elastic strain u_{ij} , and balance equations for two entropies, or equivalently, two temperatures. Both the true and the granular temperature, T and T_g , are necessary, because granular media sustain a *two-stage irreversibility*: Macroscopic energy, kinetic and elastic, dissipates into mesoscopic, inter-granular degrees of freedom quantified by T_g , which in turn degrades into microscopic, inner-granular degrees of freedom, quantified by T . The first are granular jiggling, the second mostly phonons.

The elastic strain u_{ij} is defined as the portion of the strain ε_{ij} that deforms the grains and leads to reversible storage of elastic energy. The plastic rest, $\varepsilon_{ij} - u_{ij}$, accounts for rolling and sliding. Because the energy depends on u_{ij} (and not on the total strain or the plastic one), we take u_{ij} as a state variable – a step that enables us to retain many useful features of elasticity, especially an explicit expression for the stress $\sigma_{ij}(u_{kl})$. Moreover, stability now only requires $\partial \sigma_3/\partial u_3$ to be positive. This frees $\partial \sigma_3/\partial \varepsilon_3$ to be negative, as measured.

From the equations of GSH as derived in [7, 8], we need three: for T_g, u_{ij} , and the Cauchy stress $\sigma_{ij}(\rho, u_{kl})$. Accounting for the first-stage irreversibility, the balance equation for T_g has a similar structure as that for the true temperature, with the production of granular entropy given as $R_g = \eta_g v_{ij} v_{ij} - \gamma T_g^2$. The first term, preceded by the viscosity η_g , is positive. It describes how shear flow $v_{ij} \equiv \frac{1}{2}(\nabla_i v_j + \nabla_j v_i)$ jiggles grains, converting macroscopic kinetic energy into T_g . (As compressional flow is small in the present context, we neglect it, setting $v_{\ell\ell} = 0$.) The second term, negative, accounts for inelastic collisions, as a result of which T_g diminishes, relaxing with the rate γ . In steady-state, $R_g = 0$, or

$$T_g = \sqrt{v_{ij} v_{ij}} \sqrt{\eta_g/\gamma} \equiv v_s \sqrt{\eta_g/\gamma}. \quad (2)$$

Dividing u_{ij} into $\Delta \equiv -u_{\ell\ell}$, $u_{ij}^0 \equiv u_{ij} - \frac{1}{3}u_{\ell\ell}\delta_{ij}$, the evolution equation for u_{ij} takes the form [7, 12]

$$\begin{aligned} \partial_t \Delta + (1 - \alpha)v_{\ell\ell} - \alpha_2 u_{ij}^0 v_{ij} &= -3\Delta/\tau_1 = -3\lambda_1 T_g \Delta, \\ \partial_t u_{ij}^0 - (1 - \alpha)v_{ij} &= -u_{ij}^0/\tau = -\lambda T_g u_{ij}^0, \end{aligned} \quad (3)$$

If T_g is finite, grains jiggle and briefly lose contact with one another, during which their unstressed form will be partially restored. Macroscopically, this shows up as a slow relaxation of Δ and u_{ij}^0 , with relaxation rates that grow with T_g , and vanish for $T_g = 0$. We therefore take $1/\tau = \lambda T_g$, and $1/\tau_1 = \lambda_1 T_g$. Eliminating T_g using Eq (2), we have $\lambda T_g = \Lambda v_s$, $3\lambda_1 T_g = \Lambda_1 v_s$, with

$\Lambda \equiv \lambda\sqrt{\eta_g/\gamma}$, $\Lambda_1 \equiv 3\lambda_1\sqrt{\eta_g/\gamma}$. The relaxation of u_{ij} should come to a halt at the random closed-packed density ρ_{cp} , as the system turns elastic there. We assume the simplest possibility, $\Lambda, \Lambda_1 \sim (\rho_{cp} - \rho)$. We also set $\alpha_2 \sim (\rho_{cp} - \rho)$ [to make the friction angle φ_c independent of the pressure, see the discussion below Eq (9)].

The coefficients α, α_2 are Onsager coefficients. The first reduces the portion of v_{ij} that deforms the grains and changes the elastic strain u_{ij} . The second quantifies dilatancy, the cross effect typical of granular media that a shear flow v_{ij}^0 leads to a compressional rate, $\partial_t \Delta$.

Finally, with $\pi_{ij}(u_{kl}, \rho) \equiv -\partial w / \partial u_{ij}$, w being the elastic energy, and neglecting viscous terms (large only for shear rates typical of dense flows), the Cauchy stress is

$$\sigma_{ij}(u_{kl}, \rho) = (1 - \alpha)\pi_{ij} - \alpha_2 u_{ij}^0 \pi_{\ell\ell} / 3. \quad (4)$$

That the same α, α_2 appear here is a result of the Onsager reciprocity relation. The term $\sim \alpha_2$ may usually be neglected, as it is an order higher in u_{ij} , which is always smaller than 10^{-3} . The term $\sim \alpha$ may be understood by an analogy to a bicycle gear shift – a bigger α implies more pedaling at reduced torque, with the same factor.

Eqs (3,4) with T_g eliminated are algebraically simple and physically transparent. It is therefore instructive that they lead directly to Eq (1), the postulated hypoplastic relation, and provide expressions for H_{ijkl}, Λ_{ij} . Although these tensors are seemingly different from the ones used in modern hypoplastic models, the calculated response envelopes (ie. closed stress or strain curves) are strikingly similar, see [11]. This agreement indicates the appropriateness of our starting points, especially the exclusion of the plastic strain as a state variable.

Next, we evaluate the steady-state solution for the elastic strain, given by taking $\partial_t \Delta, \partial_t u_{ij}^0 = 0$ in Eqs (3). Assuming a stationary shear flow, $v_s^2 \equiv v_{ij} v_{ij}$, $v_{\ell\ell} = 0$, and denoting $u_s^2 \equiv u_{ij}^0 u_{ij}^0$, we find $u_{ij}^0 / u_s = v_{ij} / v_s$ for the solution, with the magnitudes u_s, Δ given as

$$u_c = \frac{1 - \alpha}{\lambda} \sqrt{\frac{\gamma}{\eta_g}} \equiv \frac{1 - \alpha}{\Lambda}, \quad \frac{\Delta_c}{u_c} = \frac{\alpha_2}{3\lambda_1} \sqrt{\frac{\gamma}{\eta_g}} \equiv \frac{\alpha_2}{\Lambda_1}, \quad (5)$$

Reusing the parameter values of [11], we take $\Lambda = 10^2$, $\Lambda_1 = 30$ for $\rho/\rho_{cp} = 0.96$, also $\alpha = 0.8$, to obtain $u_c = 2 \times 10^{-3}$, $\Delta_c / u_c = 0.1 \alpha_2$. (We take the high- T_g limit of both η_g/γ and α , see [7].) As we shall see, the friction angle φ_c is a function of Δ_c / u_c . So α_2 is given by φ_c .

Dividing σ_{ij} into pressure and shear stress: $P \equiv \frac{1}{3} \sigma_{\ell\ell}$ and $\sigma_{ij}^0 = \sigma_s u_{ij}^0 / u_s$ with $\sigma_s^2 \equiv \sigma_{ij}^0 \sigma_{ij}^0$, we have P, σ_s as functions of ρ, Δ, u_s . Clearly, the critical pressure $P_c = P(\rho, \Delta_c, u_c)$ and shear stress $\sigma_c = \sigma_s(\rho, \Delta_c, u_c)$ are given once ρ is. Or we may specify P to fix σ_c and ρ_c . Given these features, we tentatively identify the rate-independent expressions of Eqs (5) with the critical state, aiming below for a quantitative validation.

The approach to the critical state is given by solving Eqs (3) for $u_s(t), \Delta(t)$, at constant $\rho, v_s \equiv \varepsilon_s / t$, with the

initial conditions: $\Delta = \Delta_0, u_s = 0$. The solution is

$$u_s(t) = u_c(1 - e^{-\Lambda \varepsilon_s}), \quad (6)$$

$$\Delta - \Delta_c = \frac{\alpha_2 u_c}{\Lambda - \Lambda_1} e^{-\Lambda \varepsilon_s} + \left[\Delta_0 - \frac{\Lambda \Delta_c}{\Lambda - \Lambda_1} \right] e^{-\Lambda_1 \varepsilon_s}.$$

Depending on ε_s , it describes a rate independent and monotonic decay to the steady-state of Eqs (5), with two rates, Λ and $\Lambda_1 \approx \Lambda/3$. Note that there is no instability in Eq (6) – on the contrary, the decay takes place only if its path does not at some point breach a yield surface (such as the Coulomb instability considered below). The system then forms shear bands (considered in a forthcoming paper) and abandons the uniform decay.

Usually, however, it is the pressure (or σ_1) that is given, not the density ρ . Then Eq (6) no longer holds, and a numerical solution becomes necessary. The reason is, as Δ, u_s change with time, the density compensates to maintain $P(\rho, \Delta, u_s)$. And along with ρ , the quantities $\alpha_2, \Lambda, \Lambda_1$, all functions of ρ , also change with time. [There is, in addition, a change of time scale that comes from the term $\sim v_{\ell\ell} = -\partial_t \rho / \rho$ in the first of Eqs (3).]

In experiments, the stress is measured, not the elastic strain. To calculate $\sigma_{ij}(t)$ employing Eq (4), we need an expression for the elastic energy w . The one we have consistently employed [10, 11], among others to study static stress distribution and hypoplastic deformation, is: $w = \mathcal{B} \sqrt{\Delta} (\frac{2}{5} \Delta^2 + u_s^2 / \xi)$ where $\mathcal{B}, \xi$ are two elastic coefficients. We fix $\xi = 5/3$, independent of the density, and take $\mathcal{B}(\rho) = \mathcal{B}_0 [(\rho - \rho^*) / (\rho_{cp} - \rho)]^{0.15}$, with $\rho^* \equiv \rho_{cp} + 20(\rho_{\ell p} - \rho_{cp})/9$. The constant $\mathcal{B}_0$ is around 8 GPa for river sand and 7 GPa for glass beads. The associated pressure and shear stress are

$$P = (1 - \alpha) \mathcal{B} \Delta^{1.5} [1 + u_s^2 / (2\xi \Delta^2)], \quad (7)$$

$$\sigma_s = (1 - \alpha) 2u_s \sqrt{\Delta} \mathcal{B} / \xi, \quad (8)$$

$$P / \sigma_s = (\xi/2) \Delta / u_s + (1/4) u_s / \Delta. \quad (9)$$

The solution to Eqs (3,7,8), for σ_1 and $P = \text{constant}$, respectively, is remarkably similar to textbook illustrations of the critical state, see Fig 1 and 2. But many famous features of these curves are now easy to understand: Starting from an isotropic stress state, $u_s = 0$, the dynamics of Δ is such that it always decreases as long as u_s is small, see Eq (3), implying an initial increase in ρ to maintain the pressure. The subsequent behavior, after u_s (relaxing with the faster rate) has reached the critical value u_c , depends on whether (1) $\Delta > \Delta_c$ (loose sand) or (2) $\Delta < \Delta_c$ (dense sand). As Δ approaches Δ_c monotonically, it decreases in case (1), and increases in (2), while ρ , conversely, grows and decreases, displaying the so-called *contractancy* and *dilatancy*, respectively, until the critical state, $\Delta = \Delta_c$ and $\rho = \rho_c$, is reached. Next, we consider the shear stress q , or $\sigma_s = \mathcal{B}(\rho) \sqrt{\Delta} u_s$. It always increases first with u_s , until $u_s = u_c$ is reached. Afterwards, the behavior (for constant P) depends on

what Δ does. With $\sigma_s \sim P$ [see Eq (9)], it goes on growing if Δ shrinks [loose case (1)], but decreases, displaying a peak for (2) if Δ grows, toward the maximally stable point (see the consideration on Coulomb yield below).

Beyond Fig 1,2, the friction angle φ_c [given as $\tan \varphi_c \equiv (1/\sqrt{3})q_c/P = (1/\sqrt{2})\sigma_s/P$], is observed to be essentially independent of the density, or the pressure [1, 2]. This is well accounted for by the above results, because the ratio σ_s/P depends only on $\Delta_c/u_c = \alpha_2/\Lambda_1$, see Eq (9), and we have taken $\alpha_2, \Lambda_1 \sim \rho_{cp} - \rho$. There are two types of density dependence above, the sensitive one via $\rho_{cp} - \rho$, and the weak one via ρ . Neglecting the latter, α_2/Λ_1 is a constant. Circumstances are similar if P is the control parameter, because $P \sim \mathcal{B} \sim (\rho_{cp} - \rho)^{-0.15}$ for constant u_{ij} , so changing P only changes $\rho_{cp} - \rho$.

Finally, we consider Coulomb yield, and its relation to the friction angle φ_c . Given Eq (9), the ratio P/σ_s has the minimal value $\sqrt{\xi/2}$, at $u_s/\Delta = \sqrt{2\xi}$. It is larger for $u_s/\Delta < \sqrt{2\xi}$, and unstable for $u_s/\Delta > \sqrt{2\xi}$ (as the energy w is then concave). This may be identified with (the Druck-Prager version of the) Coulomb yield – an energetic instability that ensures that no elastic solution exists for $P/\sigma_s < \sqrt{\xi/2}$, or $u_s/\Delta > \sqrt{2\xi}$. Note this

instability is determined by the elasticity coefficient ξ , while the friction angle is given by transport coefficients, especially α_2 . There is no a priori link between both, as they are based on different physics. So the critical state may be stable and observable, or not. For the first case, we have $u_c/\Delta_c = \Lambda_1/\alpha_2 < \sqrt{2\xi}$, implying $\tan \varphi_c < 1/\sqrt{\xi}$, or $\varphi_c < 38^\circ$ for $\xi = 5/3$. (Taking as before $\Lambda_1 = 30$, this is equivalent to $\alpha_2 > 3\sqrt{30}$.) Clearly, if *critical* is meant to imply marginal stability, it is a misnomer.

Even if the critical state is stable, the yield surface may still be breached at some point while approaching it. Shear bands will then appear, interrupting the process. This is most likely to happen around q 's maximum for the densest sand, because u_c meets the smallest Δ there.

Summary: Sheared granular media, if uniform, will approach the continually deforming critical state that is widely believed to be ideally plastic and on the margin of stability. Employing GSH, a broadly applicable granular theory, to account for it, we not only find the critical state well rendered, also physically transparent, and given by the stable, steady-state solution of the elastic strain.

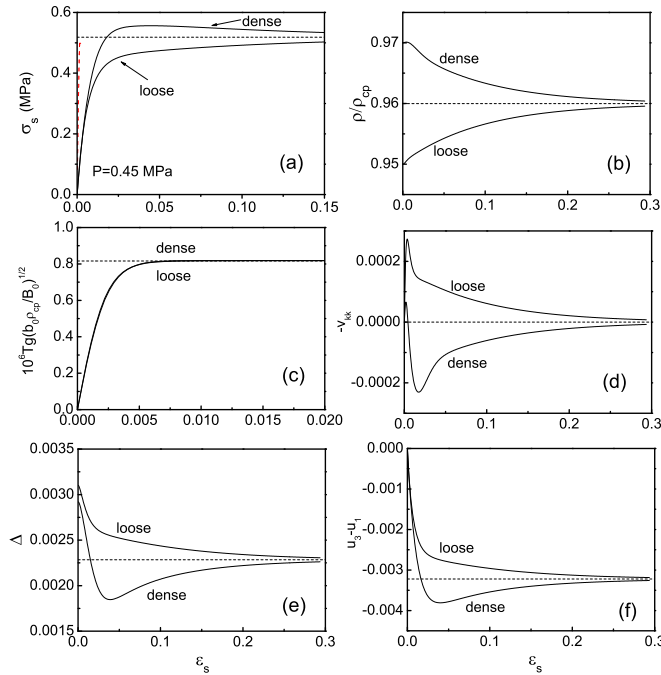


FIG. 2: Variation of (a) the shear stress σ_s , (b) density ρ , (c) granular temperature T_g , (d) volumetric deformation rate v_{kk} , (e) bulk strain Δ , (f) deviatoric elastic strain $u_3 - u_1$, with the total shear strain ε_s , of a initially dense ($\rho_0 = 0.97\rho_{cp}$) and loose ($\rho_0 = 0.95\rho_{cp}$) sample, for fixed P and axial deformation rate. Initially, both σ_s and T_g vanish. Parameters: $B_0 = 7\text{GPa}$, $\xi = 5/3$, $\rho_{cp} = 0.85\rho_{cp}$, $\alpha_2 = 750(1 - \rho/\rho_{cp})$, $\alpha = 0.7$, $\Lambda = 2850(1 - \rho/\rho_{cp})$, $\Lambda/\Lambda_1 = 3.3$, and in SI units: $\gamma = 6 \times 10^5 T_g$, $\eta_g = 0.15 T_g$. (Note $\Lambda = 114$, $\alpha_2 = 30$ for $\rho = 0.96\rho_{cp}$.) The steep linear curve (red) is the purely elastic case.

- [1] A. Schofield and P. Wroth. *Critical State Soil Mechanics*. McGraw-Hill, London, 1968. D.M. Wood. *Soil Behavior and Critical State Soil Mechanics*. Cambridge, 1990.
- [2] G. Gudehus. *Physical Soil Mechanics*. Springer, 2010.
- [3] P. Evesque. *J. Phys. I France*, **7**, 1501 (1997).
- [4] D. Kolymbas. *Introduction to Hypoplasticity*. Balkema, Rotterdam, (2000).
- [5] GDR MiDi. *Euro.Phys.J.*, **E14**, 341 (2004).
- [6] X. Jia, C. Caroli, B. Velicky. *Phys. Rev. Lett.*, **82**, 1863 (1999). *Acta Geotechnica*, **1** 59 (2006).
- [7] Y. Jiang and M. Liu. *Granular Matter*, **11**, 139, 2009.
- [8] Y. Jiang and M. Liu. In D. Kolymbas and G. Viggiani, editors, *Mechanics of Natural Solids*, Springer (2009).
- [9] See [URL] for a discussion of some commonly raised conceptual questions about sand.
- [10] D. O. Krimer, M. Pfitzner, K. Bräuer, Y. Jiang, and M. Liu. *Phys. Rev.*, **E 74** 061310 (2006). K. Bräuer, M. Pfitzner, D. O. Krimer, M. Mayer, Y. Jiang, and M. Liu. *Phys. Rev.*, **E 74**, 061311, (2006). Y. Jiang and M. Liu. *Euro. Phys. J.* **E 22** 255 (2007).
- [11] Y. Jiang and M. Liu. *Phys. Rev. Lett.*, **99** 105501 (2007).
- [12] As α_2 was neglected in [7], we revisit the derivation. Denoting $\partial_t u_{ij} - v_{ij} = X_{ij}$, $\sigma_{ij} = \pi_{ij} - \sigma_{ij}^D$, the entropy production, $R = \sigma_{ij}^D v_{ij} + X_{ij} \pi_{ij} + \dots$, implies $X_{ij} = \beta \pi_{ij}^0 + \beta_1 \delta_{ij} \pi_{\ell\ell} + \tilde{\alpha}_{ijk\ell} v_{k\ell}$ and $\sigma_{ij}^D = \zeta v_{\ell\ell} \delta_{ij} + \eta v_{ij}^0 + \alpha_{ijk\ell} \pi_{k\ell}$, with the Onsager relation, $\tilde{\alpha}_{ijk\ell} = -\alpha_{klij}$. Taking $\alpha_{ijk\ell} = \alpha \delta_{ik} \delta_{j\ell} + (\alpha_2/3) u_{ij}^0 \delta_{k\ell}$, ie. including one more element than in [7], stabilizes the steady-state solution.