

Geometric Algebra Power Theory in Time Domain

Francisco Gil Montoya, Raul Baños, Alfredo Alcayde, Francisco Arrabal-Campos,
and Javier Roldán-Pérez, *Member, IEEE*

Abstract—In this paper, the power flow in electrical systems is modelled in the time domain by using Geometric Algebra and the Hilbert Transform. The use of this mathematical framework overcomes some of the limitations shown by the existing methodologies under distorted supply or unbalanced load. In such cases, the derived instantaneous active current may not be the lowest RMS current in all circuit conditions and could contain higher levels of harmonic distortion than the supply voltage. Moreover, they cannot be applied to single phase systems. The proposed method can be used for sinusoidal and non-sinusoidal power supplies, non-linear loads, single- and multi-phase systems, and it provides meaningful engineering results with a compact formulation. Several examples have been included to prove the validity of the proposed theory.

Index Terms—Time-domain power theories, geometric algebra, Hilbert transform, three phase circuits, circuit theory, Clifford algebra.

I. INTRODUCTION

Pioneer power theories for analysing electrical systems were developed by Steinmetz, Kennelly and Heaviside, among others, by the end of the XIX century [1], [2], [3]. Nowadays, these theories are still a source of discussion and debate concerning their correctness and physical interpretation [4]. Some of them were formulated in the frequency domain, such as those proposed by Budeanu [5] and Czarnecki [6], while other ones were formulated in the time domain, like those presented by Fryze [7], Akagi [8] and Depenbrock [9]. More recently, Lev-Ari [10] and Salmerón [11] have made relevant contributions to the field by using the Hilbert Transform (HT) and tensor algebra, respectively. All these theories are devoted to explain the power-transfer process between complex electrical systems and they establish mathematical concepts associated to fictitious powers (e.g. reactive power), which are of a great value from the engineering point of view. Unfortunately, none of the existing proposals can be used to separate current components in the time domain under any type of voltage distortion, asymmetry, non-linearity of the load or combinations thereof. Some of these limitations have been reported in the literature [4], [12].

In this paper, a new proposal is presented to overcome these limitations by applying two mathematical tools: Geometric Algebra (GA) and the HT. GA is a versatile tool that can be used to model different physical and mathematical problems [13]. The application of GA makes it possible to separate current components that have engineering relevance for systems with any number of phases (including single-phase systems) [14], [15]. The term “engineering relevance” was explicitly used while the term “physical relevance” was avoided, mainly because one of the main applications of power theories is current decomposition for load compensation purposes. Currently,

there is still controversy regarding the physical meaning of these currents, although it is clear that they are relevant for the engineering practice. Current decomposition is addressed from both instantaneous and averaged points of view so that non-necessary currents can be compensated. On the other hand, thanks to the use of the HT [16], [17], the proposed theory can be applied to single-phase systems seamlessly, which is a relevant advantage compared to the existing theories. Mathematical demonstrations are omitted in this paper for the sake of conciseness. The paper includes an overview of GA in order to make the paper self-contained. However, for detailed information about GA and its applications to electrical systems, see [18], [19].

II. GEOMETRIC ALGEBRA AND POWER THEORY

A. Hilbert Transform and Geometric Algebra Fundamentals

Consider a multi-phase system where $u(t)$ is the voltage and $i(t)$ is the current. Both signals are arrays of multiple dimensions associated to a Hilbert space. Current and voltages are periodic and T is the period value. The HT (\mathcal{H}) defined in time domain is the convolution of the Hilbert transformer $1/\pi t$ and a function $f(t)$:

$$\mathcal{H}[f(t)] = \frac{1}{\pi} PV \int_{-\infty}^{+\infty} \frac{f(\tau)}{\tau - t} d\tau \quad (1)$$

where PV is the Cauchy principal value to deal with the singularity at $t = \tau$. The Bracewell criteria is used to select the sign of the transformation [20]. The HT is a crucial tool to calculate quadrature signals and impedances in the time domain [10]. In fact, it can be demonstrated that HT delays positive frequency components (fundamental and harmonics) by $\pi/2$ [16]. In general, $\|\mathcal{H}[f(t)]\| \neq \|f(t)\|$ because of the presence of the dc component [21]. By using the HT, voltages and currents in electrical circuits are usually converted into analytic functions in the complex domain:

$$\vec{u}(t) = u(t) + j\mathcal{H}[u(t)] \quad (2)$$

$$\vec{i}(t) = i(t) + j\mathcal{H}[i(t)] \quad (3)$$

Note that the use of a complex algebra is not a necessary condition and other algebras can be used as well.

Consider now an orthonormal base $\sigma = \{\sigma_1, \sigma_2, \dots, \sigma_n\}$ defined for a vector space in \mathcal{R}^n . Then, it is possible to establish a new geometric vector space \mathcal{G}^n with a bilinear operation. Under these assumptions, a vector can be represented as:

$$\mathbf{a} = \sum_n a_n \sigma_n = a_1 \sigma_1 + \dots + a_n \sigma_n \quad (4)$$

Typically, the coefficients a_n are real numbers, but they could be complex numbers or even vectors from another \mathcal{G}^m space.

In this new space, the geometric product between two vectors (\mathbf{a} and \mathbf{b}) can be defined as:

$$\mathbf{M} = \mathbf{ab} = \mathbf{a} \cdot \mathbf{b} + \mathbf{a} \wedge \mathbf{b} \quad (5)$$

which can be seen as the sum of the traditional scalar (or inner) product plus the so-called wedge (or Grassmann) product [13]. The latter fulfils the following property:

$$\mathbf{a} \wedge \mathbf{b} = -\mathbf{b} \wedge \mathbf{a} \quad (6)$$

This new geometrical entity is commonly known as *bivector* and it cannot be found in traditional linear algebra [13].

B. Geometric Power in Time Domain

1) *Linear loads*: For a general n -phase electrical system, an array containing the instantaneous voltages can be defined as follows:

$$\mathbf{u}(t) = [u_1(t), u_2(t), \dots, u_n(t)] \quad (7)$$

where each voltage is referred to a virtual star point that might not be the same as the neutral conductor. An array representing node injected currents is also defined:

$$\mathbf{i}(t) = [i_1(t), i_2(t), \dots, i_n(t)] \quad (8)$$

In order to simplify the notation, $u_k(t) = u_k$ and $i_k(t) = i_k$. The expression for the instantaneous power consumed by the circuit is widely known, and it can be calculated as:

$$p(t) = u_1 i_1 + u_2 i_2 + \dots + u_n i_n \quad (9)$$

which represents the inner product between $\mathbf{u}(t)$ and $\mathbf{i}(t)$.

For a linear load, $\mathbf{u}(t)$ and $\mathbf{i}(t)$ can be represented in the GA domain as the geometric vectors \mathbf{u} and \mathbf{i} , respectively, by means of a $2n$ dimensional space with base vectors $\boldsymbol{\sigma} = \{\boldsymbol{\sigma}_1, \boldsymbol{\sigma}_{\hat{1}}, \boldsymbol{\sigma}_2, \boldsymbol{\sigma}_{\hat{2}}, \dots, \boldsymbol{\sigma}_n, \boldsymbol{\sigma}_{\hat{n}}\}$, where n is the number of phases:

$$\begin{aligned} \mathbf{u} &= u_1 \boldsymbol{\sigma}_1 + \mathcal{H}[u_1] \boldsymbol{\sigma}_{\hat{1}} + \dots + u_n \boldsymbol{\sigma}_n + \mathcal{H}[u_n] \boldsymbol{\sigma}_{\hat{n}} \\ \mathbf{i} &= i_1 \boldsymbol{\sigma}_1 + \mathcal{H}[i_1] \boldsymbol{\sigma}_{\hat{1}} + \dots + i_n \boldsymbol{\sigma}_n + \mathcal{H}[i_n] \boldsymbol{\sigma}_{\hat{n}} \end{aligned} \quad (10)$$

This expression represents a multidimensional analytic signal in the GA domain. The use of the HT in (10) becomes essential to overcome the shortcomings of some existing time domain power theories [4], [12], [22] and it is one of the main contribution of this work. It is strongly based on the works of Nowomiejski, Saitou and Lev-Ari [17], [16], [10]. Note that the use of the HT is mandatory for single-phase calculations, but it can be omitted in the case of systems with more than one phase provided that an instantaneous approach is used, as in the *IRP* theory.

The norms of the geometric voltage and current vectors are:

$$\begin{aligned} \|\mathbf{u}\| &= \sqrt{\mathbf{u}\mathbf{u}} = \sqrt{\mathbf{u} \cdot \mathbf{u}} = \sqrt{\sum_{k=1}^n u_k^2 + \mathcal{H}^2[u_k]} \\ \|\mathbf{i}\| &= \sqrt{\mathbf{i}\mathbf{i}} = \sqrt{\mathbf{i} \cdot \mathbf{i}} = \sqrt{\sum_{k=1}^n i_k^2 + \mathcal{H}^2[i_k]} \end{aligned} \quad (11)$$

The instantaneous geometric power is defined as the product of voltage and current vectors, thus

$$\mathbf{M} = \mathbf{ui} = \mathbf{u} \cdot \mathbf{i} + \mathbf{u} \wedge \mathbf{i} \quad (12)$$

Similar expression have been obtained in the literature by using other modelling tools (complex numbers, matrix algebra, vector calculus, quaternions, tensors, etc.). However, this one is more compact and unifies the application of GA tools, which can reduce the complexity of calculations. This expression consists of two terms that have a different nature, i.e., a scalar and a bivector term. This mathematical entity is called a multivector and it can be written as

$$\mathbf{M} = M_p + \mathbf{M}_q \quad (13)$$

where

$$\begin{aligned} M_p &= \mathbf{u} \cdot \mathbf{i} = \sum_{k=1}^n u_k i_k + \mathcal{H}[u_k] \mathcal{H}[i_k] \\ &= u_1 i_1 + \mathcal{H}[u_1] \mathcal{H}[i_1] + \dots + u_n i_n + \mathcal{H}[u_n] \mathcal{H}[i_n] \\ \mathbf{M}_q &= \mathbf{u} \wedge \mathbf{i} = \begin{vmatrix} \boldsymbol{\sigma}_1 & \boldsymbol{\sigma}_{\hat{1}} & \dots & \boldsymbol{\sigma}_n & \boldsymbol{\sigma}_{\hat{n}} \\ u_1 & \mathcal{H}[u_1] & \dots & u_n & \mathcal{H}[u_n] \\ i_1 & \mathcal{H}[i_1] & \dots & i_n & \mathcal{H}[i_n] \end{vmatrix} = \\ &= (u_1 \mathcal{H}[i_1] - \mathcal{H}[u_1] i_1) \boldsymbol{\sigma}_{1\hat{1}} + (u_1 i_2 - u_2 i_1) \boldsymbol{\sigma}_{12} \\ &+ \dots + (u_n \mathcal{H}[i_n] - \mathcal{H}[u_n] i_n) \boldsymbol{\sigma}_{n\hat{n}} \end{aligned} \quad (14)$$

The term M_p is the scalar part and it includes the instantaneous active power $p(t)$. It will be referred to as *parallel geometric power*. The term \mathbf{M}_q is the bivector part and will be named quadrature geometric power. It comprises the well-known *instantaneous reactive power* in the *IRP* theory and its further refinements [23], [24], [25], [11]. In (15), the determinant can be calculated by using Leibniz or Laplace formula.

The instantaneous geometric power \mathbf{M} can also be written in terms of a commutative and anti-commutative part:

$$M_p = \frac{1}{2} (\mathbf{ui} + \mathbf{i}\mathbf{u}) = \frac{1}{2} (\mathbf{M} + \mathbf{M}^\dagger) \quad (15)$$

$$\mathbf{M}_q = \frac{1}{2} (\mathbf{ui} - \mathbf{i}\mathbf{u}) = \frac{1}{2} (\mathbf{M} - \mathbf{M}^\dagger) \quad (16)$$

where \mathbf{M}^\dagger is the reverse of the instantaneous geometric power. It is worth noting that no matrices nor tensors are used in the definitions of powers presented in (12)–(16). This leads to a very compact formulation that simplifies mathematical expressions.

2) *Non-linear loads*: If the load is nonlinear, the current $\mathbf{i}(t)$ has additional harmonics that are not present in the voltage source. These harmonics are included in $\mathbf{i}_\perp(t)$ and some authors refers to it as “out-of-band” current [10]. The total current can then be expressed as:

$$\mathbf{i}(t) = \mathbf{i}_\parallel(t) + \mathbf{i}_\perp(t) \quad (17)$$

where

$$\begin{aligned} i_{\parallel}(t) &= [i_{1\parallel}(t), i_{2\parallel}(t), \dots, i_{n\parallel}(t)] \\ i_{\perp}(t) &= [i_{1\perp}(t), i_{2\perp}(t), \dots, i_{n\perp}(t)] \end{aligned} \quad (18)$$

Therefore, the geometric transformation should include this new current component. To this end, the dimension of the space must be increased by a number equal to the total number of phases. Therefore, the current and voltage expressions for a non-linear circuit becomes:

$$\begin{aligned} \mathbf{u} &= u_1 \boldsymbol{\sigma}_1 + \mathcal{H}[u_1] \boldsymbol{\sigma}_{\hat{1}} + \dots + u_n \boldsymbol{\sigma}_n + \mathcal{H}[u_n] \boldsymbol{\sigma}_{\hat{n}} \\ \mathbf{i} &= i_{1\parallel} \boldsymbol{\sigma}_1 + \mathcal{H}[i_{1\parallel}] \boldsymbol{\sigma}_{\hat{1}} + i_{1\perp} \boldsymbol{\sigma}_{\bar{1}} + \dots \\ &\quad + i_{n\parallel} \boldsymbol{\sigma}_n + \mathcal{H}[i_{n\parallel}] \boldsymbol{\sigma}_{\hat{n}} + i_{n\perp} \boldsymbol{\sigma}_{\bar{n}} = \mathbf{i}_{\parallel} + \mathbf{i}_{\perp} \end{aligned} \quad (19)$$

where $i_{k\parallel}$ and $i_{k\perp}$ are the part of the k -th harmonic current present and not present in the voltage, respectively. The dimensionality of the geometric space needs to be increased, so the basis is now $\boldsymbol{\sigma} = \{\boldsymbol{\sigma}_1, \boldsymbol{\sigma}_{\hat{1}}, \boldsymbol{\sigma}_{\bar{1}}, \boldsymbol{\sigma}_2, \dots, \boldsymbol{\sigma}_{\hat{n}}\}$. From a general point of view, a base with $3n$ dimensions should be required, where n is the number of phases. In this case, the geometric apparent power becomes:

$$\begin{aligned} \mathbf{M} &= \mathbf{u}\mathbf{i} = \mathbf{u}(\mathbf{i}_{\parallel} + \mathbf{i}_{\perp}) \\ &= \mathbf{M}_{\parallel} + \mathbf{M}_{\perp} = M_p + M_q + M_{\perp} \end{aligned} \quad (20)$$

It can be seen that the power consist of a ‘‘in-band’’ geometric power and another ‘‘out-of-band’’ geometric power. The former includes the terms already present in (13).

C. Current Decomposition

If $i(t)$ is the instantaneous current demanded by a load, it can be separated into meaningful engineering components by manipulating (12) or (20) (depending on the nature of the load). For a linear load, left multiplying by the inverse of the voltage vector leads to:

$$\mathbf{u}^{-1} \mathbf{M} = \mathbf{u}^{-1} \mathbf{u}\mathbf{i} = \mathbf{i} \quad (21)$$

since $\mathbf{u}^{-1} \mathbf{u} = 1$.

The inverse of a vector in the geometric domain is:

$$\mathbf{u}^{-1} = \frac{\mathbf{u}}{\|\mathbf{u}\|^2} \quad (22)$$

which can be used in (21) to find the current decomposition. By replacing (13) in (21):

$$\begin{aligned} \mathbf{i} &= \mathbf{u}^{-1} \mathbf{M} = \frac{\mathbf{u}}{\|\mathbf{u}\|^2} \mathbf{M} = \frac{\mathbf{u}}{\|\mathbf{u}\|^2} (M_p + M_q) \\ &= \frac{\mathbf{u}}{\|\mathbf{u}\|^2} M_p + \frac{\mathbf{u}}{\|\mathbf{u}\|^2} M_q = \mathbf{i}_p + \mathbf{i}_q \end{aligned} \quad (23)$$

The term \mathbf{i}_p is commonly known as *instantaneous geometric parallel current*, while the term \mathbf{i}_q is the *instantaneous geometric quadrature current* and is orthogonal to \mathbf{i}_p . It should be noted that \mathbf{i}_q is not a pure *reactive current* since it is not always related to energy oscillations in reactive elements like inductors or capacitors [26]. In fact, it includes the effects generated by asymmetries of voltage sources and load unbalance.

The Fryze current can also be defined by using GA:

$$\mathbf{i}_F = \frac{\bar{M}_p}{\|\bar{\mathbf{u}}\|^2} \mathbf{u} \quad (24)$$

where \bar{M}_p is the mean value of the geometric parallel power and $\|\bar{\mathbf{u}}\|$ is the RMS value of the geometric voltage. It can be readily demonstrated that $\bar{M}_p = 2P$, where P is the active power. Moreover, the reactive current defined by Budeanu and supported by Willems [27], Lev-Ari [10] and Jeltsema [28] (among others) is:

$$\mathbf{i}_B = \frac{\bar{M}_q}{\|\bar{\mathbf{u}}\|^2} \mathcal{H}[\mathbf{u}] \quad (25)$$

where \bar{M}_q is the mean value of the quadrature geometric power. Similarly, $\bar{M}_q = 2Q$, where Q is the reactive power defined by Budeanu. Therefore, the current expression can be fully decomposed as follows:

$$\mathbf{i} = \mathbf{i}_p + \mathbf{i}_q = \mathbf{i}_F + \mathbf{i}_f + \mathbf{i}_B + \mathbf{i}_b \quad (26)$$

where \mathbf{i}_f is the Fryze complementary current required to conform the parallel current. Similarly, \mathbf{i}_b is the Budeanu complementary current required to conform the quadrature current. The asymmetry or unbalance current is included in \mathbf{i}_f and \mathbf{i}_b .

In the case of a non-linear load, only \mathbf{M}_{\parallel} should be used in (23) for current decomposition purposes. The total current is then

$$\begin{aligned} \mathbf{i} &= \mathbf{i}_{\parallel} + \mathbf{i}_{\perp} = \mathbf{i}_p + \mathbf{i}_q + \mathbf{i}_{\perp} \\ &= \mathbf{i}_F + \mathbf{i}_f + \mathbf{i}_B + \mathbf{i}_b + \mathbf{i}_{\perp} \end{aligned} \quad (27)$$

The use of GA allows a natural decomposition of currents without requiring additional tools such as Clarke or Park transformations. The proposed methodology can be seamlessly applied to any distorted system since no constraints have been imposed to the waveforms of voltages and currents in this regard. This theory can be applied to any circuit with an arbitrary number of phases, including single-phase systems. This cannot be achieved by using other theories such as the *IRP* and it is a relevant feature of this proposal.

The inverse transformation from the geometric to the time domain for any current component in \mathbf{i}_{\parallel} is:

$$i(t) = \sum_{k=1}^n [\hat{i}]_k \quad (28)$$

where $[\cdot]_k$ refers to the k -th term of the geometric vector of the parallel current \mathbf{i}_{\parallel} .

D. Properties of \mathbf{M} and \mathbf{i}

The instantaneous geometric power \mathbf{M} and the instantaneous geometric current \mathbf{i} fulfil a number of mathematical properties that reinforce the geometric interpretation of the proposed theory. These are explained below.

1) *Orthogonality of the Components of \mathbf{M}* : The parallel geometric power M_p is a scalar number, while the quadrature geometric power M_q is a bivector. Therefore, their internal product is zero and this implies orthogonality:

$$M_p \cdot M_q = 0 \quad (29)$$

In addition, the norm of the instantaneous geometric power is:

$$\|\mathbf{M}\| = \sqrt{\langle \mathbf{M}\mathbf{M}^\dagger \rangle_0} = \|\mathbf{u}\| \|\mathbf{i}\| \quad (30)$$

which can further be developed, yielding:

$$\|\mathbf{M}\|^2 = \left\langle (M_p + M_q)(M_p + M_q)^\dagger \right\rangle_0 = \|M_p\|^2 + \|M_q\|^2$$

E. Orthogonality of Current Components

As shown in (23), the instantaneous geometric current i can be decomposed into two vectors, i_p and i_q . Based on (29), these vectors are orthogonal:

$$i_p \cdot i_q = \frac{\mathbf{u}}{\|\mathbf{u}\|^2} M_p \cdot \frac{\mathbf{u}}{\|\mathbf{u}\|^2} M_q = \frac{1}{\|\mathbf{u}\|^2} M_p \cdot M_q = 0 \quad (31)$$

Also, it can be demonstrated that all the terms in (26) and (27) are also orthogonal to each other.

III. INSTANTANEOUS GEOMETRIC IMPEDANCE

For a linear load, the instantaneous relationship between in-band components of phase voltages and currents can be defined as the *instantaneous geometric impedance*. For a phase k , the current and voltage can be represented either in Cartesian or polar coordinates as [18]:

$$\begin{aligned} [\mathbf{u}]_k &= u_k \boldsymbol{\sigma}_k + \mathcal{H}[u_k] \boldsymbol{\sigma}_{\hat{k}} = U e^{\varphi_k^v \boldsymbol{\sigma}_{k\hat{k}}} \boldsymbol{\sigma}_k \\ [\mathbf{i}]_k &= i_k \boldsymbol{\sigma}_k + \mathcal{H}[i_k] \boldsymbol{\sigma}_{\hat{k}} = I e^{\varphi_k^i \boldsymbol{\sigma}_{k\hat{k}}} \boldsymbol{\sigma}_k \end{aligned} \quad (32)$$

where $e^{\varphi_k^v \boldsymbol{\sigma}_{k\hat{k}}}$ is a *rotor*, which is used performs a rotation of φ degrees to vectors in the Argand plane $\boldsymbol{\sigma}_k - \boldsymbol{\sigma}_{\hat{k}}$. Therefore:

$$\begin{aligned} Z_k &= [\mathbf{u}]_k [\mathbf{i}]_k^{-1} = U e^{\varphi_k^v \boldsymbol{\sigma}_{k\hat{k}}} \boldsymbol{\sigma}_k I^{-1} e^{\varphi_k^i \boldsymbol{\sigma}_{k\hat{k}}} \boldsymbol{\sigma}_k \\ &= \frac{U}{I} e^{(\varphi_k^v - \varphi_k^i) \boldsymbol{\sigma}_{k\hat{k}}} = Z_k \angle \varphi_k \\ &= R_k + X_k \boldsymbol{\sigma}_{k\hat{k}} \end{aligned} \quad (33)$$

In the above expression, $Z_k = U/I$ is the instantaneous impedance module, $\varphi_k = \varphi_k^v - \varphi_k^i$ is the instantaneous phase, $R_k = Z_k \cos \varphi_k$ represents the instantaneous resistance and $X_k = Z_k \sin \varphi_k$ is the instantaneous reactance.

IV. EXAMPLE I: SINGLE-PHASE CIRCUIT

A. Example Overview and Apparent Power Calculation

Fig. 1 shows two simple circuits that are commonly used in the literature to highlight that traditional power theories do not provide satisfactory results for apparent power calculations. For a non-sinusoidal voltage supply such as $u(t) = 100\sqrt{2}(\sin t + \sin 3t)$ the reactive power components (in the Budeanu sense) produced by each harmonic are equal, but with opposite signs. Therefore, the total average reactive power is zero in both cases.

This problem has already been solved by using GA in the frequency domain [29]. It was proven that geometric apparent power components can be clearly identified and, therefore, the geometric apparent power value for each of the circuits in Fig. 1 is different. Unfortunately, the use of complex algebra does not allow finding the interaction between voltage and current harmonics of different frequency. This is the root cause to find that the circuit a) can be completely compensated by passive elements, but not b) that needs an active compensator to achieve unity power factor. In this paper, the same circuit will be solved, but in the time domain.

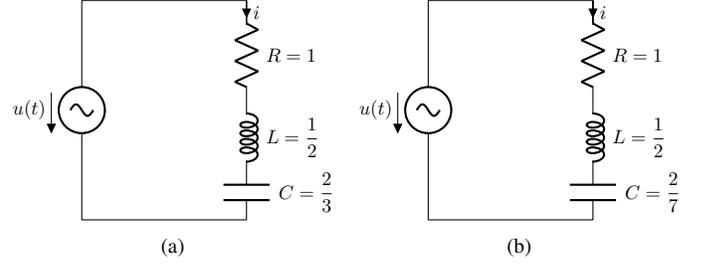


Figure 1. The RLC circuits used for Example I.

The geometric voltage and current vectors in the time domain are obtained by using (10), yielding:

$$\begin{aligned} \mathbf{u} &= u(t) \boldsymbol{\sigma}_1 + \mathcal{H}[u(t)] \boldsymbol{\sigma}_{\hat{1}} \\ \mathbf{i} &= i(t) \boldsymbol{\sigma}_1 + \mathcal{H}[i(t)] \boldsymbol{\sigma}_{\hat{1}} \end{aligned} \quad (34)$$

The current waveforms for circuits (a) and (b) are:

$$i_a = 50\sqrt{2}(\sin t + \cos t + \sin 3t - \cos 3t) \quad (35)$$

$$i_b = \sqrt{2}(10 \sin t + 30 \cos t + 90 \sin 3t - 30 \cos 3t) \quad (36)$$

From now on, sub-indexes a and b stand for circuit (a) and (b), respectively. The voltage and currents in the geometric domain are:

$$\begin{aligned} \mathbf{u} &= 100\sqrt{2}(\sin t + \sin 3t) \boldsymbol{\sigma}_1 + 100\sqrt{2}(\cos t + \cos 3t) \boldsymbol{\sigma}_{\hat{1}} \\ i_a &= 50\sqrt{2}(\sin t + \cos t + \sin 3t - \cos 3t) \boldsymbol{\sigma}_1 \\ &\quad + 50\sqrt{2}(\cos t - \sin t + \cos 3t + \sin 3t) \boldsymbol{\sigma}_{\hat{1}} \\ i_b &= \sqrt{2}(10 \sin t + 30 \cos t + 90 \sin 3t - 30 \cos 3t) \boldsymbol{\sigma}_1 \\ &\quad + \sqrt{2}(10 \cos t - 30 \sin t + 90 \cos 3t + 30 \sin 3t) \boldsymbol{\sigma}_{\hat{1}} \end{aligned}$$

The geometric apparent power can be calculated with (12), yielding.

$$\begin{aligned} M_a &= M_p^a + M_q^a = \underbrace{20,000(1 + \sin 2t + \cos 2t)}_{M_p^a} \\ M_b &= M_p^b + M_q^b = \underbrace{20,000 + 12,000 \sin 2t + 20,000 \cos 2t}_{M_p^b} \\ &\quad - \underbrace{16,000 \sin 2t \boldsymbol{\sigma}_{\hat{1}\hat{1}}}_{M_q^b} \end{aligned}$$

In both cases, the active power is $P = \bar{M}_p/2 = 10,000$ W. However, for the quadrature geometric power $M_q^a = 0$ while $M_q^b \neq 0$. From a practical point of view, this implies that circuit (b) would need active filtering elements in order to achieve unit power factor. In both circuits the reactive power (in the Budeanu sense) is $Q = \bar{M}_q/2 = 0$, so it is not possible to know the eventual passive compensation elements in the time domain. A frequency-domain approach should be used to calculate the contribution of every harmonic (one by one) to the geometric apparent power [29].

B. Current Decomposition

The current can be decomposed by using the expressions (23)–(26). In order to use them, the inverse of the voltage

vector should be calculated:

$$\mathbf{u}^{-1} = \frac{\mathbf{u}}{\|\mathbf{u}\|^2} = \frac{\sin t}{100\sqrt{2}}\boldsymbol{\sigma}_1 + \frac{\cos 2t}{200\sqrt{2}\cos t}\boldsymbol{\sigma}_1\hat{1}$$

The current components obtained by using this procedure are shown in Table I. Note that only the norm of $\boldsymbol{\sigma}_1 = \boldsymbol{\sigma}_1\hat{1}$ is This composition clearly highlights the differences between the two circuits. First, it can be seen that even if the module is the same, the waveforms differ between them. The parallel current i_p for circuit (a) is slightly slower compared to that of circuit (b). The Fryze current i_F is the same for both circuits because the active power consumption P is also the same. In both circuits the current i_B is zero. This confirms that it is not possible to compensate their current in the time domain by using only passive elements.

C. Geometric Impedance Calculation

Currents in the domain can be reconstructed by using (28). The last column of Table I shows the module of this current. Fig. 2 shows the current components for both circuits. The instantaneous impedance of the circuit can be calculated by using (33):

$$\mathbf{Z} = \mathbf{u}\mathbf{i}^{-1} = \mathbf{u} \frac{\mathbf{i}}{\|\mathbf{i}\|^2} = \frac{\mathbf{M}}{\|\mathbf{i}\|^2}$$

Therefore, for circuits a) and b), it follows that

$$\mathbf{Z}_a = 1 + \frac{\cos 2t}{1 + \sin 2t}$$

$$\mathbf{Z}_b = 1 + \frac{5 \cos 2t}{5 + 3 \sin 2t} - \frac{4 \sin 2t}{5 + 3 \sin 2t} \boldsymbol{\sigma}_1\hat{1}$$

The two circuits have different behaviours because their instantaneous impedances are also different. It can be seen that circuit a) does not present instantaneous reactance, while circuit b) does. The resistive parts also differs.


V. EXAMPLE II: THREE-PHASE CIRCUIT

Fig. 3 shows a circuit that has been used by several authors to highlight the weaknesses of the *IRP* theory [12], [4]. First, only instantaneous values are used in the *IRP* theory and, therefore, some results might be considered senseless or even erroneous. However, this theory is widely used for instantaneous current compensation. If the GAPoT theory is used but omitting the HT (10) representation, results will be similar to those obtained by using *IRP* theory. This fact suggests that cross-product theories are a subset of the geometric algebra formulation, where tradition cross vector product is used instead of the more general exterior product. Unfortunately, cross product can only be used only in three dimension spaces, which limits its applicability. This is not the case for GAPoT. It can be used for any number of phases. For a three-phase system, the voltage and current are


$$\mathbf{u} = u_R\boldsymbol{\sigma}_1 + u_S\boldsymbol{\sigma}_2 + u_T\boldsymbol{\sigma}_3$$

$$\mathbf{i} = i_R\boldsymbol{\sigma}_1 + i_S\boldsymbol{\sigma}_2 + i_T\boldsymbol{\sigma}_3$$

so that, by applying again (12), a similar procedure would be performed as in the previous single-phase example. However, if the complete transformation is used and the HT is included,

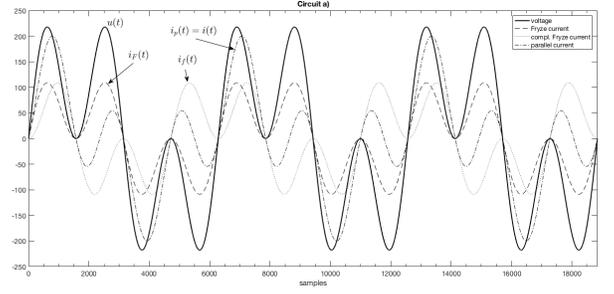

(a) Circuit a

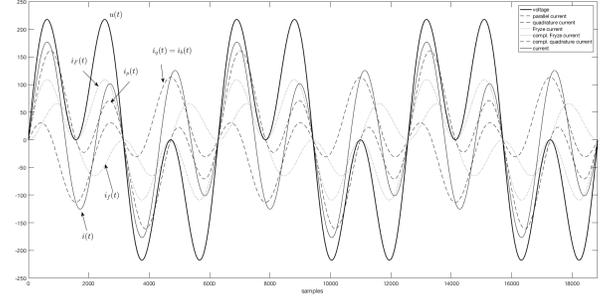

(b) Circuit b

Figure 2. Current in time domain for circuits in Fig. 1.

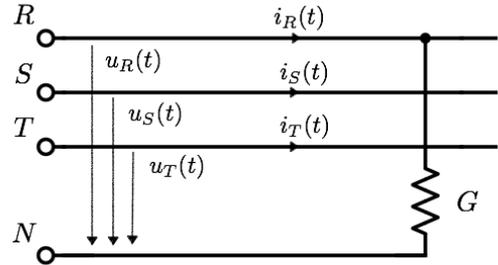


Figure 3. Unbalanced three-phase four wire circuit

the new results are in line with what is expected from an electrical point of view, i.e. the minimal current (as in the Fryze sense) can be obtained. In the circuit of Fig. 3, the supply voltage is balanced and sinusoidal:

$$u_R(t) = \sqrt{2}U \cos \omega t$$

$$u_S(t) = \sqrt{2}U \cos (\omega t - 120)$$

$$u_T(t) = \sqrt{2}U \cos (\omega t + 120)$$

Only the phase R has a current value different to zero, thus:

$$i_R(t) = \sqrt{2}GU \cos \omega t$$

		vector		
		σ_1	$\sigma_{\hat{1}}$	$\ \sigma_1\ $
i_p	a)	$\sqrt{2}(50 \sin t + 50 \cos t + 50 \sin 3t - 50 \cos 3t)$	$\sqrt{2}(50 \cos t - 50 \sin t + 50 \cos 3t + 50 \sin 3t)$	100.00
	b)	$\sqrt{2}(50 \sin t + 30 \cos t + 50 \sin 3t - 30 \cos 3t)$	$\sqrt{2}(50 \cos t - 30 \sin t + 50 \cos 3t + 30 \sin 3t)$	82.45
i_q	a)	0.00	0.00	0.00
	b)	$\sqrt{2}(-40 \sin t + 40 \sin 3t)$	$\sqrt{2}(-40 \cos t + 40 \cos 3t)$	56.56
i_F	a)	$\sqrt{2}(50 \sin t + 50 \sin 3t)$	$\sqrt{2}(50 \cos t + 50 \cos 3t)$	70.71
	b)	$\sqrt{2}(50 \sin t + 50 \sin 3t)$	$\sqrt{2}(50 \cos t + 50 \cos 3t)$	70.71
i_f	a)	$\sqrt{2}(50 \cos t - 50 \cos 3t)$	$\sqrt{2}(-50 \sin t + 50 \sin 3t)$	70.71
	b)	$\sqrt{2}(30 \cos t - 30 \cos 3t)$	$\sqrt{2}(-30 \sin t + 30 \sin 3t)$	42.42
i_B	a)	0.00	0.00	0.00
	b)	0.00	0.00	0.00
i_b	a)	0.00	0.00	0.00
	b)	$\sqrt{2}(-40 \sin t + 40 \sin 3t)$	$\sqrt{2}(-40 \cos t + 40 \cos 3t)$	56.56
i	a)	$\sqrt{2}(50 \sin t + 50 \cos t + 50 \sin 3t - 50 \cos 3t)$	$\sqrt{2}(50 \cos t - 50 \sin t + 50 \cos 3t + 50 \sin 3t)$	100.00
	b)	$\sqrt{2}(10 \sin t + 30 \cos t + 90 \sin 3t - 30 \cos 3t)$	$\sqrt{2}(10 \cos t - 30 \sin t + 90 \cos 3t + 30 \sin 3t)$	100.00

Table 1

CURRENT DECOMPOSITION FOR CIRCUIT IN FIGURE 1.

Based on this information, the instantaneous voltage and current geometric vectors are provided:

$$\begin{aligned} \mathbf{u} &= \sqrt{2}U[\cos \omega t \sigma_1 - \sin \omega t \sigma_{\hat{1}} + \cos(\omega t - 120) \sigma_2 \\ &\quad - \sin(\omega t - 120) \sigma_{\hat{2}} + \cos(\omega t + 120) \sigma_3 \\ &\quad - \sin(\omega t + 120) \sigma_{\hat{3}}] \end{aligned}$$

$$\mathbf{i} = \sqrt{2}GU[\cos \omega t \sigma_1 - \sin \omega t \sigma_{\hat{1}}]$$

which leads to the apparent geometric power:

$$\begin{aligned} \mathbf{M} = \mathbf{u}\mathbf{i} &= 2GU^2[1 - \cos \omega t \cos(\omega t - 120) \sigma_{12} \\ &\quad + \cos \omega t \sin(\omega t + 120) \sigma_{1\hat{2}} - \cos \omega t \cos(\omega t + 120) \sigma_{13} \\ &\quad + \cos \omega t \sin(\omega t + 120) \sigma_{1\hat{3}} - \sin \omega t \cos(\omega t - 120) \sigma_{\hat{1}2} \\ &\quad + \sin \omega t \sin(\omega t - 120) \sigma_{\hat{1}\hat{2}} - \sin \omega t \cos(\omega t + 120) \sigma_{\hat{1}3} \\ &\quad + \sin \omega t \sin(\omega t + 120) \sigma_{\hat{1}\hat{3}}] \end{aligned}$$

In the above expression, the parallel power is constant and its value is $M_p = 2GU^2$. This is consistent with the expected results, since it is a purely resistive circuit that demands an active power equal to $P = GU^2 = \bar{M}_p/2$. The other terms are bivector elements related to the unbalance components of the load. Note that the terms $\sigma_{1\hat{1}}$, $\sigma_{2\hat{2}}$ and $\sigma_{3\hat{3}}$ are not present in the expression. This means that there is no reactive power in the Budeanu sense, and this is reasonable since there are no inductive nor capacitive elements. Once the geometric power has been calculated, the current decomposition is obtained

according to (23)-(26). Considering that $\|\mathbf{u}\|^2 = 6U^2$, then

$$\begin{aligned} \mathbf{i}_p &= \frac{\mathbf{u}}{\|\mathbf{u}\|^2} M_p = \frac{G}{3} \mathbf{u} \\ &= \sqrt{2} \frac{GU}{3} [\cos \omega t \sigma_1 - \sin \omega t \sigma_{\hat{1}} + \cos(\omega t - 120) \sigma_2 \\ &\quad - \sin(\omega t - 120) \sigma_{\hat{2}} + \cos(\omega t + 120) \sigma_3 \\ &\quad - \sin(\omega t + 120) \sigma_{\hat{3}}] \end{aligned}$$

$$\begin{aligned} \mathbf{i}_q &= \frac{\mathbf{u}}{\|\mathbf{u}\|^2} \mathbf{M}_q = \mathbf{i} - \mathbf{i}_p = \\ &= \sqrt{2} \frac{GU}{3} [2 \cos \omega t \sigma_1 - 2 \sin \omega t \sigma_{\hat{1}} - \cos(\omega t - 120) \sigma_2 \\ &\quad + \sin(\omega t - 120) \sigma_{\hat{2}} - \cos(\omega t + 120) \sigma_3 \\ &\quad + \sin(\omega t + 120) \sigma_{\hat{3}}] \end{aligned}$$

For this example, the Fryze current matches the parallel current ($i_p = i_F$). Therefore, $i_f = 0$. Also, there is no reactive (in the Budeanu sense) current since $\bar{M}_q = 0$, and therefore $i_B = 0$. It can be seen that $i_b = i_q$. This means that this current contains all the asymmetrical components, which include both zero sequence current i_0 and negative sequence current i_- :

$$\mathbf{i}_q = \mathbf{i}_b = \mathbf{i}_0 + \mathbf{i}_-$$

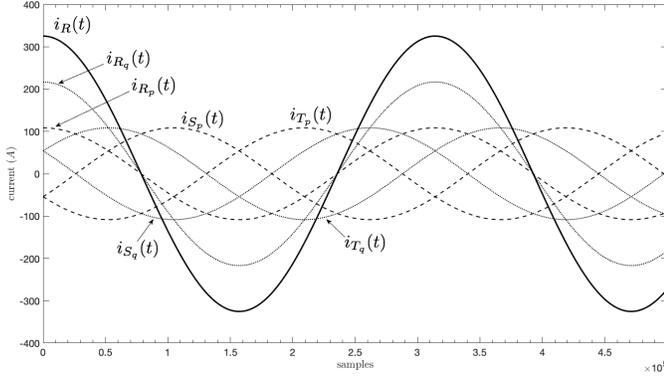


Figure 4. Currents decomposition for three-phase circuit

$$\begin{aligned}
 i_0 &= \sqrt{2} \frac{GU}{3} [\cos \omega t \sigma_1 - \sin \omega t \sigma_1 + \cos \omega t \sigma_2 \\
 &\quad - \sin \omega t \sigma_2 + \cos \omega t \sigma_3 - \sin \omega t \sigma_3] \\
 i_- &= \sqrt{2} \frac{GU}{3} [\cos \omega t \sigma_1 - \sin \omega t \sigma_1 + \cos (\omega t + 120) \sigma_2 \\
 &\quad - \sin (\omega t + 120) \sigma_2 + \cos (\omega t - 120) \sigma_3 \\
 &\quad - \sin (\omega t - 120) \sigma_3]
 \end{aligned}$$

Fig. 4 shows the current decomposition for this problem, considering $U = 230$ V, $\omega = 1$ rad/s and $G = 1$ mho. The time domain current can be obtained by applying (28) to the geometric vector

$$\begin{aligned}
 i_p(t) &= \begin{bmatrix} i_{R_p}(t) \\ i_{S_p}(t) \\ i_{T_p}(t) \end{bmatrix} = \frac{\sqrt{2}GU}{3} \begin{bmatrix} \cos \omega t \\ \cos (\omega t - 120) \\ \cos (\omega t + 120) \end{bmatrix} \\
 i_q(t) &= \begin{bmatrix} i_{R_q}(t) \\ i_{S_q}(t) \\ i_{T_q}(t) \end{bmatrix} = \frac{\sqrt{2}GU}{3} \begin{bmatrix} 2 \cos \omega t \\ -\cos (\omega t - 120) \\ -\cos (\omega t + 120) \end{bmatrix} \\
 &= \underbrace{\frac{\sqrt{2}GU}{3} \begin{bmatrix} \cos \omega t \\ \cos \omega t \\ \cos \omega t \end{bmatrix}}_{i_0(t)} + \underbrace{\frac{\sqrt{2}GU}{3} \begin{bmatrix} \cos \omega t \\ \cos (\omega t + 120) \\ \cos (\omega t - 120) \end{bmatrix}}_{i_-(t)}
 \end{aligned}$$

VI. CONCLUSIONS

In this work, the power definitions and operations for multi-phase electrical circuits in time domain has been presented by using geometric algebra and Hilbert transform. It has been shown that the use of these tools greatly simplify mathematical expressions, leading to a very compact formulation. Moreover, it establishes a general and powerful framework to apply under any supply or load condition. The proposed formulation can be applied to both single- and multi-phase systems, and it provides a robust interpretation that is in good agreement with electrical engineering evidences. To the best of our knowledge, no other power theory is able of achieving these results. Current decomposition can be easily carried out as a natural inverse operation and the results highlight the validity of the methodology through test circuits previously proposed in the literature. Further research will be focus on the application of this new theory to calculate power flows in distorted electrical networks with non-linear loads.

REFERENCES

- [1] C. P. Steinmetz, "Complex quantities and their use in electrical engineering," in *Proceedings of the International Electrical Congress*, 1893, pp. 33–74.
- [2] A. Kennelly, "Impedance," *Transactions of the American Institute of Electrical Engineers*, vol. 10, pp. 172–232, 1893.
- [3] O. Heaviside, *Electrical Papers*. Macmillan and Company, 1892, vol. 2.
- [4] L. S. Czarnecki, "Instantaneous reactive power pq theory and power properties of three-phase systems," *IEEE Transactions on Power Delivery*, vol. 21, no. 1, pp. 362–367, 2005.
- [5] C. Budeanu, *Puissances reactives et fictives*. Impr. Cultura nationala, 1927, no. 2.
- [6] L. S. Czarnecki, "Currents' physical components (cpc) concept: A fundamental of power theory," in *Nonsinusoidal Currents and Compensation, 2008. ISNCC 2008. International School on*. IEEE, 2008, pp. 1–11.
- [7] S. Fryze, "Wirk-, blind- und scheinleistung in elektrischen stromkreisen mit nichtsinusförmigem verlauf von strom und spannung," *Elektrotechnische Zeitschrift*, vol. 25, no. 569–599, p. 33, 1932.
- [8] H. Akagi, Y. Kanazawa, and A. Nabae, "Instantaneous reactive power compensators comprising switching devices without energy storage components," *IEEE Transactions on industry applications*, no. 3, pp. 625–630, 1984.
- [9] M. Depenbrock, "The fbd-method, a generally applicable tool for analyzing power relations," *IEEE Transactions on Power Systems*, vol. 8, no. 2, pp. 381–387, 1993.
- [10] H. Lev-Ari and A. M. Stankovic, "A decomposition of apparent power in polyphase unbalanced networks in nonsinusoidal operation," *IEEE Transactions on Power Systems*, vol. 21, no. 1, pp. 438–440, 2006.
- [11] P. Salmerón and R. Herrera, "Instantaneous reactive power theory—a general approach to poly-phase systems," *Electric Power Systems Research*, vol. 79, no. 9, pp. 1263–1270, 2009.
- [12] P. Haley, "Limitations of cross vector generalized pq theory," in *2015 International School on Nonsinusoidal Currents and Compensation (ISNCC)*. IEEE, 2015, pp. 1–5.
- [13] D. Hestenes and G. Sobczyk, *Clifford algebra to geometric calculus: a unified language for mathematics and physics*. Springer Science & Business Media, 2012, vol. 5.
- [14] F. G. Montoya, R. Baños, A. Alcayde, F. M. Arrabal-Campos, and E. Viciano, "Analysis of non-active power in non-sinusoidal circuits using geometric algebra," *International Journal of Electrical Power & Energy Systems*, vol. 116, p. 105541, 2020.
- [15] H. Lev-Ari and A. M. Stankovic, "Instantaneous power quantities in polyphase systems—a geometric algebra approach," in *2009 IEEE Energy Conversion Congress and Exposition*, 2009, pp. 592–596.
- [16] M. Saitou and T. Shimizu, "Generalized theory of instantaneous active and reactive powers in single-phase circuits based on hilbert transform," in *2002 IEEE 33rd Annual IEEE Power Electronics Specialists Conference. Proceedings (Cat. No. 02CH37289)*, vol. 3. IEEE, 2002, pp. 1419–1424.
- [17] Z. Nowomiejski, "Generalized theory of electric power," *Archiv für Elektrotechnik*, vol. 63, no. 3, pp. 177–182, 1981.
- [18] F. G. Montoya, A. Alcayde, F. M. Arrabal-Campos, R. Baños, and J. Roldán-Pérez, "Geometric algebra power theory (gapot): Revisiting apparent power under non-sinusoidal conditions," *arXiv e-prints*, 2020.
- [19] J. M. Chappell, S. P. Drake, C. L. Seidel, L. J. Gunn, A. Iqbal, A. Allison, and D. Abbott, "Geometric algebra for electrical and electronic engineers," *Proceedings of the IEEE*, vol. 102, no. 9, pp. 1340–1363, 2014.
- [20] R. N. Bracewell and R. N. Bracewell, *The Fourier transform and its applications*. McGraw-Hill New York, 1986, vol. 31999.
- [21] F. R. Kschischang, "The hilbert transform," *University of Toronto*, vol. 83, p. 277, 2006.
- [22] F. De Leon and J. Cohen, "Discussion of" generalized theory of instantaneous reactive quantity for multiphase power system";, *IEEE Transactions on Power Delivery*, vol. 21, no. 1, pp. 540–541, 2005.
- [23] H. Akagi, E. H. Watanabe, and M. Aredes, *Instantaneous Power Theory and Applications to Power Conditioning*. Wiley, 2007.
- [24] J. L. Willems, "A new interpretation of the akagi-nabae power components for nonsinusoidal three-phase situations," *IEEE Transactions on Instrumentation and Measurement*, vol. 41, no. 4, pp. 523–527, 1992.
- [25] X. Dai, G. Liu, and R. Gretsich, "Generalized theory of instantaneous reactive quantity for multiphase power system," *IEEE Transactions on Power Delivery*, vol. 19, no. 3, pp. 965–972, 2004.

- [26] F. De Leon and J. Cohen, "Ac power theory from poynting theorem: Accurate identification of instantaneous power components in nonlinear-switched circuits," *IEEE Trans. on Pow. Del.*, vol. 25, no. 4, pp. 2104–2112, 2010.
- [27] J. L. Willems, "Budeanu's reactive power and related concepts revisited," *IEEE Transactions on Instrumentation and Measurement*, vol. 60, no. 4, pp. 1182–1186, 2010.
- [28] D. Jeltsema, "Budeanu's concept of reactive and distortion power revisited," in *2015 IEEE International School on Nonsinusoidal Currents and Compensation (ISNCC)*, 2015, pp. 1–6.
- [29] F. G. Montoya, "Geometric algebra power theory in sinusoidal and non-sinusoidal systems: Single-phase circuits," 2020.