

Stochastic Thermodynamics of Non-Linear Electronic Circuits: A Realistic Framework for Thermodynamics of Computation

Nahuel Freitas,¹ Jean-Charles Delvenne,² and Massimiliano Esposito¹

¹*Complex Systems and Statistical Mechanics, Department of Physics and Materials Science,
University of Luxembourg, L-1511 Luxembourg, Luxembourg*

²*Institute of Information and Communication Technologies, Electronics and Applied Mathematics,
Université catholique de Louvain, Louvain-La-Neuve, Belgium*

(Dated: June 20, 2022)

We present a general formalism for the construction of thermodynamically consistent stochastic models of non-linear electronic circuits. The devices constituting the circuit can have arbitrary I-V curves and may include tunnel junctions, diodes, and MOS transistors in subthreshold operation, among others. We provide a full analysis of the stochastic non-equilibrium thermodynamics of these models, identifying the relevant thermodynamic potentials, characterizing the different contributions to the irreversible entropy production, and obtaining different fluctuation theorems. Our work provides a realistic framework to study thermodynamics of computing with electronic circuits. We demonstrate this point by constructing a stochastic model of a CMOS inverter. We find that a deterministic analysis is only compatible with the assumption of equilibrium fluctuations, and analyze how the non-equilibrium fluctuations induce deviations from its deterministic transfer function. Finally, building on the CMOS inverter, we propose a full-CMOS design for a probabilistic bit (or binary stochastic neuron) exploiting intrinsic noise.

PACS numbers:

I. INTRODUCTION

In order to reduce energy consumption, electronic circuits designed for information processing need to function in regimes where the information carrying signals are increasingly close to thermal fluctuations [1–4]. Indeed, proposals have been made to trade reliability for energetic costs in certain applications [5–7], or to exploit intrinsic thermal fluctuations in order to solve stochastic optimization problems [8–10]. But while non-linear electronic circuits are essential for computation, the proper description of thermal noise in these circuits is a highly non-trivial problem, especially if one aims at preserving thermodynamic consistency [11–17]. Traditional methods employed in engineering for the description of noise are usually based on the linearization of a given element response around an operating point, or only consider external noise generated by linear resistors (the internal or intrinsic noise is first mapped to external sources) [14, 18]. Although these approaches might offer accurate estimations of the noise in some applications, they are not thermodynamically consistent and therefore are not suited for situations in which thermal fluctuations are relevant, or are exploited as a resource.

The discovery of the so-called fluctuation theorems [19, 20] and the ensuing development of the theory of stochastic thermodynamics [19, 21], established very general constraints on the thermal fluctuations of different physical systems, even if they are highly non-linear and arbitrarily away from thermal equilibrium. The theory was used to study colloidal particles, chemical reaction networks, molecular motors [19, 22–24], but also in electronic systems. There, it was applied to linear electrical circuits ranging from simple circuits [25–27] to com-

plex networks (even in quantum regimes) [28], but these circuits are of limited use to implement computations. Also, after experimental and theoretical progress on the study of non-linear single electron devices and Coulomb blockade systems [11, 29–33], stochastic thermodynamics was successfully applied to reach a deep understanding of thermal fluctuations in these systems [34–41]. In those devices, the nature of the conduction channels (typically tunnel junctions) and the nanoscopic size of the conductors (which implies low capacitances and high charging energies), allow to design circuits that process information with very low energy requirements [30]. The logical states are represented here by the presence of just one or few electrons. Unfortunately, the requirement of low temperatures and challenges in the fabrication of these devices have so far prevented their practical application in computing. In the foreseeable future, regular complementary metal-oxide-semiconductor (CMOS) circuits will probably remain the most relevant platform for computing [42, 43]. In this context, the quest for speed and low energy consumption fueled a spectacular progress in the miniaturization of transistors, and nowadays integrated circuits with typical features size of around 5nm can be mass produced. In these circuits, a transistor can be activated by just a few hundred electrons in its gate terminal. Thus, CMOS circuits are approaching regimes where a description in terms of single electrons becomes relevant [4]. The fact that both single electron devices and CMOS transistors (in some modes of operation) display shot noise [44], suggests that the rigorous tools and methods that have been used for the modeling and simulation of single electron devices could also be applied to study CMOS circuits. While recent studies used stochastic thermodynamics for the detailed characteriza-

tion of individual devices such as diodes and transistors [41, 45, 46], the study of complex networks and circuits comprising such devices remains unexplored.

In this paper we report three major achievements. First, in sections II to IV, we resolve the long standing and fundamental problem of rigorously describing noise in non-linear electronic circuits. We do so by developing a general formalism to construct *thermodynamically consistent* stochastic models of *arbitrary* non-linear circuits. Despite the presence of charging effects causing the behavior of each device to be modified by its environment [29], given the I-V curve characterization of a single arbitrary device, we show how to describe its stochastic behavior when it is introduced in an arbitrary circuit, avoiding some pitfalls leading to unphysical steady states. In this way we can seamlessly accommodate many different devices like tunnel junctions [30, 37], diodes [15], MOS transistors in subthreshold operation [15, 44, 47], or more exotic devices like nanoscale vacuum channel transistors [48]. The devices may even be time-dependently driven and at different temperatures.

Second, in sections V and VI, we provide a complete thermodynamic characterization of these non-linear electronic circuits using stochastic thermodynamics. We formulate the first and second law of thermodynamics for these circuits at the ensemble averaged as well as at the fluctuating level. In doing so we establish the relation between heat and electric currents and identify the thermodynamic potentials and forces at work in these circuits. We also formulate a general version of the Landauer principle as well as the different fluctuation theorems known to date.

Third, our formalism provides a framework for the study of the thermodynamics of computation implemented with realistic architectures, as we show in section VII. Thus, it offers a crucial complement to more abstract (i.e., architecture independent) approaches to thermodynamics of computation dealing with fundamental bounds [49–52]. To assert this claim, we construct and analyze a stochastic model of a *CMOS inverter* (or NOT gate) and of a *probabilistic bit* (*p*-bit). The CMOS inverter is an important primitive in electronic design, from which more complex devices like oscillators and memories can be built. We show how, due to non-equilibrium fluctuations, the transfer function of the gate deviates from the one obtained by a deterministic treatment. We also compute the full counting statistics of the current fluctuations and illustrate the validity of a detailed fluctuation theorem. The *p*-bit can be considered as a faulty memory, with a controllable bias and error rate. They are a physical implementation of what in machine learning is known as a *binary stochastic neuron* [53, 54]. Such devices were recently employed in proof-of-concept experiments to solve stochastic optimization problems and emulate artificial neural networks [8, 9]. Other propositions to exploit physical noise include cryptographic applications [55]. To the best of our knowledge, our design is the first full-CMOS proposal for a *p*-bit exploiting in-

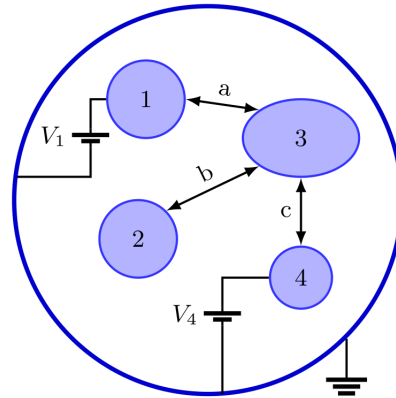


FIG. 1: A system of conductors. Two of them, 1 and 4, are maintained at fixed potentials V_1 and V_4 by voltage sources. Elementary charges q_e are interchanged between them by devices a , b and c .

trinsic noise, and thus can be implemented with current technology. The methods employed in these examples can be directly applied to model arbitrary logic gates at the stochastic level.

Please note that the reader mainly interested in the stochastic modelling of circuits might want to skip Sections V–VI on a first read, and go directly to the applications discussed in Section VII.

Our work provides bridges between computer engineering, mesoscopic physics and nonequilibrium statistical physics. In doing so it may contribute to the search for new practical and energy-efficient computing paradigms, and also to the design of experiments taking advantage of the versatility of electronic circuits in order to test new developments in statistical physics.

II. BASIC SETUP

We consider an arrangement of N_0 ideal conductors characterized by their total charge $\{q_n\}_{n=1,\dots,N_0}$ and electrostatic potential $\{V_n\}_{n=1,\dots,N_0}$, where the latter are measured with respect to some reference or ‘ground’ (see Figure 1). Basic electrostatic theory shows that the charges and potentials are related by the linear relation:

$$\mathbf{q}_0 = \mathbf{C}_0 \mathbf{V}_0, \quad (1)$$

where $\mathbf{q}_0 = (q_1, \dots, q_{N_0})^T$ and $\mathbf{V}_0 = (V_1, \dots, V_{N_0})^T$ are column vectors containing the charges and voltages, and the $N_0 \times N_0$ symmetric matrix \mathbf{C}_0 (known as the Maxwell capacitance matrix) encodes the mutual and self capacitances of the conductors. These capacitances depend on the shape, size, and relative position and orientation of the conductors. The electrostatic energy contained in such a system is given by the quadratic form:

$$E = \frac{1}{2} \mathbf{q}_0^T \mathbf{V}_0 = \frac{1}{2} \mathbf{V}_0^T \mathbf{C}_0 \mathbf{V}_0 = \frac{1}{2} \mathbf{q}_0^T \mathbf{C}_0^{-1} \mathbf{q}_0. \quad (2)$$

Some of the conductors can have their potential fixed by voltage sources, and in that case we say that the circuit is *open*. We will refer to conductors with fixed potentials as *regulated* conductors, and to the rest as *free* conductors. Thus, we have $N_0 = N + N_r$, where N is the number of free conductors and N_r the number of regulated conductors. The vector \mathbf{q}_0 will be split into vectors \mathbf{q} and \mathbf{q}_r containing the charges of the free and regulated conductors, respectively. If the circuit is open, then the degrees of freedom of the system are reduced. This can be seen from Eq. (1), since fixing the potential of a conductor imposes a linear relationship between all the charges. Then, the state of the system is fully specified by the charges \mathbf{q} of all the free conductors.

We also consider two-terminal devices or channels that allow the transport of elementary charges of value q_e between pairs of conductors, forming a network or circuit. Each of these channels is modelled as a bi-directional Poisson process (BPP). This choice offers some generality while keeping the formalism concrete and simple and, as mentioned before, allows to describe relevant devices like tunnel junctions [30, 37], diodes [15], MOS transistors in subthreshold operation [44, 47], and other devices like nanoscale vacuum channel transistors [48]. The common feature of all these devices is that they display shot-noise (i.e., the current noise spectral density is proportional to the average current for large biases [56], see section III A). This is also a limitation of the BPP modeling choice, since it does not allow to properly describe regular resistors or source-drain conduction in MOS transistors operating in saturation mode, where the current noise spectral density is approximately independent of the average current (as for Johnson-Nyquist noise) [56]. However this is not a serious limitation, especially if we are interested in the regime of ultralow energy consumption, where the subthreshold and unsaturated operation of MOS transistors is optimal [47].

Let $\rho = 1, \dots, M$ index the two-terminal devices present in the circuit. Then, given a device ρ connecting conductor n and m , we associate to it two basic Poisson processes: a ‘forward’ one in which an elementary charge is transported from conductor n to conductor m , and the ‘reverse’ one in which a charge is transported in the opposite direction, with respective rates $\lambda_\rho(\mathbf{q}, t)$ and $\lambda_{-\rho}(\mathbf{q}, t)$. The forward direction is of course chosen arbitrarily. Note that the rates $\lambda_{\pm\rho}(\mathbf{q}, t)$ depend explicitly on the full state \mathbf{q} of the system, which allows to model externally controlled conduction channels. Thus, in a transition $\pm\rho$ the state of the system changes as:

$$\mathbf{q} \rightarrow \mathbf{q} + q_e \Delta_{\pm\rho} \quad (\Delta_\rho)_k = -\delta_{k,n} + \delta_{k,m}, \quad (3)$$

where q_e is the value of the elementary charge involved in all the possible transitions and $\Delta_{-\rho} = -\Delta_\rho$. The vector Δ_ρ encodes to which conductors the device ρ is connected and what is the change in their number of charges during the transitions. If a device ρ is connected between one of the free conductors, n , and one with fixed

voltage, the corresponding vector Δ_ρ is given by:

$$(\Delta_\rho)_k = \delta_{k,n}, \quad (4)$$

where the forward direction was chosen as the one leaving the conductor with fixed potential.

One can imagine more complex devices that involve three or more conductors in an irreducible way, for example by taking one charge from conductor m , one from n , and transporting them to conductor o . This kind of devices can also be treated with the formalism we develop here, although most discussions will be focused on two-terminal devices.

A. Reduced incidence matrix, cycles and conservation laws

The vectors $\Delta_{\rho>0}$ can be grouped in an $N \times M$ *reduced incidence matrix*:

$$\Delta = \begin{bmatrix} | & \cdots & | \\ \Delta_1 & \cdots & \Delta_M \\ | & \cdots & | \end{bmatrix}. \quad (5)$$

This matrix is analogous to the stoichiometric matrix in chemical reaction networks [23, 57]. For closed circuits it coincides with the full incidence matrix of the directed graph obtained by mapping conductors to nodes and two-terminal devices as directed edges (with the direction given by the forward one). The reduced incidence matrix for an open circuit is obtained from the one of the closed circuit by eliminating the rows corresponding to regulated conductors.

The right null eigenvectors of Δ define *cycles*, i.e., sequences of transitions that leave the circuit state invariant:

$$\Delta \mathbf{c}_\alpha = 0. \quad (6)$$

The elements of the vectors \mathbf{c}_α can always be chosen to be 0, 1, or -1 . The number of independent cycles is $N_c = \dim(\text{Ker}(\Delta))$. The left null eigenvectors of Δ correspond to conservation laws, since if

$$\ell_\nu^T \Delta = 0, \quad (7)$$

then the quantities

$$L_\nu(\mathbf{q}) = \ell_\nu^T \mathbf{q} \quad (8)$$

will not change under any transition, i.e., they are determined by the initial state of the circuit. The elements of ℓ_ν can always be considered to be 0 or 1. For each connected component of the full circuit in which no conductor is regulated, we have a conserved quantity that is just the total charge of the conductors in that component. In fact, these are the only conserved quantities. Thus, the number of independent conservation laws, $N_l = \dim(\text{Ker}(\Delta^T))$, equals the number of closed connected components of the circuit.

Whenever a closed circuit is opened by connecting one of its conductors to a voltage source (see Figure 1), we might either break a conservation law or create a new cycle. This can be seen in the following way. The rank-nullity theorem applied to the matrix Δ can be expressed as:

$$N - N_l + N_c = M. \quad (9)$$

This is valid for closed as well as for open circuits. Let us assume however that in the previous equation N , N_l and N_c correspond to the matrix Δ of the circuit in which all the voltage sources are disconnected. Then we connect N_r voltage sources, and thus the number of conductors involved in the new matrix Δ' is now $N' = N - N_r$. Applying the rank-nullity theorem to Δ' we obtain:

$$N' - N'_l + N'_c = M. \quad (10)$$

Subtracting the previous two equations we see that:

$$N_r = N_l - N'_l + N'_c - N_c. \quad (11)$$

Thus, the number of voltage sources connected to the circuit equals the number of broken conservation laws, $N_l - N'_l$, plus the number of emergent cycles, $N'_c - N_c$. This is easily understood: if a previously closed component of the circuit is connected to a voltage source, its total charge ceases to be a conserved quantity. However, if we further connect another voltage source to another conductor of the same component, then a new cycle is created (the one in which a charge is injected by one source, transported through the component, and removed by the second source).

B. Stochastic and deterministic dynamics

At any given time the state of the circuit is described by a probability distribution $P(\mathbf{q}, t)$ over the state space. It evolves according to the master equation:

$$d_t P(\mathbf{q}, t) = \sum_{\rho} \{J_{-\rho}(\mathbf{q} + q_e \Delta_{\rho}, t) - J_{\rho}(\mathbf{q}, t)\}, \quad (12)$$

where the probability currents are defined as:

$$J_{\rho}(\mathbf{q}, t) = \lambda_{\rho}(\mathbf{q}, t) P(\mathbf{q}, t). \quad (13)$$

They are simply the probability per unit time to observe a transition ρ in state \mathbf{q} . The summation in Eq. (12) is over positive and negative values of ρ , i.e., it is over transitions and not over devices. The set of currents $J_{\rho}(\mathbf{q}, t)_{\rho=\pm 1, \dots, \pm M}$ can be considered the components of a vector function of the state, that we denote $\mathcal{J}(\mathbf{q}, t)$. We define the following operator over those functions:

$$D_{\mathbf{q}}^{\rho}[\mathcal{F}] = F_{-\rho}(\mathbf{q} + q_e \Delta_{\rho}) - F_{\rho}(\mathbf{q}). \quad (14)$$

Then, $D_{\mathbf{q}}^{\rho}[\mathcal{J}]$ is the net probability current arriving at state \mathbf{q} corresponding to transitions $\pm \rho$, and the master equation reads:

$$d_t P(\mathbf{q}, t) = \sum_{\rho} D_{\mathbf{q}}^{\rho}[\mathcal{J}]. \quad (15)$$

Note that the change in a scalar quantity $F(\mathbf{q})$ in a transition $\mathbf{q} \rightarrow \mathbf{q} + q_e \Delta_{\rho}$ can also be expressed by trivially extending the operator $D_{\mathbf{q}}^{\rho}[\cdot]$ to these functions:

$$D_{\mathbf{q}}^{\rho}[F] = F(\mathbf{q} + q_e \Delta_{\rho}) - F(\mathbf{q}). \quad (16)$$

The stochastic dynamics given by Eq. (12) can be compared to the deterministic dynamics obtained by usual methods in circuit theory [58]. In those deterministic descriptions, the charges q_n are considered to be continuous variables, and the charge vector \mathbf{q} evolves according to the following differential equation:

$$d_t \mathbf{q} = \sum_{\rho > 0} \Delta_{\rho} I_{\rho}, \quad (17)$$

where I_{ρ} is the electric current associated to device ρ . The previous equation is closed by providing the I-V curve characterization of all the devices, and by Eq. (1) relating voltages and charges. For example, the current I_{ρ} through a two-terminal device connected from conductor n to conductor m is considered to be a function $I_{\rho}(\Delta V_{n,m})$ of the voltage drop $\Delta V_{n,m} = V_n - V_m$ (see Section III A). Then, $\Delta V_{n,m}$ can be expressed in terms of \mathbf{q} by inverting Eq. (1). The relation between the deterministic and stochastic descriptions is non-trivial and will be examined in the particular example of the CMOS inverter in section VII A.

C. Equilibrium states and detailed balance

An equilibrium state $P_{\text{eq}}(\mathbf{q}, t)$ of the circuit is defined as one in which the global detailed balance condition holds:

$$D_{\mathbf{q}}^{\rho}[\mathcal{J}] = 0 \quad \forall \rho. \quad (18)$$

By Eq. (15), if an equilibrium state exists it is also a stationary one. In general no equilibrium state exists. However, for closed and isothermal circuits consistency with equilibrium thermodynamics demands the following Gibbs state to be an equilibrium one:

$$P_{\text{Gibbs}}(\mathbf{q}, t) = Z^{-1} e^{-\beta E(\mathbf{q})} \prod_{\nu} \delta[L_{\nu}(\mathbf{q}), L_{\nu}(\mathbf{q}^{(i)})], \quad (19)$$

where $\delta[a, b] = 1$ if $a = b$ and 0 otherwise, $\mathbf{q}^{(i)}$ is the initial state of the circuit, and ν runs over a set of independent conservation laws. The partition function Z is such that $P_{\text{Gibbs}}(\mathbf{q}, t)$ is normalized and thus depends on the inverse temperature β and the quantities $\{L_{\nu}(\mathbf{q}^{(i)})\}$. More general equilibrium states can be obtained by mixing Gibbs distributions like Eq. (19) according to a distribution $P(\mathbf{q}^{(i)})$ on the initial state.

The demand that $P_{\text{Gibbs}}(\mathbf{q}, t)$ must be an equilibrium state when the circuit is closed and isothermal imposes minimum conditions on the transition rates $\lambda_{\pm\rho}(\mathbf{q}, t)$. These are the *local* detailed balance (LDB) conditions which for closed circuits and isothermal settings are:

$$\log \frac{\lambda_{\rho}(\mathbf{q}, t)}{\lambda_{-\rho}(\mathbf{q} + q_e \Delta_{\rho}, t)} = -\beta (E(\mathbf{q} + q_e \Delta_{\rho}) - E(\mathbf{q})). \quad (20)$$

They can also be written as:

$$D_{\mathbf{q}}^{\rho}[\log \lambda] = \beta D_{\mathbf{q}}^{\rho}[E], \quad (21)$$

where $\lambda(\mathbf{q}, t)$ is a vector function of the state with components $\{\lambda_{\rho}(\mathbf{q}, t)\}_{\rho=\pm 1, \dots, \pm N}$, and the $\log(\cdot)$ function is applied element-wise. Thus, the rates $\lambda_{\pm\rho}(\mathbf{q}, t)$ characterizing a given two-terminal device ρ must fulfill the constraints imposed by Eq. (20). We now generalize the LDB conditions to open circuits and non-isothermal settings.

D. Energy difference and local detailed balance

We consider an open circuit in which some conductors have the potential fixed by voltage sources. In the same way we did with the charges, the vector \mathbf{V}_0 is split into vectors \mathbf{V} and \mathbf{V}_r , containing the voltages of the free and regulated conductors, respectively. We can then express the relation of Eq. (1) between all the charges and voltages as:

$$\begin{bmatrix} \mathbf{q} \\ \mathbf{q}_r \end{bmatrix} = \begin{bmatrix} \mathbf{C} & \mathbf{C}_m \\ \mathbf{C}_m^T & \mathbf{C}_r \end{bmatrix} \begin{bmatrix} \mathbf{V} \\ \mathbf{V}_r \end{bmatrix}, \quad (22)$$

where \mathbf{C}_r is the $N_r \times N_r$ capacitance matrix of the regulated conductors, \mathbf{C} is the $N \times N$ capacitance matrix of the free conductors, and \mathbf{C}_m is the $N \times N_r$ matrix with the mutual capacitances between conductors of the two groups. The previous equation can be rewritten as:

$$\begin{bmatrix} \mathbf{V} \\ \mathbf{q}_r \end{bmatrix} = \begin{bmatrix} \mathbf{C}^{-1} & -\mathbf{C}^{-1}\mathbf{C}_m \\ \mathbf{C}_m^T\mathbf{C}^{-1} & \mathbf{C}_r - \mathbf{C}_m^T\mathbf{C}^{-1}\mathbf{C}_m \end{bmatrix} \begin{bmatrix} \mathbf{q} \\ \mathbf{V}_r \end{bmatrix}, \quad (23)$$

from where it is clear that, given the potentials \mathbf{V}_r , the charges \mathbf{q} are enough to determine the rest of the variables, as discussed before. The total electrostatic energy is then:

$$\begin{aligned} E(\mathbf{q}) &= \frac{1}{2} [\mathbf{q}^T, \mathbf{V}_r^T] \begin{bmatrix} \mathbf{V} \\ \mathbf{q}_r \end{bmatrix} \\ &= \frac{1}{2} \mathbf{q}^T \mathbf{C}^{-1} \mathbf{q} + \frac{1}{2} \mathbf{V}_r^T (\mathbf{C}_r - \mathbf{C}_m^T \mathbf{C}^{-1} \mathbf{C}_m) \mathbf{V}_r. \end{aligned} \quad (24)$$

We are interested in computing how the total energy of the system (conductors plus sources) changes in a transition $\mathbf{q} \rightarrow \mathbf{q} + q_e \Delta_{\rho}$. From the previous equation we see that the change in electrostatic energy is

$$\begin{aligned} D_{\mathbf{q}}^{\rho}[E] &= E(\mathbf{q} + q_e \Delta_{\rho}) - E(\mathbf{q}) \\ &= q_e^2 \Delta_{\rho}^T \mathbf{C}^{-1} \Delta_{\rho} / 2 + q_e \mathbf{q}^T \mathbf{C}^{-1} \Delta_{\rho}, \end{aligned} \quad (25)$$

which is independent of the voltages \mathbf{V}_r . In addition to this, we need to consider the change in the energy stored in the voltage sources. This can be computed as (minus) the work performed by them, which equals the charge transported from ground to the conductor to which each source is connected times its voltage. There are two different contributions to this work. First, the transition ρ might directly involve one regulated conductor. If a charge q_e arrives to the conductor fixed to a potential V_r , it needs to be removed, and for this the source must perform an amount of work given by $w_r = -q_e V_r$. Secondly, even if the transition does not involve any regulated conductor, changes in the distribution of charge among the free conductors can induce a charging of the regulated conductors. From Eq. (23) we see that the induced charge is $\delta \mathbf{q}_r = q_e \mathbf{C}_m^T \mathbf{C}^{-1} \Delta_{\rho}$. It follows that the total amount of work performed by the sources during transition ρ is

$$\delta W_{\rho} = -q_e \mathbf{V}_r^T \Delta_{\rho}^r + q_e \mathbf{V}_r^T \mathbf{C}_m^T \mathbf{C}^{-1} \Delta_{\rho}, \quad (26)$$

where Δ_{ρ}^r is a vector encoding the change in the number of charges in the regulated conductors in transition ρ (if no regulated conductor is involved in transition ρ , then $\Delta_{\rho}^r = 0$). Thus, the change in the energy of the system and sources can be written as:

$$\delta Q_{\rho}(\mathbf{q}) = D_{\mathbf{q}}^{\rho}[E] - \delta W_{\rho} = D_{\mathbf{q}}^{\rho}[\Phi] + q_e \mathbf{V}_r^T \Delta_{\rho}^r, \quad (27)$$

where we have defined the potential

$$\Phi(\mathbf{q}) = E(\mathbf{q}) - \mathbf{V}_r^T \mathbf{C}_m^T \mathbf{C}^{-1} \mathbf{q}. \quad (28)$$

The first term in the right hand side of Eq. (27) is conservative, since its contribution vanishes in any cyclic sequence of transitions in the state space $\{\mathbf{q}\}$. The second contribution is not conservative since its contribution does not vanish in cyclic transformations: its value will depend on how are the regulated conductors involved in the cycle. Also, we note that the gradient of the potential $\Phi(\mathbf{q})$ gives the voltage of the free conductors:

$$\mathbf{V}(\mathbf{q}) = \nabla_{\mathbf{q}} \Phi(\mathbf{q}), \quad (29)$$

as can be verified from Eq. (23).

The quantity $\delta Q_{\rho}(\mathbf{q})$ is the energy required to perform the transition $\mathbf{q} \rightarrow \mathbf{q} + q_e \Delta_{\rho}$. By conservation of energy, it must be provided by the environment of the device ρ , which we assume to be at thermal equilibrium at temperature T_{ρ} (this implies that the two conductors to which ρ is connected should also be at temperature T_{ρ}). Therefore, $\delta Q_{\rho}(\mathbf{q})$ is the heat associated to device ρ during the transition, and corresponds to an entropy change in its environment equal to $-\delta Q_{\rho}(\mathbf{q})/T_{\rho}$. Thus, the LDB condition now reads:

$$\log \frac{\lambda_{\rho}(\mathbf{q}, t)}{\lambda_{-\rho}(\mathbf{q} + q_e \Delta_{\rho}, t)} = -\beta_{\rho} \delta Q_{\rho}(\mathbf{q}), \quad (30)$$

where $\beta_{\rho} = (k_b T_{\rho})^{-1}$, or equivalently,

$$D_{\mathbf{q}}^{\rho}[\log \lambda] = \beta_{\rho} (D_{\mathbf{q}}^{\rho}[\Phi] + q_e \mathbf{V}_r^T \Delta_{\rho}^r). \quad (31)$$

For closed and isothermal settings this condition reduces to Eq. (20).

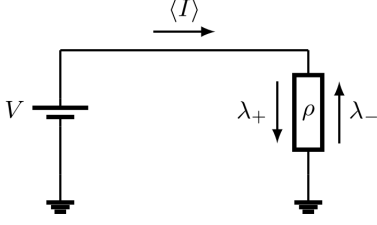


FIG. 2: I-V characterization of a two-terminal device.

III. MODELS FOR DEVICES

A. I-V curve characterization

Two-terminal devices are usually characterized by measuring how the average electric current through them depends on the applied voltage across their terminals, as in Figure 2. Modeling a device ρ as a BPP with rates λ_+ and λ_- , and applying the LDB condition of Eq. (30) to this simple case, we obtain:

$$\log \frac{\lambda_+(V)}{\lambda_-(V)} = \beta q_e V. \quad (32)$$

The net amount of charge going through the device in the forward direction between time t and $t + \Delta t$ is:

$$q(\Delta t) = q_e(N_+(\Delta t) - N_-(\Delta t)), \quad (33)$$

where $N_{\pm}(\Delta t)$ are independent Poisson processes with rates $\lambda_{\pm}(V)$. The average current is then:

$$\begin{aligned} \langle I \rangle &= \langle q(\Delta t)/\Delta t \rangle = q_e(\lambda_+(V) - \lambda_-(V)) \\ &= q_e \lambda_+(V)(1 - e^{-\beta q_e V}). \end{aligned} \quad (34)$$

Thus, the BPP modeling assumption and the LDB condition allows to determine the rates $\lambda_{\pm}(V)$ from the measurement of the I-V curve alone, via Eqs. (32) and (34). In turn, from these rates we can compute any statistical moment of the electric current $I(\Delta t) = q(\Delta t)/\Delta t$. Therefore the full statistics of the process is completely determined by just the mean value $\langle I(\Delta t) \rangle$. In particular, the second central moment is [15, 16]:

$$\begin{aligned} \sigma_I^2(\Delta t) &= \langle (I(\Delta t) - \langle I(\Delta t) \rangle)^2 \rangle \\ &= \frac{q_e^2}{\Delta t} (\lambda_+(V) + \lambda_-(V)) \\ &= \frac{q_e}{\Delta t} \langle I(\Delta t) \rangle \coth(\beta q_e V/2), \end{aligned} \quad (35)$$

which at variance with the first moment $\langle I(\Delta t) \rangle$ depends explicitly on the integration time Δt . This integration time is related via the Nyquist-Shannon sampling theorem to the frequency bandwidth $\Delta f = 1/(2\Delta t)$ of the measurement. Thus, in the limit of large bias ($\beta q_e V \gg 1$) we obtain the usual expression for shot noise:

$$\sigma_I^2(\Delta t) = 2q_e \langle I \rangle \Delta f. \quad (36)$$

Then, in this context, shot noise appears as a direct consequence of the BPP assumption and of the LDB condition. For this reason, the fluctuations in circuits with elements that do not display shot noise cannot be faithfully described with this formalism. In the opposite limit where thermal effects dominate ($\beta q_e V \ll 1$), we recover the usual expression for Johnson-Nyquist noise [44, 59].

B. Specific devices

1. Tunnel junctions

A tunnel junction is the simplest kind of device and the one for which the BPP model is more natural (in some regimes of operation) [30]. It consists of a sufficiently small gap between two conductors such that electrons can tunnel through the gap. They display an Ohmic I-V curve: $\langle I \rangle = V/R_{\text{TJ}}$, where the tunnel junction resistance R_{TJ} can be computed from the specific properties of the metal conductors and the transmission coefficient of the junction. Using Eqs. (32) and (34) we obtain the rates:

$$\begin{aligned} \lambda_+(V) &= \frac{V}{q_e R_{\text{TJ}}} \frac{1}{1 - e^{-\beta q_e V}} \\ \lambda_-(V) &= \frac{V}{q_e R_{\text{TJ}}} \frac{1}{e^{\beta q_e V} - 1}. \end{aligned} \quad (37)$$

These expressions are well defined for any positive or negative value of the elementary charge q_e , and if it changes sign then the roles λ_+ and λ_- are just inverted.

2. Diodes

The characteristic curve of a p-n junction diode is often modeled via the ideal Shockley diode equation [60]:

$$\langle I \rangle = I_s (e^{\beta q_e V} - 1), \quad (38)$$

where in this case q_e is the positive electron charge and $I_s > 0$ is the reversed bias saturation current. Then the Poisson rates are given by:

$$\begin{aligned} \lambda_-(V) &= I_s/q_e \\ \lambda_+(V) &= (I_s/q_e) e^{V/V_T}, \end{aligned} \quad (39)$$

where we have defined the thermal voltage

$$V_T = (\beta q_e)^{-1} = k_b T/q_e. \quad (40)$$

3. MOS transistors in weak inversion

MOS transistors are ubiquitous devices underlying most of modern digital and analog electronics. An *enhancement-mode* nMOS transistor like the one depicted in Figure 3 has two typical modes of operation:

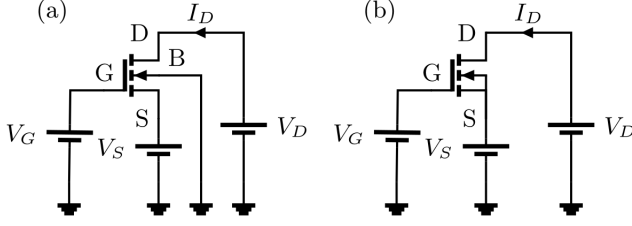


FIG. 3: An nMOS transistor. In (a) the bulk (B) terminal is grounded and all other voltages are measured with respect to it. This allows to preserve the symmetry between the source (S) and drain (D) terminals, that is broken by connecting S and B together to obtain a three-terminal device like in (b).

(i) a *saturation* mode, and (ii) a *subthreshold* or *weak inversion* mode (see [43] for a rigorous discussion of all the modes of operation). In the saturation mode the transistor essentially behaves like a switch, allowing conduction between source (S) and drain (D) if the gate (G) voltage is above a certain threshold V_{th} (see Figure 3-(a)). If $V_G < V_{th}$ then source-drain conduction is suppressed. However, whenever $V_S \neq V_D$ some small leakage current will still flow, and its magnitude will greatly depend on how far V_G is below V_{th} . This is the subthreshold mode of operation, on which we focus in the following. To describe this mode, we consider the Enz-Krummenacher-Vittoz model of the MOS transistor as developed in [42]. According to this model, the average drain current $\langle I_D \rangle$ can be naturally split into forward and reverse components given by:

$$\begin{aligned} \langle I_D^f \rangle &= I_0 e^{(V_G - V_{th} - nV_S)/(nV_T)} \\ \langle I_D^r \rangle &= I_0 e^{(V_G - V_{th} - nV_D)/(nV_T)}, \end{aligned} \quad (41)$$

where the voltages and the current I_D are defined as in Figure 3-(a). This model of the MOS transistor in subthreshold operation involves three parameters characterizing the device: the threshold voltage V_{th} , the ‘specific’ current I_0 and the ‘slope factor’ $n \geq 1$. All these parameters can be determined from a microscopic model of the device as explained in [42]. The total average drain current is then:

$$\begin{aligned} \langle I_D \rangle &= \langle I_D^f \rangle - \langle I_D^r \rangle \\ &= I_0 e^{(V_G - V_{th})/(nV_T)} (e^{-V_S/V_T} - e^{-V_D/V_T}). \end{aligned} \quad (42)$$

In the previous expression the symmetry of the device is preserved, since we see that the current I_D is inverted if we interchange the roles of drain and source. For the more common three-terminal configuration of Figure 3-(b), the symmetry is broken and the current is given by:

$$\langle I_D \rangle = I_0 e^{(V_G - V_S - V_{th})/(nV_T)} (1 - e^{-(V_D - V_S)/V_T}). \quad (43)$$

The voltage bias driving this current is $V_D - V_S$, which plays the role of V in the I-V curve characterization.

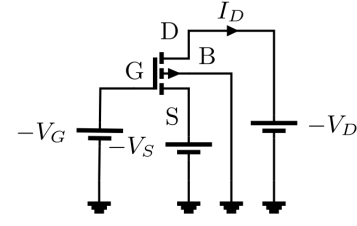


FIG. 4: Definition of voltage and current references for pMOS transistors.

Using this last expression we obtain the following Poisson rates:

$$\begin{aligned} \lambda_+ &= (I_0/q_e) e^{(V_G - V_S - V_{th})/(nV_T)} \\ \lambda_- &= (I_0/q_e) e^{(V_G - V_S - V_{th})/(nV_T)} e^{-(V_D - V_S)/V_T}. \end{aligned} \quad (44)$$

In principle this model is accurate only for $\langle I_D^{f/r} \rangle \ll I_0$.

In a pMOS transistor conduction between drain and source is increasingly allowed as the gate voltage becomes negative with respect to the body, contrarily to the nMOS transistor. However, all the expressions presented for the nMOS transistor are still valid for pMOS transistors provided that the sign of the currents and voltages are reversed, as Figure 4 indicates.

In general treatments, the noise in MOS transistors is modelled by integrating infinitesimal Johnson-Nyquist sources along the drain-source channel [42, 43]. However, for the subthreshold or weak-inversion mode in which we are interested, the results obtained in that way are fully compatible with those obtained from a simple BPP model as considered here [44]. This is not the case for other modes of operation.

IV. CHARGING EFFECTS

The previously discussed I-V characterization of two terminal devices allows to determine the Poisson rates $\lambda_{\pm\rho}$ for a given device ρ in situations where the voltage across the device is kept fixed. In actual circuits this voltage will of course depend on the full state \mathbf{q} of the circuit, in accordance with the relation of Eq. (1). Thus, the Poisson rates will be functions $\lambda_{\pm\rho}(\mathbf{q})$ of the full state. However, naive constructions of the functions $\lambda_{\pm\rho}(\mathbf{q})$, based on the I-V characterization and Eq. (1), fail to fulfil the LDB conditions. As a consequence, they would lead to unphysical non-thermal stationary states for closed and isothermal circuits. To discuss and illustrate this situation, we revisit the well known ‘Brillouin’s paradox’ [17]. Based on the analysis of this problem we derive a procedure to construct the rates $\lambda_{\pm\rho}(\mathbf{q})$ for arbitrary devices and circuits in such a way that the LDB conditions are always respected.

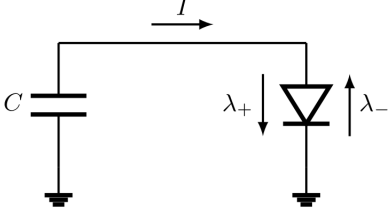


FIG. 5: Circuit illustrating the Brillouin's paradox.

A. Brillouin Paradox

We consider the circuit of Figure 5: a closed and isothermal circuit consisting of a diode and a capacitor connected in parallel. At any given time the voltage across the diode is equal to the capacitor voltage $V = q/C$, where q is the total charge in the upper capacitor plate. Then, to construct the Poisson rates $\lambda_{\pm}(q)$ we might consider the following procedure: to obtain the rate for a transition $q \rightarrow q \mp q_e$, we evaluate the fixed-voltage rates $\lambda_{\pm}(V)$ of Eqs. (39) at the voltage *preceding* the transition (we refer to this as a ‘naive causality’ assumption). In this way, we have:

$$\begin{aligned} q \rightarrow q + q_e : \quad \lambda_{-}^{\text{nc}}(q) &= I_s/q_e \\ q \rightarrow q - q_e : \quad \lambda_{+}^{\text{nc}}(q) &= (I_s/q_e) e^{q/(CV_T)}. \end{aligned} \quad (45)$$

However, these rates do not fulfil the LDB condition of Eq. (20), that for this simple case reads:

$$\begin{aligned} \log \frac{\lambda_{+}(q + q_e)}{\lambda_{-}(q)} &= -\beta(E(q) - E(q + q_e)) \\ &= \beta q_e(V + q_e/(2C)) \\ &= (q + q_e/2)/(CV_T), \end{aligned} \quad (46)$$

where $E(q) = q^2/(2C)$ is the energy of the circuit. As a consequence, the stationary distribution corresponding to the transition rates $\lambda_{\pm}^{\text{nc}}(q)$ is:

$$P_{\text{st}}^{\text{c}}(q) \propto e^{-\frac{\beta}{2C}(q^2 + q_e q)}, \quad (47)$$

which deviates from the correct Gibbs equilibrium by a factor $e^{-\beta q_e q/(2C)}$. Since this factor is an uneven function of the charge, it follows that the stationary mean value of the charge in the capacitor is strictly below 0. If this were the case, the capacitor could be disconnected from the diode and employed as a source of energy, and this process could in principle be repeated indefinitely. This apparent violation of the second law is essentially the Brillouin paradox, and can be considered the electronic analogue of a Brownian ratchet.

A way to solve this problem is to notice that the LDB condition of Eq. (46) would be fulfilled if the fixed-voltage rates $\lambda_{\pm}(V)$ were evaluated not at the voltage before each transition, but at the average of the voltage before and after the transition. Using this midpoint rule

we obtain the rates [15, 16]:

$$\begin{aligned} q \rightarrow q + q_e : \quad \lambda_{-}(q) &= I_s/q_e \\ q \rightarrow q - q_e : \quad \lambda_{+}(q) &= (I_s/q_e) e^{(q - q_e/2)/(CV_T)}, \end{aligned} \quad (48)$$

which lead to the correct Gibbs equilibrium. Later we will show that the midpoint rule is valid in general. This means that it can be applied to the fixed-voltage rates $\lambda_{\pm\rho}(V)$ of an arbitrary device ρ to obtain thermodynamically consistent transition rates $\lambda_{\pm\rho}(q)$ when this device is embedded in an arbitrary circuit. Although this rule seems to be at odds with the notion of causality, it is actually not: the probability of a transition naturally depends on the final state as well as on the initial one. For the naive notion of causality to be preserved one should modify the characteristic I-V curve of the device in question in a way that is context dependent. This in turn challenges the idea of modularity, i.e., the notion that the behaviour of a device is not influenced by its environment and therefore can be plugged in different circuits without modifying its description, which is a basic assumption in the usual modeling of complex electronic circuits at the deterministic level. However, modifications to the characteristic curve of a device due to charging effects in its environment are well known in the study of single electron devices, where the most explicit example is known as the Coulomb blockade effect [29–33, 61]. In the following we illustrate the charging effects in the context of the Brillouin paradox.

B. Charging effects in the I-V curve

Let $\langle I \rangle_V$ be the average current for a given value of the capacitor voltage in the example of Figure 5. According to the correct rates of Eqs. (48), it reads:

$$\langle I \rangle_V = I_s \left(e^{(V - q_e/(2C))/V_T} - 1 \right), \quad (49)$$

which match the characteristic I-V function of Eq. (38) evaluated at a voltage shifted by $\delta V = q_e/(2C)$. At the same time, the fluctuations in the voltage are $\Delta V \simeq \sqrt{k_B T/C}$. Then, charging effects are relevant whenever $\delta V \geq V, \Delta V$. Consequently, in order to observe or employ these effects, as done for example in single electron transistors, one either needs to work with nanoscopic circuits (in order to achieve low values of C) or at very low temperatures (usually a combination of both). The characteristic curves of Eqs. (38) and (49) are compared in Figure 6-(a). We note that, counter to intuition, the mean value $\langle I \rangle_V$ does not vanish for $V = 0$. This seems to indicate that an initially empty capacitor would charge up when connected to the diode. However, in accordance to the second law, this anomaly is effectively neutralized by thermal fluctuations. This can be verified by computing the mean value of the current for the Gibbs equilibrium distribution $P_{\text{eq}}(q) \propto e^{-\beta q^2/(2C)}$:

$$\langle I \rangle_{\text{eq}} = \sum_q P_{\text{eq}}(q) \langle I \rangle_{V=q/C} = 0. \quad (50)$$

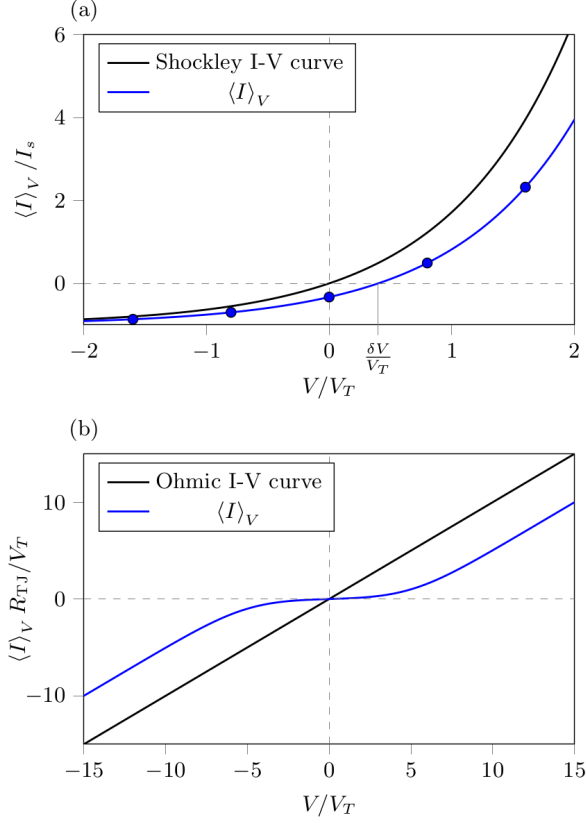


FIG. 6: Charging effects in the characteristic I-V curve of a: (a) Shockley diode ($\delta V/V_T = 0.4$), and (b) tunnel junction ($\delta V/V_T = 5$).

Also, for $0 < V < \delta V$ we have $\langle I \rangle_V < 0$, and thus it seems that for those values of V the device is actually delivering energy (since the mean dissipated power is $\langle \dot{Q} \rangle_V = \langle I \rangle_V \cdot V < 0$). However this is not the case since the actual voltage can only take the discrete values $V = n\delta V$, with n integer, as indicated with dots in Figure 6-(a). A calculation similar to the previous one shows that the average dissipated power at equilibrium also vanishes:

$$\langle \dot{Q} \rangle_{\text{eq}} = \sum_q P_{\text{eq}}(q) (q/C) \langle I \rangle_{V=q/C} = 0. \quad (51)$$

Finally, we note that if we take the limit $C \rightarrow \infty$ while fixing the voltage V , which correspond to a model of a perfect voltage source, charging effects disappear (we go back to the picture of Figure 2).

C. General case

Comparing Eqs (32) and (30) we see that if V in the fixed-voltage rates $\tilde{\lambda}_{\pm}(V)$ is replaced by $\mp \delta Q_{\pm\rho}(\mathbf{q})/q_e$, then the resulting state dependent rates will automatically satisfy the LDB condition (recall the definition

of $\delta Q_{\pm\rho}(\mathbf{q})$ in Eq. (27) and note that it satisfies $\delta Q_{-\rho}(\mathbf{q} + q_e \Delta_{\rho}) = -\delta Q_{\rho}(\mathbf{q})$). Explicitly, we should consider (for $\rho > 0$):

$$\lambda_{\pm\rho}(\mathbf{q}) = \tilde{\lambda}_{\pm}(\mp \delta Q_{\pm\rho}(\mathbf{q})/q_e). \quad (52)$$

In turn, if device ρ is connected to conductors n and m (with $n \rightarrow m$ as the forward direction) then we have:

$$\delta Q_{\pm\rho}(\mathbf{q}) = \mp q_e \overline{\Delta V}_{nm}^{\pm\rho}(\mathbf{q}), \quad (53)$$

where $\overline{\Delta V}_{nm}^{\rho}(\mathbf{q})$ is the average of the voltage difference $\Delta V_{nm} = V_n - V_m$ before and after the transition $\mathbf{q} \rightarrow \mathbf{q} + q_e \Delta_{\rho}$. This justifies the midpoint rule mentioned above and can be easily verified from the relation of Eq. (23) and the definition of $\Phi(\mathbf{q})$ in Eq. (28).

Particular care should be taken for the case of the MOS transistor (or in general with three-terminal devices that can be considered as externally controlled two-terminal devices). In this case the fixed-voltage transition rates $\tilde{\lambda}_{\pm}$ for the source-drain conduction do not depend only on the voltage difference $\Delta V_{DS} = V_D - V_S$ between those terminals, but also on the ‘control’ voltage $\Delta V_{GS} = V_G - V_S$. Generalizing the rates of Eq. (44) we can write:

$$\begin{aligned} \tilde{\lambda}_{+}(\Delta V_{GS}, \Delta V_{DS}) &= f(\Delta V_{GS}) g_{+}(\Delta V_{DS}) \\ \tilde{\lambda}_{-}(\Delta V_{GS}, \Delta V_{DS}) &= f(\Delta V_{GS}) g_{-}(\Delta V_{DS}), \end{aligned} \quad (54)$$

where the functions f and g_{\pm} are such that the following condition is satisfied:

$$\log \frac{\tilde{\lambda}_{+}(\Delta V_{GS}, \Delta V_{DS})}{\tilde{\lambda}_{-}(\Delta V_{GS}, \Delta V_{DS})} = \beta q_e \Delta V_{DS}. \quad (55)$$

To construct state dependent rates satisfying the LDB condition of Eq. (30), we should not only replace ΔV_{DS} by its average before and after the transition but also do the same with the control parameter ΔV_{GS} . Explicitly:

$$\lambda_{\pm\rho}(\mathbf{q}) = \tilde{\lambda}_{\pm} \left(\overline{\Delta V}_{GS}^{\pm\rho}(\mathbf{q}), \overline{\Delta V}_{DS}^{\pm\rho}(\mathbf{q}) \right). \quad (56)$$

D. Charging effects and non-linearity

Circuits containing devices with non-linear I-V curves are qualitatively different from circuits in which all devices are linear. For example, in linear RLC networks (where the degrees of freedom are continuous and the stochastic dynamics is described by a Fokker-Planck equation), the dynamics of the mean or expected values of voltages and currents is decoupled from the dynamics of higher order moments, and therefore it matches the deterministic dynamics [28]. This is not anymore the case if some non-linear element is present. However, in the kind of discrete models we are considering here, charging effects can induce non-linear behaviours even if the characteristic I-V curves of all the devices in the

circuit are linear, as is the case with tunnel junctions [29, 32, 33]. This is illustrated in Figure 6-(b), that was obtained in the same way as Figure 6-(a) for the diode. These induced non-linearities are a resource that is exploited in the construction of single electron transistors and logic gates only consisting of small conductive islands and tunnel junctions between them [30]. However, in the macroscopic limit in which each conductor has many excess charges, or for high temperatures, the non-linear effects are washed out. Consequently, in those regimes, the expected values of voltages and currents in such circuits will obey closed and linear equations of motion that will match the ones obtained from a deterministic description based on Eq. (17). The question about the relation between the stochastic and deterministic descriptions in general circuits is non-trivial, and will not be addressed here in full generality. It will be analyzed for the particular example of the CMOS inverter in Section VII A. A general treatment will be considered elsewhere, based on the large deviation methods recently applied to chemical reaction networks [62].

V. STOCHASTIC THERMODYNAMICS

So far we have established the general stochastic description of electronic circuits and we have shown how to construct the transition rates corresponding to different devices in a way that is thermodynamically consistent. In the following we explore the general properties of this kind of models. We start by analyzing the energy balance and the entropy production, i.e., we establish the first and second laws. For this we first define the production of heat in each device and its relation to the electric current.

A. Electrical currents and heat dissipation

Let us consider the following pair of transitions, which are the inverse of each other:

$$\mathbf{q} \xrightleftharpoons[-\rho]{+\rho} \mathbf{q} + q_e \mathbf{\Delta}_\rho. \quad (57)$$

The average electric current corresponding to this pair of transitions is:

$$\langle I_\rho \rangle_{\mathbf{q}} = q_e (J_\rho(\mathbf{q}, t) - J_{-\rho}(\mathbf{q} + q_e \mathbf{\Delta}_\rho, t)) = -q_e D_{\mathbf{q}}^\rho[\mathcal{J}]. \quad (58)$$

And then the net average electric current corresponding to device ρ is:

$$\langle I_\rho \rangle = \sum_{\mathbf{q}} \langle I_\rho \rangle_{\mathbf{q}} = -q_e \sum_{\mathbf{q}} D_{\mathbf{q}}^\rho[\mathcal{J}]. \quad (59)$$

In a similar way, the average rate at which heat is provided by the environment of device ρ corresponding

to that pair of transitions is:

$$\begin{aligned} \langle \dot{Q}_\rho \rangle_{\mathbf{q}} &= \delta Q_\rho(\mathbf{q}) (J_\rho(\mathbf{q}) - J_{-\rho}(\mathbf{q} + q_e \mathbf{\Delta}_\rho, t)) \\ &= q_e^{-1} \delta Q_\rho(\mathbf{q}) \langle I_\rho \rangle_{\mathbf{q}}, \end{aligned} \quad (60)$$

where $\delta Q_\rho(\mathbf{q})$ is the change in energy of the system during transition ρ and is given by Eq. (27). Note that, as is usual in stochastic thermodynamics but contrary to what is normally done in electronics, heat is defined as positive when it increases the energy of the system. Recalling Eq. (53), if device ρ is connected to conductors n and m , we can write:

$$\langle \dot{Q}_\rho \rangle_{\mathbf{q}} = -\overline{\Delta V}_{nm}^\rho(\mathbf{q}) \langle I_\rho \rangle_{\mathbf{q}}. \quad (61)$$

This is the stochastic version of the usual formula for Joule heating. Note that it is only valid at the level of transitions, and that the average voltage difference is involved. The net heat rate associated to device ρ is:

$$\begin{aligned} \langle \dot{Q}_\rho \rangle &= \sum_{\mathbf{q}} \langle \dot{Q}_\rho \rangle_{\mathbf{q}} = \sum_{\mathbf{q}} q_e^{-1} \delta Q_\rho(\mathbf{q}) \langle I_\rho \rangle_{\mathbf{q}} \\ &= - \sum_{\mathbf{q}} D_{\mathbf{q}}^\rho[\Phi] D_{\mathbf{q}}^\rho[\mathcal{J}] + \langle I_\rho \rangle V_r^T \mathbf{\Delta}_\rho^r, \end{aligned} \quad (62)$$

where we have employed Eq. (27) to substitute $\delta Q_\rho(\mathbf{q})$.

B. Balance of Energy

Let us consider the rate of change in the mean value of the potential $\Phi(\mathbf{q}, t)$:

$$d_t \langle \Phi \rangle = \sum_{\mathbf{q}} d_t P(\mathbf{q}, t) \Phi(\mathbf{q}, t) + \partial_t \langle \Phi \rangle. \quad (63)$$

The explicit time dependence of Φ accounts for possible external controls of the parameters entering its definition, like the elements of the capacitance matrix or the voltages of the regulated conductors. Thus, the contribution $\partial_t \langle \Phi \rangle$ is interpreted as the rate of work done by this external control:

$$\langle \dot{W}_\Phi \rangle = \partial_t \langle \Phi \rangle. \quad (64)$$

Then, employing the master equation of Eq. (12), we can write:

$$\begin{aligned} d_t \langle \Phi \rangle - \langle \dot{W}_\Phi \rangle &= \sum_{\rho, \mathbf{q}} D_{\mathbf{q}}^\rho[\mathcal{J}] \Phi(\mathbf{q}, t) \\ &= -\frac{1}{2} \sum_{\rho, \mathbf{q}} D_{\mathbf{q}}^\rho[\mathcal{J}] D_{\mathbf{q}}^\rho[\Phi] \\ &= - \sum_{\rho > 0} \sum_{\mathbf{q}} D_{\mathbf{q}}^\rho[\mathcal{J}] D_{\mathbf{q}}^\rho[\Phi] \\ &= \sum_{\rho > 0} \langle \dot{Q}_\rho \rangle - \sum_{\rho > 0} \langle I_\rho \rangle V_r^T \mathbf{\Delta}_\rho^r. \end{aligned} \quad (65)$$

In the second and third lines of this equation we used the symmetry $D_{\mathbf{q}}^\rho[\cdot] = -D_{\mathbf{q}+q_e\Delta_\rho}^\rho[\cdot]$. Note that at variance with the first line, the sums in the last line only involve positive values of ρ and therefore can be considered as sums over devices. According to Section II D, the quantities

$$\langle \dot{W}_\rho^r \rangle = -\langle I_\rho \rangle \mathbf{V}_r^T \Delta_\rho^r \quad (66)$$

are the average rates of work performed by the voltage sources corresponding to device ρ . In this way we obtain the following energy balance for a general circuit:

$$d_t \langle \Phi \rangle = \langle \dot{W}_\Phi \rangle + \sum_{\rho>0} \langle \dot{W}_\rho^r \rangle + \sum_{\rho>0} \langle \dot{Q}_\rho \rangle. \quad (67)$$

C. Entropy production

To the probability distribution $P(\mathbf{q}, t)$ we assign the Shannon entropy:

$$\langle S \rangle = -k_b \sum_{\mathbf{q}} P(\mathbf{q}, t) \log(P(\mathbf{q}, t)), \quad (68)$$

which, as the notation suggests, can be considered the average of the state dependent entropy $S(\mathbf{q}, t) = -\log(P(\mathbf{q}, t))$. Its time derivative is

$$\begin{aligned} d_t \langle S \rangle &= -k_b \sum_{\rho} \sum_{\mathbf{q}} D_{\mathbf{q}}^\rho[\mathcal{J}] \log(P(\mathbf{q}, t)) \\ &= k_b \sum_{\rho>0} \sum_{\mathbf{q}} D_{\mathbf{q}}^\rho[\mathcal{J}] D_{\mathbf{q}}^\rho[\log(P)]. \end{aligned} \quad (69)$$

As usual, this rate of entropy change can be split into two components:

$$\begin{aligned} d_t \langle S \rangle &= k_b \sum_{\rho>0} \sum_{\mathbf{q}} D_{\mathbf{q}}^\rho[\mathcal{J}] D_{\mathbf{q}}^\rho[\log(P)] \\ &= k_b \sum_{\rho>0} \sum_{\mathbf{q}} (D_{\mathbf{q}}^\rho[\mathcal{J}] D_{\mathbf{q}}^\rho[\log(\mathcal{J})] - D_{\mathbf{q}}^\rho[\mathcal{J}] D_{\mathbf{q}}^\rho[\log(\lambda)]). \end{aligned} \quad (70)$$

Using the LDB condition in Eq. (31) the second term can be related to the average entropy production in the environment:

$$\langle \dot{S}_e \rangle = k_b \sum_{\rho>0} \sum_{\mathbf{q}} D_{\mathbf{q}}^\rho[\mathcal{J}] D_{\mathbf{q}}^\rho[\log(\lambda)] = -k_b \sum_{\rho>0} \beta_\rho \langle \dot{Q}_\rho \rangle. \quad (71)$$

Thus, combining the last two equations we obtain the following expression for the total average irreversible entropy production:

$$\langle \dot{S} \rangle \equiv d_t \langle S \rangle + \langle \dot{S}_e \rangle = k_b \sum_{\rho>0} \sum_{\mathbf{q}} D_{\mathbf{q}}^\rho[\mathcal{J}] D_{\mathbf{q}}^\rho[\log(\mathcal{J})] \geq 0, \quad (72)$$

which is explicitly positive. This constitutes a proof of the second law of thermodynamics in this context. We

see that the entropy production $\langle \dot{S} \rangle$ vanishes if and only if $D_{\mathbf{q}}^\rho[\mathcal{J}] = 0$, i.e., if the state is an equilibrium one (see Eq. (18)). The fact that $\langle \dot{S} \rangle$ corresponds to the familiar concept of entropy production is further justified in the following.

1. Isothermal conditions

If the temperature of all the devices is the same then we can split the total entropy production in a potential term and a work term. To see this we combine Eqs. (71) and (67) and write:

$$T \langle \dot{S}_e \rangle = \langle \dot{W}_\Phi \rangle + \sum_{\rho>0} \langle \dot{W}_\rho^r \rangle - d_t \langle \Phi \rangle, \quad (73)$$

where T is the common temperature of all devices. Then, we obtain:

$$\begin{aligned} T \langle \dot{S} \rangle &= T d_t \langle S \rangle - d_t \langle \Phi \rangle + \langle \dot{W}_\Phi \rangle + \sum_{\rho>0} \langle \dot{W}_\rho^r \rangle \\ &= -d_t \langle F \rangle + \langle \dot{W}_\Phi \rangle + \sum_{\rho>0} \langle \dot{W}_\rho^r \rangle, \end{aligned} \quad (74)$$

where we have defined the average *free energy* as:

$$\langle F \rangle = \langle \Phi \rangle - T \langle S \rangle. \quad (75)$$

Thus, the temperature times the total entropy production rate was expressed as a change in a thermodynamic potential plus the total work performed on the system. Integrating Eq. (74), and using the fact that $\langle \dot{S} \rangle > 0$, we recover the usual statement of the second law: the amount of work that can be extracted from the system during an arbitrary transformation is limited by minus the free energy difference.

D. Equilibrium states

Due to the LDB conditions, for time-independent, closed and isothermal systems there is always an equilibrium state satisfying Eq. (18), and it is given by Eq. (19). However, equilibrium states could also exist under more general conditions. For example, if an isothermal and closed circuit is opened by connecting some or all connected components to a voltage source (in such a way that there is only one voltage source connected to each component), then there also exists an equilibrium state, in which no currents flow. To see this, we notice that in such a case also the second term in Eq. (27) is conservative. In fact, we can write:

$$\begin{aligned} \delta Q_\rho(\mathbf{q}) &= D_{\mathbf{q}}^\rho[\Phi] + q_e \mathbf{V}_r^T \Delta_\rho^r \\ &= D_{\mathbf{q}}^\rho \left[\Phi - \sum_{n_p} V_{n_p} L_{n_p} \right], \end{aligned} \quad (76)$$

where n_p indexes the regulated conductors, V_{n_p} is the voltage of conductor n_p , and

$$L_{n_p}(\mathbf{q}) = \mathbf{l}_{n_p}^T \mathbf{q} \quad (77)$$

is the total charge of the free conductors in the connected component to which conductor n_p belongs. Here the vectors \mathbf{l}_{n_p} can be constructed as the reduction to the space of free conductors of the left eigenvectors of the incidence matrix Δ of the *full* circuit, including the regulated conductors. We see then that in this case the energy change during a transition can be expressed as the change in a state function $\Psi(\mathbf{q})$:

$$\delta Q_\rho(\mathbf{q}) = D_\mathbf{q}^\rho[\Psi], \quad (78)$$

with

$$\Psi(\mathbf{q}) = \Phi(\mathbf{q}) - \sum_{n_p} V_{n_p} L_{n_p}(\mathbf{q}). \quad (79)$$

Thus, it follows that for isothermal conditions there exists an equilibrium state satisfying the global detailed balance conditions of Eq. (18). It is given by:

$$P_{\text{eq}}(\mathbf{q}) = Z^{-1} e^{-\beta \Psi(\mathbf{q})} \prod_{\nu_c} \delta[L_{\nu_c}(\mathbf{q}), L_{\nu_c}(\mathbf{q}^{(i)})], \quad (80)$$

where the index ν_c runs over the closed connected components of the circuit, $L_{\nu_c}(\mathbf{q})$ is the total charge of component ν_c as defined by Eq. (8), and $\mathbf{q}^{(i)}$ is the initial state. As with Eq. (19), the partition function Z is such that $P_{\text{eq}}(\mathbf{q}, t)$ is normalized and thus depends on the conserved quantities $\{L_{\nu_c}(\mathbf{q}^{(i)})\}$.

E. Fundamental non-equilibrium forces

Based on the previous discussion, we can now split the work performed by the sources into conservative and non-conservative contributions. For this we first split the set of regulated conductors into two categories. For each of the open connected components in the full circuit we arbitrarily select one of its regulated conductors. The conductors selected in this way are indexed by $n_p = 1, \dots, N_p$. As will be clear later, the subindex p stands for ‘potential’. The total number N_p of ‘potential’ conductors can be easily seen to match the number of *broken conservation laws* as defined in section II A. The rest of the regulated conductors are indexed by $n_f = 1, \dots, N_f$. In this case the subindex f stands for ‘force’, and $N_f = N - N_p$ equals the number of *emergent cycles*. In this way, to each transition ρ involving a regulated conductor we can assign: (i) the voltage $V_{n_r(\rho)}$ of the regulated conductor involved in that transition, and (ii) a reference voltage $V_{n_p(\rho)}$, that is the voltage of the regulated conductor n_p that was selected as ‘potential’ in the corresponding open connected component. Thus, the energy change during a transition ρ involving a regulated

conductor can be rewritten as:

$$\begin{aligned} \delta Q_\rho(\mathbf{q}) &= D_\mathbf{q}^\rho[\Phi] + q_e \mathbf{V}_r^T \Delta_\rho^r \\ &= D_\mathbf{q}^\rho[\Phi - \sum_{n_p} V_{n_p} L_{n_p}] + q_e (\Delta_\rho^r)_{n_r(\rho)} (V_{n_r(\rho)} - V_{n_p(\rho)}), \end{aligned} \quad (81)$$

where $L_{n_p}(\mathbf{q})$ is the total charge on the free conductors in the open connected component of conductor n_p , as defined in Eq. (77). Thus, the heat rate of device ρ , Eq. (62), can also be expressed as:

$$\begin{aligned} \langle \dot{Q}_\rho \rangle &= \sum_{\mathbf{q}} \frac{1}{q_e} \delta Q_\rho(\mathbf{q}) \langle I_\rho \rangle_{\mathbf{q}} \\ &= - \sum_{\mathbf{q}} D_\mathbf{q}^\rho[\Psi] D_\mathbf{q}^\rho[\mathcal{J}] + \langle I_\rho \rangle (\Delta_\rho^r)_{n_r(\rho)} (V_{n_r(\rho)} - V_{n_p(\rho)}), \end{aligned} \quad (82)$$

where Ψ is the potential defined in Eq. (79). To each device ρ we can assign a voltage difference $\Delta V_\rho = -(\Delta_\rho^r)_{n_r(\rho)} (V_{n_r(\rho)} - V_{n_p(\rho)})$. The minus sign in this definition was introduced in order to make ΔV_ρ positive whenever the reference voltage is the lowest one in each connected component, and the forward direction of device ρ is the one leaving the regulated conductor. For a ‘internal’ device not connected to any regulated conductor, or for a device connected to a regulated conductor at the reference voltage, $\Delta V_\rho = 0$. Then, we see that at most N_f voltage differences ΔV_ρ can be different from zero. They are considered elements of a set $\{\Delta V_{n_f}\}_{n_f=1, \dots, N_f}$ of fundamental voltage differences, or non-equilibrium forces. Therefore, the total heat rate can be written as:

$$\langle \dot{Q} \rangle = - \sum_{\rho > 0} \sum_{\mathbf{q}} D_\mathbf{q}^\rho[\Psi] D_\mathbf{q}^\rho[\mathcal{J}] - \sum_{n_f=1}^{N_f} \langle I_{n_f} \rangle \Delta V_{n_f}, \quad (83)$$

where ΔV_{n_f} is one of the N_f fundamental non-equilibrium forces or voltage differences, and $\langle I_{n_f} \rangle$ its associated electric current.

F. Minimal decomposition of the isothermal entropy production

For isothermal settings, the entropy production can be decomposed in a similar way as in section V C 1, this time in terms of the *grand potential*

$$\langle \Omega \rangle = \langle \Psi \rangle - T \langle S \rangle \quad (84)$$

and the fundamental forces ΔV_{n_f} . To see this, we start by computing the change in the potential Ψ :

$$\begin{aligned} d_t \langle \Psi \rangle - \partial_t \langle \Psi \rangle &= \sum_{\mathbf{q}} d_t P(\mathbf{q}, t) \Psi(\mathbf{q}, t) \\ &= - \sum_{\rho > 0} \sum_{\mathbf{q}} D_\mathbf{q}^\rho[\mathcal{J}] D_\mathbf{q}^\rho[\Psi]. \end{aligned} \quad (85)$$

As before, we define a rate of work associated to the external control of the system:

$$\langle \dot{W}_\Psi \rangle = \partial_t \langle \Psi \rangle. \quad (86)$$

Note that this rate of work only coincides with $\langle \dot{W}_\Phi \rangle$ in Eq. (64) if the voltages of the regulated conductors are time independent. Now, combining the last two equations with Eq. (83) and recalling that for isothermal settings we have $T\langle \dot{\Sigma}_e \rangle = -\langle \dot{Q} \rangle$, we obtain:

$$T\langle \dot{\Sigma}_e \rangle = -d_t\langle \Psi \rangle + \langle \dot{W}_\Psi \rangle + \sum_{n_f} \langle I_{n_f} \rangle \Delta V_{n_f}, \quad (87)$$

that leads to the following expression for the irreversible entropy production:

$$T\langle \dot{\Sigma} \rangle = -d_t\langle \Omega \rangle + \langle \dot{W}_\Psi \rangle + \sum_{n_f} \langle \dot{W}_{n_f} \rangle, \quad (88)$$

where

$$\langle \dot{W}_{n_f} \rangle = \langle I_{n_f} \rangle \Delta V_{n_f} \quad (89)$$

is naturally defined as the work rate associated to the fundamental voltage difference ΔV_{n_f} . We see that if the system is not driven ($\langle \dot{W}_\Psi \rangle = 0$) and there are no fundamental forces ΔV_{n_f} , then $d_t\langle \Omega \rangle = -T\dot{\Sigma} \leq 0$. Also, from the fact that the capacitance matrix \mathbf{C} is positive definite, it follows that the thermodynamic potential $\langle \Omega \rangle$ is bounded from below. Thus, when $\langle \dot{W}_\Psi \rangle = \langle \dot{W}_{n_f} \rangle = 0$, $\langle \Omega \rangle$ is a Lyapunov function that reaches a minimum at equilibrium.

G. Non-equilibrium Landauer principle

Let us consider a transformation between two arbitrary, possibly non-equilibrium, states $P^{(i)}(\mathbf{q})$ and $P^{(f)}(\mathbf{q})$. This transformation is driven by changing in time the parameters of the circuit (for example the elements of the capacitance matrix or the properties of some of the devices), and/or by modifying the voltages of the regulated conductors. This can induce a parametric driving of the potentials Φ and Ψ (and thus also the free energies F and Ω), as well as a change in the non-equilibrium forces ΔV_{n_f} to which the system is subjected. In the following we will consider the time dependent equilibrium state $P_{\text{eq}}(\mathbf{q}, t)$, which is just the equilibrium state of Eq. (80) corresponding to the parameters of the system at time t , and that will serve as a reference state. Also, given an arbitrary state $P(\mathbf{q}, t)$ (compatible with the conserved quantities $L_{\nu_c}(\mathbf{q}^{(i)})$), we introduce its *relative entropy* with respect to the equilibrium state $P_{\text{eq}}(\mathbf{q}, t)$:

$$\mathcal{I}(t) = D(P|P_{\text{eq}}) = \sum_{\mathbf{q}} P(\mathbf{q}, t) \log(P(\mathbf{q}, t)/P_{\text{eq}}(\mathbf{q}, t)), \quad (90)$$

which in simple terms measures how much information should be provided in order to identify the state $P(\mathbf{q}, t)$ starting from $P_{\text{eq}}(\mathbf{q}, t)$. It vanishes if and only if $P(\mathbf{q}, t) = P_{\text{eq}}(\mathbf{q}, t)$, and is always positive otherwise. By employing the explicit form of the equilibrium state

$P_{\text{eq}}(\mathbf{q}, t)$ it is easy to see that the relative entropy can be computed as a difference between average free energies:

$$k_b T \mathcal{I}(t) = \langle \Omega(t) \rangle - \langle \Omega(t) \rangle_{\text{eq}}, \quad (91)$$

where $\langle \Omega(t) \rangle = \sum_{\mathbf{q}} P(\mathbf{q}, t) \Omega(\mathbf{q}, t)$ is the non-equilibrium free energy and $\langle \Omega \rangle_{\text{eq}} = \sum_{\mathbf{q}} P_{\text{eq}}(\mathbf{q}, t) \Omega(\mathbf{q}, t) = -k_b T \log(Z(t))$ is the equilibrium one. Using Eq. (91), we can rewrite Eq. (88) as:

$$\langle \dot{W}_\Psi \rangle + \sum_{n_f} \langle \dot{W}_{n_f} \rangle = k_b T d_t \mathcal{I} + d_t \langle \Omega \rangle_{\text{eq}} + T \langle \dot{\Sigma} \rangle. \quad (92)$$

Integrating this relation over time and using that $\langle \dot{\Sigma} \rangle = \int \langle \dot{\Sigma} \rangle dt \geq 0$ we obtain

$$\langle W_\Psi \rangle + \sum_{n_f} \langle W_{n_f} \rangle \geq k_b T \Delta \mathcal{I} + \Delta \langle \Omega \rangle_{\text{eq}}. \quad (93)$$

Thus, the previous expression provides a bound for the amount of work necessary to perform (or that can be extracted during) a transformation between arbitrary states. Importantly, this bound explicitly takes into account the ‘information content’ of the initial and final states with respect to the ‘uninformative’ equilibrium, and it can be considered a general version of the Landauer principle [63].

The Landauer principle is commonly discussed in terms of physical memories that represent logical values as quasiequilibrium metastable states, of which the proper thermal equilibrium is a mixture [49, 64–66]. However, it is important to notice that in some relevant kinds of electronic memories logical values are represented by non-equilibrium steady states (NESSs) that continuously produce entropy (for example, flip-flops and SRAM cells, or the probabilistic bit discussed in section VII B). Although the Landauer principle can anyway be applied to those cases, the bound obtained from the right hand side of Eq. (93) does not take into account that continuous entropy production (or “house-keeping heat” [67]), or any other additional dissipation due to restrictions on the control parameters of the system [68]. Refinements of the Landauer principle based on lower bounds for the entropy production in non-adiabatic transformations can be obtained [69–73], but to the best of our knowledge the physics of computation with NESSs remains poorly explored.

VI. STOCHASTIC TRAJECTORIES AND FLUCTUATION THEOREMS

In the previous sections we have studied the average or expected values of relevant quantities like the energy, entropy or work. In this section we turn to a lower level description based on single trajectories in the state space of the circuit, that will allow us to formulate different fluctuation theorems. We closely follow the treatment in [23] for chemical reaction networks and of [20] for general

Markov chains. Here we only present the main results and the necessary definitions. Additional details about the derivations can be found in the supplementary material.

We define a trajectory \mathbf{Q}_t as a particular realization of the stochastic dynamics, from some initial time $\tau = 0$ up to time $\tau = t$. Thus, a particular trajectory is fully characterized by its initial state \mathbf{q}_0 , the set of transitions $\{\rho_l\}$ that took place up to time t , and the times $\{t_l\}$ at which they occurred. The index l takes the values $l = 1, \dots, N_t$, where N_t is the number of transitions up to time t . All this information can be encoded in the *trajectory probability current*:

$$j_\rho(\mathbf{q}, t) = \sum_{l=1}^{N_t} \delta[\rho, \rho_l] \delta[\mathbf{q}, \mathbf{q}_{t_l}] \delta(t - t_l), \quad (94)$$

where \mathbf{q}_t is the state immediately before instant t . Different trajectories will occur with different probabilities. If the evolution of the system is well described by the master equation of Eq. (12), then the probability density $\mathcal{P}[\mathbf{Q}_t]$ of observing trajectory \mathbf{Q}_t given that the initial state is \mathbf{q}_0 satisfies:

$$\mathcal{P}[\mathbf{Q}_t] = \prod_{l=0}^{N_t} e^{-\int_{t_l}^{t_{l+1}} \sum_\rho \lambda_\rho(\mathbf{q}_\tau, \tau) d\tau} \prod_{l=1}^{N_t} \lambda_{\rho_l}(\mathbf{q}_{t_l}, t_l), \quad (95)$$

where we have defined $t_{N_t+1} = t$. The factors in the first product account for the probabilities of not having any transition during the periods $[t_l, t_{l+1})$, while the factors in the second product are proportional to the probabilities of each of the jumps to take place. If we average Eq. (94) over all trajectories then we recover the probability currents of Eq. (13).

The average quantities defined in the previous sections can be easily extended to individual trajectories. For example, the instantaneous electric current and power of device ρ are:

$$I_\rho(t) = -q_e \sum_{\mathbf{q}} D_{\mathbf{q}}^\rho[j], \quad (96)$$

and

$$\begin{aligned} \dot{Q}_\rho(t) &= - \sum_{\mathbf{q}} \delta Q_\rho(\mathbf{q}) D_{\mathbf{q}}^\rho[j] \\ &= - \sum_{\mathbf{q}} D_{\mathbf{q}}^\rho[\Psi] D_{\mathbf{q}}^\rho[j] - I_\rho(t) \Delta V_{n_f(\rho)}(t). \end{aligned} \quad (97)$$

These are just the stochastic versions of the average quantities in Eqs. (82) and (58), respectively, and are obtained by simply replacing the average current vector $\mathcal{J}(\mathbf{q}, t)$ by the stochastic one, $\mathbf{j}(\mathbf{q}, t)$, which is a vector function with components $\{j_\rho(\mathbf{q}, t)\}_{\rho=\pm 1, \dots, \pm M}$. $\Delta V_{n_f}(t)$ is one of the fundamental non-equilibrium forces defined in Section V E.

The net change of a state function $f(\mathbf{q}, t)$ during a trajectory can be expressed in terms of the currents $j_\rho(\mathbf{q}, t)$

in the following way:

$$\begin{aligned} \Delta f &= f(\mathbf{q}_t, t) - f(\mathbf{q}_0, 0) \\ &= \int_0^t d\tau \left\{ \partial_t f(\mathbf{q}_\tau, \tau) + \sum_{\rho, \mathbf{q}} j_\rho(\mathbf{q}, \tau) D_{\mathbf{q}}^\rho[f|\tau] \right\}. \end{aligned} \quad (98)$$

Applying this expression to the potential $\Psi(\mathbf{q}, t)$ defined in Eq. (79) we can arrive to the following energy balance for a given trajectory:

$$\Delta \Psi = W_\Psi + \sum_{n_f} W_{n_f} + \sum_{\rho > 0} Q_\rho, \quad (99)$$

where

$$W_\Psi = \int_0^t d\tau \partial_t \Psi(\mathbf{q}_\tau, \tau) \quad (100)$$

is the external driving work performed during the trajectory,

$$Q_\rho = \int_0^t d\tau \dot{Q}_\rho(\tau) \quad (101)$$

is the heat corresponding to device ρ , and

$$W_{n_f} = \int_0^t d\tau I_{n_f}(\tau) \Delta V_{n_f}(\tau) \quad (102)$$

is the work performed by the fundamental non-equilibrium force ΔV_{n_f} (I_{n_f} is its associated electric current).

A. Stochastic entropy and the integral fluctuation theorem

As mentioned before, it is possible to define the entropy of a given state during a trajectory in the following way [74]:

$$S(\mathbf{q}, t) = -k_b \log(P(\mathbf{q}, t)), \quad (103)$$

where $P(\mathbf{q}, t)$ is the solution of the master equation in Eq. (12) for a given initial distribution $P(\mathbf{q}, 0)$. The entropy flow, i.e., the production of entropy in the environment during a given trajectory is

$$\begin{aligned} \Sigma_e(\mathbf{Q}_t) &= -k_b \sum_{\rho} \beta_\rho Q_\rho(t) \\ &= -k_b \int_0^t d\tau \sum_{\rho, \mathbf{q}} j_\rho(\mathbf{q}, \tau) D_{\mathbf{q}}^\rho[\log(\boldsymbol{\lambda})|\tau]. \end{aligned} \quad (104)$$

Then, the total entropy production during the trajectory is:

$$\begin{aligned} \Sigma(\mathbf{Q}_t) &= -k_b \log \left(\frac{P(\mathbf{q}_t, t)}{P(\mathbf{q}_0, 0)} \right) \\ &\quad - k_b \int_0^t d\tau \sum_{\rho, \mathbf{q}} j_\rho(\mathbf{q}, \tau) D_{\mathbf{q}}^\rho[\log(\boldsymbol{\lambda})|\tau]. \end{aligned} \quad (105)$$

It can be verified that the time derivatives of the averages $\langle \Sigma_e \rangle$ and $\langle \Sigma \rangle$ over all trajectories match the entropy production rates $\langle \dot{\Sigma}_e \rangle$ and $\langle \dot{\Sigma} \rangle$ defined in Eqs. (71) and (72). Unlike its average $\langle \Sigma \rangle$, the entropy production Σ of a given trajectory is not always positive. However, the fluctuations of Σ are bound to satisfy a general *integral fluctuation theorem (IFT)*. This fundamental result is expressed as the following equality:

$$\langle e^{-\Sigma/k_b} \rangle = 1, \quad (106)$$

where the average is taken over all trajectories \mathcal{Q}_t . In simple terms, this equality states that positive values of the full entropy production are more probable than negative ones. Accordingly, from this result and Jensen's inequality the usual statement of the second law follows: $\langle \Sigma \rangle \geq 0$. Eq. (106) is valid for transient or steady state dynamics, in autonomous or time-dependent circuits.

B. Detailed fluctuation theorems

Equation (106) is only one of several fluctuation theorems. Under certain conditions, other quantities different from the full entropy production satisfy more stringent constraints. For example, in isothermal settings where $\beta_\rho = (k_b T)^{-1}$ for all ρ , it is possible to obtain the following *detailed fluctuation theorem (DFT)*:

$$\frac{P(\{W_{n_f}\}, W_\Psi)}{P^\dagger(\{-W_{n_f}\}, -W_\Psi)} = \exp((W_\Psi + \sum_{n_f} W_{n_f})/(k_b T)). \quad (107)$$

In this expression, $P(\{W_{n_f}\}, W_\Psi)$ is the probability to observe the values $\{W_{n_f}\}$ of work for each of the fundamental forces and of W_Ψ for the driving work during a *forward protocol*. This protocol consists on the initialization of the system state at $t = 0$ according to the equilibrium state of Eq. (80), and its subsequent evolution according to the transition rates $\lambda(\mathbf{q}, \tau)$ up to time t (the explicit dependence of the rates on τ takes into account a possible external manipulation of the circuit parameters, leading to an inhomogeneous time evolution). Analogously, the quantity $P^\dagger(\{-W_{n_f}\}, -W_\Psi)$ is the probability to observe the work values $\{-W_{n_f}\}$ and $-W_\Psi$ during the corresponding *backward protocol*, in which the system is initialized in a state drawn from the equilibrium distribution of Eq. (80) (this time corresponding to the circuit parameters at time t), and evolves according to the rates $\lambda(\mathbf{q}, t - \tau)$.

The previous result holds for arbitrary times t , under the condition that the initial state is an equilibrium one. A complementary relation can be obtained, which is only valid asymptotically (that is, for long times), but irrespective of the initial distribution (under the additional assumption that the circuit state is bounded to a finite

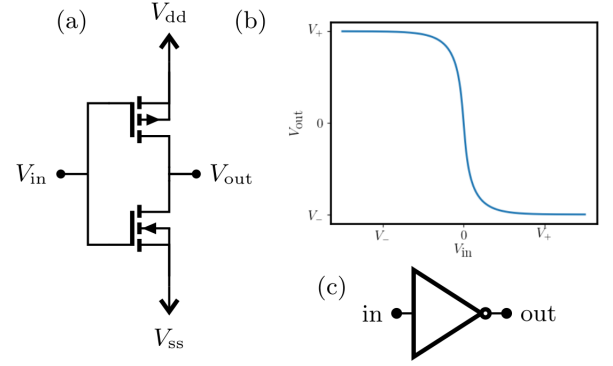


FIG. 7: (a) Common implementation of a NOT gate with CMOS technology. (b) Typical deterministic output voltage as a function of the input (for $V_{ss} = -V_{dd}$). (c) Logical symbol for the NOT gate.

region of the state space). It reads:

$$\frac{P(\{\bar{W}_{n_f}\}, \bar{W}_\Psi)}{P^\dagger(\{-\bar{W}_{n_f}\}, -\bar{W}_\Psi)} \simeq \exp(t(\bar{W}_\Psi + \sum_{n_f} \bar{W}_{n_f})/(k_b T)), \quad (108)$$

where we have defined the average work rates $\bar{W}_\Psi = t^{-1}W_\Psi$ and $\bar{W}_{n_f} = t^{-1}W_{n_f}$. Note that in the case in which the voltage differences ΔV_{n_f} are constant we have $W_{n_f} = \bar{I}_{n_f} \Delta V_{n_f}$, where $\bar{I}_{n_f} = t^{-1} \int_0^t d\tau I_{n_f}(\tau)$ are the average associated currents during the trajectory, and therefore Eq. (108) can be easily expressed in terms of the probabilities $P(\{\bar{I}_{n_f}\}, \bar{W}_\Psi)$. If there is no external driving of the circuit parameters, then $P(\cdot) = P^\dagger(\cdot)$.

The fluctuation theorems in Eqs. (107) and (108) express fundamental symmetries of energy exchange processes. For example, the novel thermodynamic uncertainty relations [75], or the usual Onsager relations (as well as their non-linear extension [46]) can be recovered from them. For completeness, a general proof of these and others fluctuation theorems is given in the supplementary material.

VII. APPLICATIONS

A. The CMOS inverter

The inverter or NOT gate is the most elementary logic gate. It has a single logical input, which is negated in its only output. A diagram of a possible implementation of this gate with MOS transistors is shown in Figure 7-(a). It is composed by one pMOS (top) and one nMOS (bottom) transistors, with common drain and gate terminals. The device is powered by applying a voltage difference $V_{dd} - V_{ss}$ between source terminals. When the voltage in the input is $V_{in} < (V_{dd} + V_{ss})/2$, conduction in the nMOS transistor is suppressed while it is enhanced in

the pMOS transistor, and therefore the output voltage V_{out} rapidly approaches V_{dd} . The situation is reversed for $V_{\text{in}} > (V_{\text{dd}} + V_{\text{ss}})/2$, as shown in Figure 7-(b).

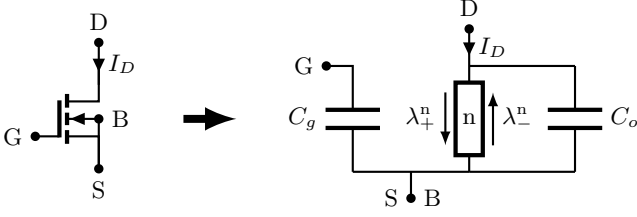


FIG. 8: Model of an nMOS transistor as an externally controlled conduction channel between source and drain, with associated Poisson rates λ_{\pm}^n . The gate-body interface is represented as a capacitor C_g , and another capacitor C_o takes into account the output capacitance. This is just a minimal model and does not pretend to be realistic. Other parasitic capacitances could also be taken into account, for example between drain and gate, but a proper description of them must take into account the physical dimensions of the device.

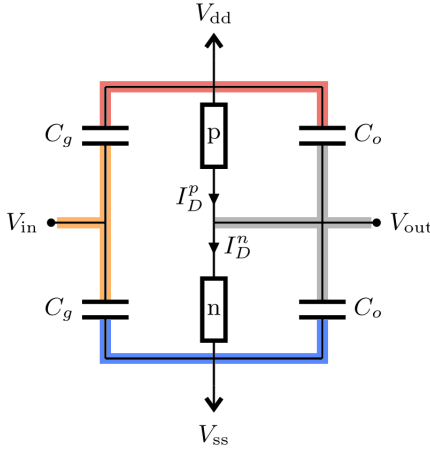


FIG. 9: A possible model of the CMOS inverter. The different conductors in the circuit (regions with the same potential) are identified with different colors (see Figure 10).

Now we explain how to build a stochastic model of the inverter within our formalism. The first step is to model the MOS transistor as an externally controlled conduction channel, with associated capacitances. For example, the nMOS transistor at the bottom of the diagram of Figure 7-(a) can be represented as in Figure 8. There, the transistor is represented as an externally controlled conduction channel between source and drain. The Poisson rates λ_{\pm}^n associated to that channel are constructed as explained in section IV C, and will depend on the gate to source voltage as well as on the drain to source voltage. The gate-body interface is modelled as a capacitor of capacitance C_g , and another capacitor C_o takes into account the output capacitance of the transistor. Using this mapping, we can model the full inverter with the diagram of Figure 9. In turn, this diagram corresponds to

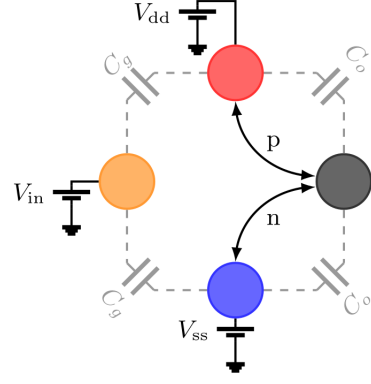


FIG. 10: Representation of the CMOS inverter as a set of three regulated and one free conductors, and two conduction channels. The capacitors represent the mutual capacitances between them.

a set of four conductors, in which 3 of them are regulated by voltage sources, as shown in Figure 10. The relation between the charges and voltages in this system is given by

$$\begin{bmatrix} q_{\text{out}} \\ q_{\text{in}} \\ q_{\text{dd}} \\ q_{\text{ss}} \end{bmatrix} = \begin{bmatrix} 2C_o & 0 & -C_o & -C_o \\ 0 & 2C_g & -C_g & -C_g \\ -C_o & -C_g & C_o + C_g & 0 \\ -C_o & -C_g & 0 & C_o + C_g \end{bmatrix} \begin{bmatrix} V_{\text{out}} \\ V_{\text{in}} \\ V_{\text{dd}} \\ V_{\text{ss}} \end{bmatrix}, \quad (109)$$

where q_{out} is the charge of the only free conductor (the output of the gate), and to which we will refer simply as q in the following. By comparison with Eq. (22) we can extract the blocks \mathbf{C} , \mathbf{C}_m and \mathbf{C}_r of the capacitance matrix (separated by lines in the previous expression). Using that and Eq. (24) we obtain the internal energy of the circuit as a function of the only degree of freedom q :

$$E(q) = \frac{q^2}{4C_o} + \frac{C_o}{4} \Delta V^2 + \frac{C_g}{2} [(V_{\text{in}} - V_{\text{dd}})^2 + (V_{\text{in}} - V_{\text{ss}})^2], \quad (110)$$

with $\Delta V = V_{\text{dd}} - V_{\text{ss}}$. In the same way, from Eq. (28), we can obtain the potential

$$\Phi(q) = E(q) + q(V_{\text{dd}} + V_{\text{ss}})/2, \quad (111)$$

and by taking its gradient we obtain the output voltage as a function of q :

$$V_{\text{out}}(q) = q/(2C_o) + (V_{\text{dd}} + V_{\text{ss}})/2. \quad (112)$$

Also, by selecting V_{ss} as the reference voltage to construct the potential Ψ (Eq. (79)), we find

$$\Psi(q) = \Phi(q) - qV_{\text{ss}} = E(q) + q\Delta V/2, \quad (113)$$

and that ΔV as defined above is the only non-equilibrium force (with I_p , the current through the pMOS transistor, as the associated current).

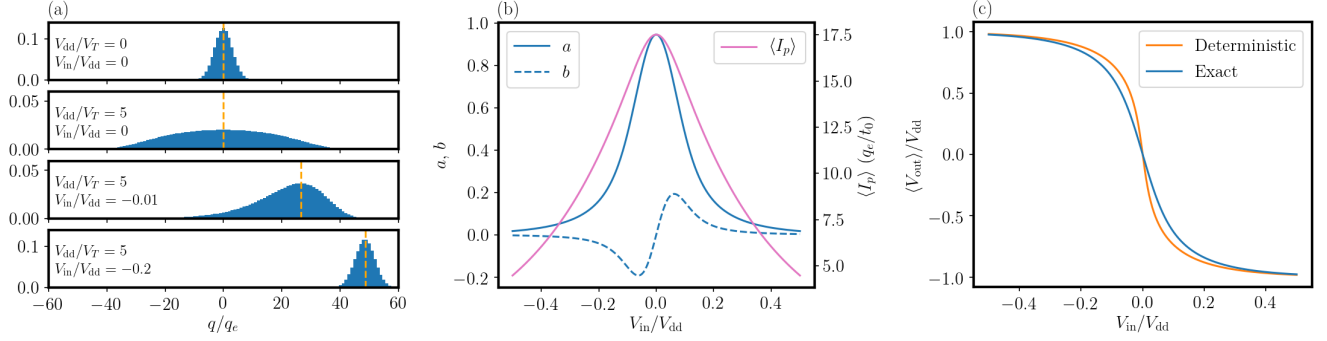


FIG. 11: (a) Probability distributions for the output charge of the inverter for different power and input voltages ($q_e/q_T = 0.1$). Here and in the other numerical results we consider $V_{ss} = -V_{dd}$, so that $\Delta V = 2V_{dd}$. The dashed lines indicate the result of a deterministic analysis. (b) Parameters a and b quantifying the deviations of the fluctuations with respect to thermal equilibrium as a function of V_{in} , see Eq. (124) ($V_{dd}/V_T = 3$ and $q_e/q_T = 0.5$). We also show the average steady state current through the inverter (in units of q_e/t_0 , with $t_0 = (q_e/I_0) \exp(V_{th}/(nV_T))$). (c) Comparison of the transfer function obtained from a deterministic analysis and the exact one taking into account non-equilibrium fluctuations ($V_{dd}/V_T = 3$ and $q_e/q_T = 0.5$).

According to Eq. (99), the energy balance for this circuit at the trajectory level is:

$$d_t \Psi = \dot{Q}_n + \dot{Q}_p + I_p \Delta V, \quad (114)$$

where \dot{Q}_n and \dot{Q}_p are the heat currents associated to each of the transistors. The irreversible entropy production is given by Eq. (88) and for this case reads:

$$T \langle \dot{\Sigma} \rangle = -d_t \langle \Omega \rangle + \langle I_p \rangle \Delta V, \quad (115)$$

where T is the temperature of both transistors and $\langle \Omega \rangle = \langle \Psi \rangle - T \langle S \rangle$ (we assume time independent voltages, so the driving contribution of Eq. (86) is not present). As can be seen from the two previous equations, for steady state conditions ($d_t \langle \Psi \rangle = d_t \langle S \rangle = 0$), the entropy production $\langle \dot{\Sigma} \rangle$ reduces to the entropy flow $\langle \dot{\Sigma}_e \rangle$ and we recover the usual expression:

$$T \langle \dot{\Sigma} \rangle = -\langle \dot{Q}_n \rangle - \langle \dot{Q}_p \rangle = \langle I_p \rangle \Delta V. \quad (116)$$

We now build the transition rates associated to both transistors according to the procedure of Section IV C. We begin with the nMOS transistor. The voltage difference between drain and source is $\Delta V_{DS} = V_{out} - V_{ss}$, and thus its average during the transition $q \rightarrow q \pm q_e$, with rates $\lambda_{\pm}^n(q)$, is $\overline{V_{DS}} = (q \pm q_e/2)/(2C_o) + \Delta V/2$. For the pMOS transistor, the voltage difference between source and drain is $\Delta V_{SD} = V_{dd} - V_{out}$ (recall that for pMOS transistors the references for voltage and currents are reversed), and its average for the same transitions, this time with rates $\lambda_{\pm}^p(q)$, is $\overline{V_{SD}} = -(q \pm q_e/2)/(2C_o) + \Delta V/2$. Then, via the procedure of Section IV C and the fixed-voltage rates of Eq. (44), we obtain the transition rates

$$\begin{aligned} \lambda_+^n(q) &= (I_0/q_e) e^{(V_{in} - V_{ss} - V_{th})/(nV_T)} \\ \lambda_-^n(q) &= \lambda_+^n(q) e^{-(q+q_e/2)/(2C_o) + \Delta V/2)/V_T} \end{aligned} \quad (117)$$

for the nMOS transistor, and

$$\begin{aligned} \lambda_+^p(q) &= (I_0/q_e) e^{(V_{dd} - V_{in} - V_{th})/(nV_T)} \\ \lambda_-^p(q) &= \lambda_+^p(q) e^{-(q-q_e/2)/(2C_o) + \Delta V/2)/V_T} \end{aligned} \quad (118)$$

for the pMOS. Thus, the master equation for the distribution $P(q, t)$ reads:

$$\begin{aligned} d_t P(q, t) &= P(q - q_e, t) [\lambda_-^n(q - q_e) + \lambda_+^p(q - q_e)] \\ &+ P(q + q_e, t) [\lambda_+^n(q + q_e) + \lambda_-^p(q + q_e)] \\ &- P(q, t) [\lambda_-^n(q) + \lambda_+^n(q) + \lambda_-^p(q) + \lambda_+^p(q)]. \end{aligned} \quad (119)$$

The master equation can be employed, for example, to find the steady state for given voltages V_{in} , V_{dd} and V_{ss} . As shown in the supplementary material, this can be done analytically, and the steady state is uniquely determined by the following recurrence relation:

$$P_{st}(q) = \frac{\alpha_p + \alpha_n \gamma e^{-(q-q_e)/q_T}}{\alpha_n + \alpha_p \gamma e^{q/q_T}} P_{st}(q - q_e), \quad (120)$$

where we have defined the constants:

$$\alpha_n = e^{(V_{in} - V_{ss})/(nV_T)}, \quad \alpha_p = e^{(V_{dd} - V_{in})/(nV_T)}, \quad (121)$$

and

$$\gamma_0 = e^{-\Delta V/(2V_T)}, \quad q_T = 2C_o V_T, \quad \gamma = \gamma_0 e^{-q_e/(2q_T)}. \quad (122)$$

From Eq. (120) it follows that the mean value $\langle q \rangle_{st}$ can be obtained from the positive root x of

$$\alpha_p \gamma_0 e^{a+b} x^2 + (\alpha_n - \alpha_p) x - \alpha_n \gamma_0 e^{a-b} = 0, \quad (123)$$

as $\langle q \rangle_{st} = q_T \log(x)$. The constants a and b are such that:

$$\left\langle e^{\pm(q - \langle q \rangle_{st})/q_T} \right\rangle_{st} = e^{q_e/(2q_T)} e^{a \pm b}, \quad (124)$$

where the mean value is taken on the stationary state given by Eq. (120) (see supplementary material). Thus,

a and b quantify the fluctuations of the output charge around the mean value. They are defined so that if the stationary state was a thermal equilibrium state (as it is for $V_{dd} = V_{ss}$), then $a = b = 0$. The constant a is a measure of how the even moments of $P_{st}(q)$ around the mean value deviate from those corresponding to equilibrium, while b is the same for the odd moments. We see then that Eq. (123) determines how the non-equilibrium fluctuations, characterized by a and b , affect the expected output of the gate $\langle q \rangle_{st}$. If we assume that the fluctuations are always compatible with thermal equilibrium (i.e., if $a = b = 0$), then Eq. (123) reduces to what it is obtained from a deterministic analysis of the circuit (Eq. (17)). Thus, this equation constitutes an exact stochastic generalization of the deterministic results that to the best of our knowledge was not obtained before.

In Figure 11-(a) we show the probability distribution for the output charge for different values of the power and input voltages. When there is no voltage bias applied to the gate ($V_{dd} = -V_{ss} = 0$), the distribution is just the equilibrium one. When a bias is applied but there is no input voltage ($V_{dd} = -V_{ss} = 5V_T$ and $V_{in} = 0$), the distribution is stretched out and it ceases to be Gaussian. The application of a small input voltage tilts this distribution to one side, and a further increase of the input voltage generates an approximately Gaussian peak centered around the value corresponding to the deterministic solution. We see that the distribution of the output charge is in general asymmetric with respect to the deterministic value. Thus, its mean value and the deterministic one will differ. This is further evidenced in Figure 11-(b), where we plot the parameters a and b as a function of the input voltage. We see that the largest deviations from equilibrium occur around zero input voltage, when the two transistors are equally activated, while they rapidly decrease as one of the transistors is more activated than the other. What happens here is that for large positive (negative) V_{in} the output conductor is approximately at equilibrium with the source V_{ss} (V_{dd}). Consequently, the current through the device (and therefore the entropy production), follow a similar pattern. Finally, in Figure 11-(c) we show the deviations of the actual transfer function of the inverter from the deterministic one, caused by non-equilibrium fluctuations.

We now turn to the analysis of the current fluctuations. For this we employ the method for full counting statistics [31, 35], that we review in the supplementary material. This method allows to evaluate the characteristic function associated to the currents fluctuations in terms of the generator of the master equation. Then, the characteristic function can be inverted to obtain the probability distribution. We consider the number N_t of charges that went through the pMOS transistor during a time t , starting from the stationary distribution. In Figure 12-(a) we show the probability distribution of N_t for different input voltages, with $t = 10^{-1}t_0$, where $t_0 = (q_e/I_0) \exp(V_{th}/(nV_T))$ is the natural time scale for this problem. Also, in Figure 12-(b) we illustrate the

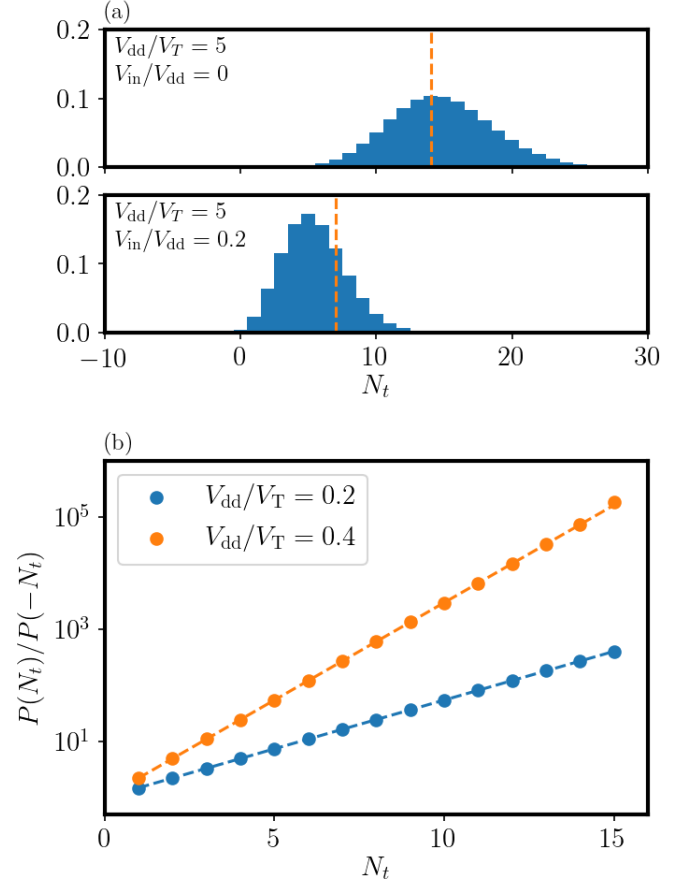


FIG. 12: (a) Probability distributions for the number of charges N_t that went through the pMOS transistor during a time $t = 10^{-1}t_0$ in the stationary state, for different input voltages ($q_e/q_T = 0.1$). Dashed lines indicate the values obtained from a deterministic analysis. (b) $P(N_t)/P(-N_t)$ ratio as function of N_t for two different power voltages ($q_e/q_T = 0.01$). The dots correspond to the numerical results obtained with the method of full counting statistics, and the dashed lines to the expected result according to the DFT of Eq. (125).

DFT of Eq. (107), which in this case reads:

$$\frac{P(N_t)}{P(-N_t)} = e^{N_t \Delta V / V_T}, \quad (125)$$

assuming an initial state $P_{eq}(q) \propto e^{-\beta \Psi(q)}$, with $\Psi(q)$ given by Eq. (113).

From Figures 11-(a) and 12-(a) we see that, except when the number of charges is too low (as in the bottom panel of Figure 12-(a)), the deterministic solution matches the most probable result according to the stochastic treatment. This is analogous to what has been formally shown in the case of chemical reaction networks using large deviation theory [62].

These results and methods set the stage for more interesting problems, as the NOT gate is a basic primitive in electronic design in terms of which more complex devices can be built. For example, connecting the output of the

gate back to its input through some conduction channel we can generate self-sustained oscillations. Connecting two NOT gates in a loop we obtain a bistable system with two metastable NESSs, which is the basis of many designs of electronic memories, and also of the next example. More complex logic gates can be modelled in the same way. We have only analyzed the stationary distribution of the inverter for a given input voltage, although in a real application the energetic cost of switching the inputs is a significant contribution to the total entropy production. This cost can be analyzed by letting the input change in time in a predefined way. Alternatively, it can also be studied in autonomous circuits (i.e., not requiring time dependent external driving) displaying bistability or limit cycles, as is done in the next section.

B. A full-CMOS probabilistic bit

A probabilistic bit (p -bit), or binary stochastic neuron, is a device with a single output b that can ideally take only two values, let us say 1 and -1 . It outputs the value 1 with probability p , and -1 with probability $1 - p$. The value of p is controlled by an input I . For large positive values of I , $p \rightarrow 1$, while for large negative values $p \rightarrow 0$. In a collection of N of these elementary devices, the inputs $\{I_i\}_{i=1,\dots,N}$ could be adjusted as a function of the instantaneous state $B = (b_1, b_2, \dots, b_N)$, and in this way correlations between different p -bits can be established. For example, given an arbitrary function $E(B)$, it is possible to derive functional relations $I_i(B)$ such that the state B occurs with probability $P(B) \propto e^{-E(B)}$. The function E can then be chosen so that its minimum (the most probable state) encodes the solution to some problem of interest [76]. Alternatively, the function $E(B)$ can be “learnt” in order for $P(B)$ to approximate the distribution of a given data set [53].

There have been recent proposals to implement p -bits with noisy electronic circuits. The most relevant employs magnetic tunnel junctions (MTJs), a technology being used for some commercial memories [77], modified on purpose so that they are sensitive to thermal noise (by lowering the energy barrier separating the two possible states representing one bit) [8, 9]. A previous proposal considers a “probabilistic switch” [6]: a regular CMOS inverter which is driven by external noise at its input, so that its output fluctuates between the two possible values. The advantage of this second proposal is that it is based on CMOS circuits only (not on less common devices like MTJs). However, its main drawback is that the intrinsic noise is actually neglected, instead of being exploited as a resource. The reason is that the description of the CMOS inverter is purely deterministic, and therefore access to an external source of noise is assumed. Also, the noise is considered to be Gaussian, which as we have seen in the last section is not always the case. These limitations are of course related to the difficulty of describing intrinsic noise in non-linear electronic cir-

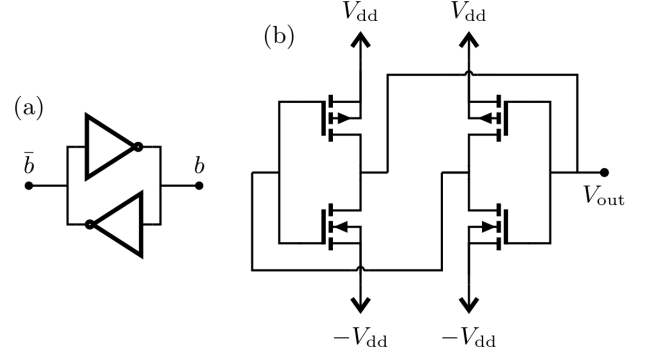


FIG. 13: (a) A bistable circuit constructed with two NOT gates, representing a bit. (b) Its CMOS implementation.

cuits, as discussed in Section I. As we will see next, our formalism allows to overcome those limitations, which highlights its practical value.

We propose a full-CMOS design for a p -bit that is self-sufficient: its stochastic behaviour is due to the intrinsic thermal noise, so no external source of noise is necessary. Also, while in p -bits based on MTJs the transition rate or error probability is fixed by the fabrication process (for a given temperature), our design allows to control this parameter on the fly by just changing the power voltage. The basic circuit is shown in Figure 13 and is composed of two coupled NOT gates as in regular SRAM cells. The logical circuit of Figure 13-(a) has two stable states: $b = 1$ and $\bar{b} = -1$, or $b = -1$ and $\bar{b} = 1$. In the CMOS implementation of Figure 13-(b), these two possibilities correspond to two metastable NESSs, for which $V_{out} \simeq V_{dd}$ or $V_{out} \simeq -V_{dd}$, respectively (V_{dd} should be above a critical value, of the order of V_T , for this to be the case). A stochastic model for the circuit of Figure 13-(b) can be built as before, by employing the mapping of Figure 8 and constructing the rates associated to each transistor with the procedure of Section IV C. In this case this is done automatically by a custom software package, that is also able to deal with general circuits [78]. The corresponding stochastic dynamics is then simulated by the same software with a variant of the Gillespie algorithm. In this way we can generate stochastic trajectories. For example, in Figure 14-(a) we show two trajectories for different values of the power voltage. To obtain these results we considered the following parameters: $V_T = 26$ mV (room temperature), $C_g = 50$ aF and $C_o = 10^{-2}C_g$ (these values of capacitances are compatible to what is achieved in modern fabrication processes [79]). Also, for simplicity we took $n = 1$, and as before the parameters I_0 and V_{th} of the transistors just fix the time scale $t_0 = (q_e/I_0) \exp(V_{th}/(nV_T))$. We clearly observe random transitions between the two metastable NESSs, and that the transition or error rate depends on the power voltage V_{dd} . The waiting time τ between transitions is exponentially distributed, i.e., $P(\tau) = \lambda e^{-\lambda\tau}$. The transition rate λ was estimated by generating trajec-

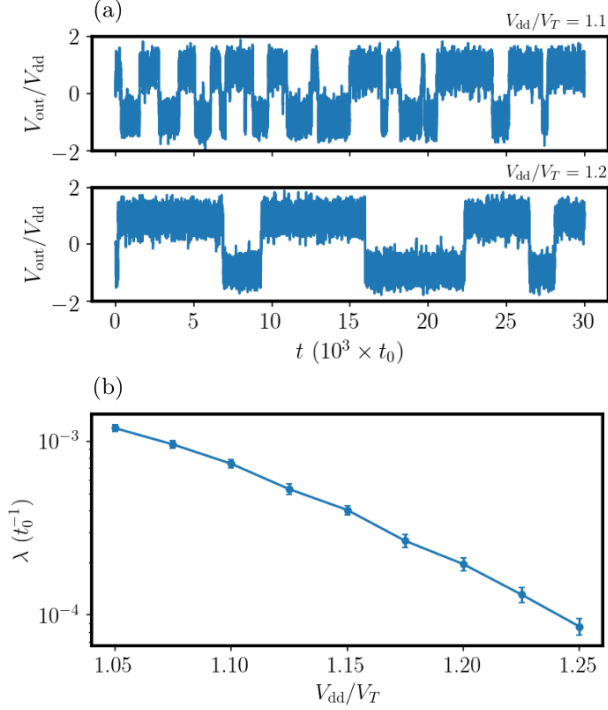


FIG. 14: (a) Output voltage as a function of time for two different power voltages. (b) Transition rate λ as a function of the power voltage. The error bars indicate the uncertainty in the determination of λ , and can be reduced by generating longer trajectories. The parameters in both figures are $V_T = 26$ mV, $C_g = 50$ aF, $C_o = 10^{-2}C_g$, $n = 1$.

tories for different values of V_{dd} . The results are shown in Figure 14-(b), where we see that λ decreases exponentially as V_{dd} is increased.

To complete the construction of the p -bit it is necessary to provide a mechanism to bias its output. There are different ways to achieve this, and here we will focus on the circuit of Figure 15, where the biasing circuit is colored. It works as follows. A bias voltage $V_b > 0$ is coupled to the outputs of the two inverters which form the core of the p -bit through the drain-source channel of two transistors. The transistor influencing the output of the first inverter is an nMOS, while the one influencing the output of the second inverter is a pMOS. Both transistors have their bodies grounded, such that their activation depends only on the gate-body voltage V_{in} (the Poisson rates corresponding to this configuration are discussed in the supplementary material). For $V_{in} = 0$, no transistor is activated and the output of both inverters is very weakly biased towards V_b . For $V_{in} > 0$, conduction through the nMOS is enhanced, while it is suppressed for the pMOS, and therefore only the output of the first inverter is biased towards V_b . In that case the symmetry between the two possible NESSs ($V_{out} \simeq V_{dd}$ or $V_{out} \simeq -V_{dd}$) is broken in favour of the one with $V_{out} \simeq V_{dd}$. The situation is reversed for $V_{in} < 0$. In Figure 16 we show two sample trajectories of the output voltage V_{out} for a positive and

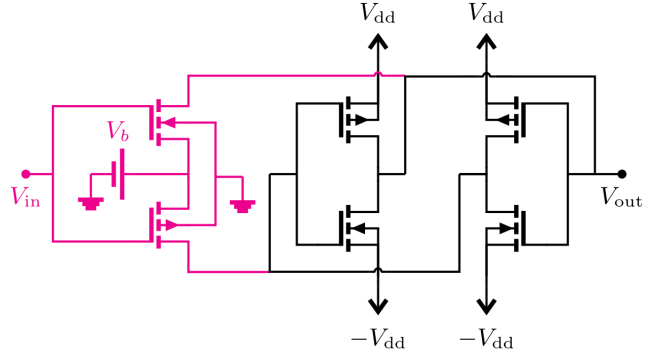


FIG. 15: Complete design of a p -bit. The bistable circuit constituting the bit is shown in black and is the same as in Figure 13-(b). The biasing circuit is shown in magenta.

a negative value of the input voltage V_{in} . We see that V_{out} is indeed biased and spends more time around positive or negative values, respectively. The parameters of the transistors are the same as before, with the exception that the specific current I'_0 of the transistors in the biasing circuit is one order of magnitude lower than the others ($I'_0 = I_0/10$). Also, we considered a bias voltage $V_b = V_T$. In Figure 16-(b) we show how the probability $p = P(V_{out} > 0)$ of the output being positive depends on the input voltage. We see that p is indeed given by a sigmoidal function of V_{in} , similar to the typical activation functions considered in artificial neural networks.

We now analyze the energy consumption of the p -bit. For this we generate stochastic trajectories of duration t and compute the average rate of total heat dissipation in all the transistors, or entropy flow times temperature, $T\langle\dot{\Sigma}_e\rangle = \sum_{\rho>0} -Q_\rho/t$, where Q_ρ is given by Eq. (101). In Figure 17-(a) we show $T\langle\dot{\Sigma}_e\rangle$ as a function of V_{dd} for $V_{in} = 0$. We see that the energy dissipation naturally increases with increasing power voltage, which as we saw before also reduces the transition rate λ (see Figure 13-(b)). For example, for $V_{dd}/V_T \simeq 1.1$ we have an average dissipated heat per generated bit of $\bar{Q} = T\langle\dot{\Sigma}_e\rangle/\lambda \simeq 7 \times 10^3 k_B T \simeq 30$ aJ. This can be compared to the MTJ p -bit in [9], that requires an energy of 2 fJ per random bit, more than two orders of magnitude higher than the previous estimation. Finally, Figure 17-(b) shows $T\langle\dot{\Sigma}_e\rangle$ as a function of V_{in} for $V_{dd}/V_T = 1.15$. We note that $T\langle\dot{\Sigma}_e\rangle$ decreases for increasing $|V_{in}|$. This reduction is associated to the cost of transitions between the two different metastable NESSs, since these transitions become more rare as the bias increases.

VIII. DISCUSSION

We have presented a formalism for the construction of stochastic models of non-linear electronic circuits in a thermodynamically consistent way. Devices with arbitrary I-V curves can be described, provided that their

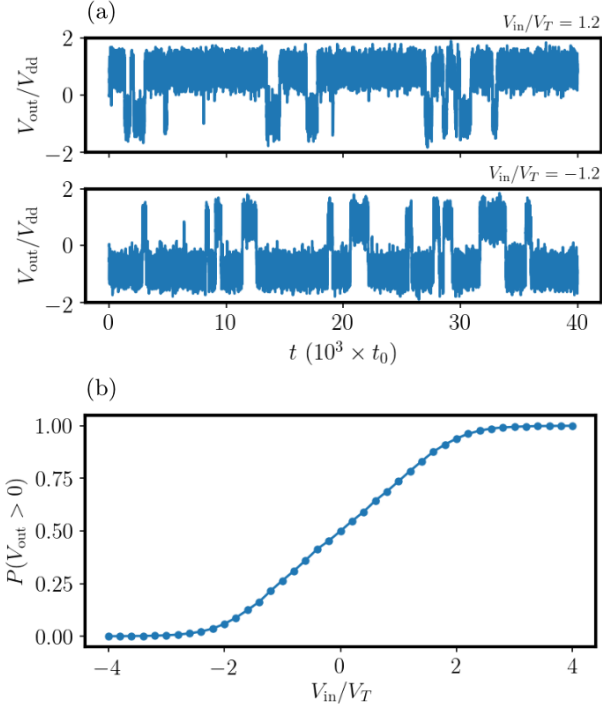


FIG. 16: (a) Output voltage as a function of time for two different input voltages V_{in} . (b) Probability of the output being positive as a function of the input voltage. The parameters in both figures are $V_T = 26$ mV, $V_{dd}/V_T = 1.15$, $V_b/V_T = 1$, $C_g = 50$ aF, $C_o = 10^{-2}C_g$, $n = 1$.

current fluctuations display shot noise. A complete analysis of the stochastic thermodynamics of these models was carried out. The relevant thermodynamic potentials were identified, and the different contributions to the irreversible entropy production were characterized. All this quantities were extended to individual trajectories, based on which we presented different detailed and integral fluctuation theorems. As a first application, we have constructed a stochastic model of a subthreshold CMOS inverter, or NOT gate. We have shown how to analytically find the steady state of the resulting master equation. Based on that solution, we analyzed how the non-equilibrium thermal fluctuations induces modifications in the transfer function of the gate. Also, we showed how to compute the full counting statistics of the current fluctuations and in that way illustrated a detailed fluctuation theorem. Finally, we proposed a full-CMOS design of a probabilistic bit, or binary stochastic network, in which intrinsic thermal noise is exploited as a resource to generate random bits of information in a controllable way. The energy consumption of our design is several times lower than previous proposals.

Of course, the formalism has some limitations, which are important to discuss here. In first place, only devices displaying shot noise can be described. This excludes, for example, regular resistors or MOS transistors in general modes of operation. In addition, it is not possible to de-

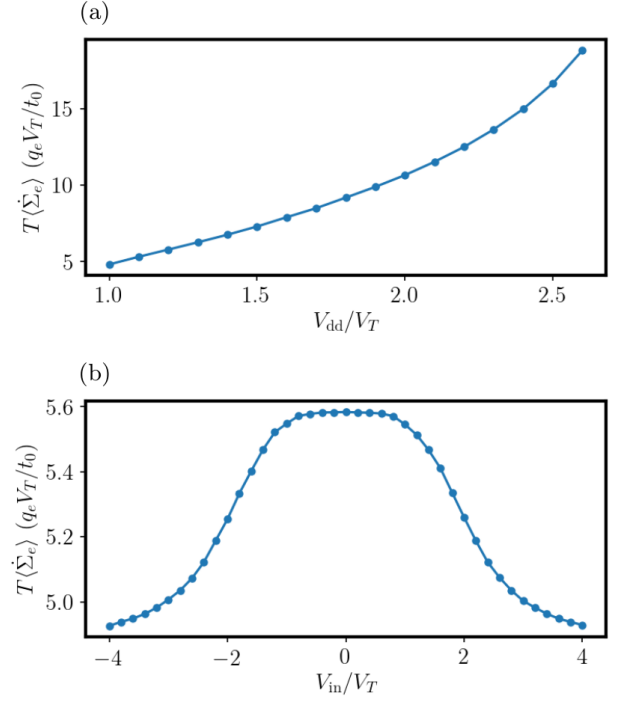


FIG. 17: Average rate of heat dissipation in the steady state. (a) As a function of V_{dd} for $V_{in} = 0$. (b) As a function of V_{in} for $V_{dd}/V_T = 1.15$. The parameters in both figures are $V_T = 26$ mV, $V_b/V_T = 1$, $C_g = 50$ aF, $C_o = 10^{-2}C_g$, $n = 1$.

scribe inertial effects (i.e., inductances). These could be included at the price of mixing discrete and continuous variations of charge. Nevertheless, there is little practical motivation for this, since it is difficult to integrate inductances in nanoscale electronic circuits [80], and therefore inertial effects might only be relevant at extremely high frequencies. There are other possible extensions of the formalism, which are however less relevant, since they capture effects that can be actually emulated with the formalism as presented here. For example, although the stochastic dynamics we have considered is Markovian, non-Markovian effects can be described by considering a given circuit as a part of a larger one (something known as ‘Markovian embedding’). Also, realistic models of noise like $1/f$ or random telegraphic noise [81] could also be constructed within the current formalism [82]. Finally, although we have not focussed on single electron devices, our formalism can be directly applied to them. In that context, there are ‘cotunneling’ effects (events in which two or more transitions happen at the same time, possibly leaving the state of the circuit unchanged) that can become relevant in the Coulomb blockade regime and our formalism does not take into account [30].

Our work offers a connection between different subjects and communities. It shows how to employ the methods of stochastic thermodynamics and single electron devices in order to model other kinds of circuits that are traditionally given a deterministic description, which is later

supplemented by an approximate treatment of the noise. In this way we can describe the fluctuations in those circuits on a rigorous basis. This is relevant and timely, given the impressive reduction in the size of CMOS circuits, and the need for new energy-efficient computing paradigms. On the other hand, the great versatility in the fabrication and control of electronic circuits makes them an excellent platform to study complex phenomena in statistical physics and non-equilibrium thermodynamics. Thus, our formalism also offers a valuable bridge between theory and experiment.

After finishing this work we became aware of a recent article [4], in which a similar stochastic description is employed to compute the error rate of a low-power SRAM memory cell. It should be noted that the transition rates employed in that article are actually not thermodynam-

ically consistent, i.e., they do not respect the local detailed balance conditions (which is however not a serious problem in the regime of operation they consider).

IX. ACKNOWLEDGMENTS

J. C. D. thanks Denis Flandre and Léopold Van Brandt for helpful comments and discussions. N. F. and M. E. acknowledge funding from the European Research Council, project NanoThermo (ERC-2015-CoGAgreement No. 681456), and from the FNR CORE program, project NTEC (C19/MS/13664907). J. C. D. was funded by the FNR Program No. INTER/MOBILITY/18/12987626.

-
- [1] Laszlo B Kish. End of Moore's law: thermal (noise) death of integration in micro and nano electronics. *Physics Letters A*, 305(3-4):144–149, 2002.
 - [2] Shankar Krishnan, Suresh V Garimella, Gregory M Chrysler, and Ravi V Mahajan. Towards a thermal Moore's law. *IEEE Transactions on advanced packaging*, 30(3):462–474, 2007.
 - [3] Alexei O Orlov, Ismo K Hänninen, César O Campos-Aguillón, Rene Celis-Cordova, Michael S McConnell, Gergo P Szakmany, Cameron C Thorpe, Brian T Appleton, Graham P Boechler, Craig S Lent, et al. Experimental tests of the landauer principle in electron circuits, and quasi-adiabatic computing systems. In *Energy Limits in Computation*, pages 177–230. Springer, 2019.
 - [4] Elahe Rezaei, Marco Donato, William R Patterson, Alexander Zaslavsky, and R Iris Bahar. Fundamental thermal limits on data retention in low-voltage CMOS latches and SRAM. *IEEE Transactions on Device and Materials Reliability*, 2020.
 - [5] Krishna V Palem. Energy aware computing through probabilistic switching: A study of limits. *IEEE Transactions on Computers*, 54(9):1123–1137, 2005.
 - [6] Suresh Cheemalavagu, Pinar Korkmaz, Krishna V Palem, Bilge ES Akgul, and Lakshmi N Chakrapani. A probabilistic CMOS switch and its realization by exploiting noise. In *IFIP International Conference on VLSI*, pages 535–541, 2005.
 - [7] Jie Han and Michael Orshansky. Approximate computing: An emerging paradigm for energy-efficient design. In *2013 18th IEEE European Test Symposium (ETS)*, pages 1–6. IEEE, 2013.
 - [8] Kerem Yunus Camsari, Rafatul Faria, Brian M Sutton, and Supriyo Datta. Stochastic p-bits for invertible logic. *Physical Review X*, 7(3):031014, 2017.
 - [9] William A Borders, Ahmed Z Pervaiz, Shunsuke Fukami, Kerem Y Camsari, Hideo Ohno, and Supriyo Datta. Integer factorization using stochastic magnetic tunnel junctions. *Nature*, 573(7774):390–393, 2019.
 - [10] Jan Kaiser, Rafatul Faria, Kerem Y Camsari, and Supriyo Datta. Probabilistic circuits for autonomous learning: A simulation study. *Frontiers in Computational Neuroscience*, 14, 2020.
 - [11] Ya M Blanter and Markus Büttiker. Shot noise in mesoscopic conductors. *Physics reports*, 336(1-2):1–166, 2000.
 - [12] Richard McFee. Self-rectification in diodes and the second law of thermodynamics. *American Journal of Physics*, 39(7):814–820, 1971.
 - [13] NG Van Kampen. Non-linear thermal fluctuations in a diode. *Physica*, 26(8):585–604, 1960.
 - [14] Laurens Weiss and Wolfgang Mathis. A thermodynamical approach to noise in non-linear networks. *International Journal of Circuit Theory and Applications*, 26(2):147–165, 1998.
 - [15] John L Wyatt Jr and Geoffrey J Coram. Nonlinear device noise models: Thermodynamic requirements. Technical report, 1997.
 - [16] John L Wyatt and Geoffrey J Coram. Nonlinear device noise models: Satisfying the thermodynamic requirements. *IEEE transactions on electron devices*, 46(1):184–193, 1999.
 - [17] Léon Brillouin. Can the rectifier become a thermodynamical demon? *Physical Review*, 78(5):627, 1950.
 - [18] Han-Ngee Tan and J Wyatt. Thermodynamics of electrical noise in a class of nonlinear RLC networks. *IEEE transactions on circuits and systems*, 32(6):540–558, 1985.
 - [19] Udo Seifert. Stochastic thermodynamics, fluctuation theorems and molecular machines. *Reports on progress in physics*, 75(12):126001, 2012.
 - [20] Riccardo Rao and Massimiliano Esposito. Detailed fluctuation theorems: A unifying perspective. *Entropy*, 20(9):635, 2018.
 - [21] Xue-Juan Zhang, Hong Qian, and Min Qian. Stochastic theory of nonequilibrium steady states and its applications. Part I. *Physics Reports*, 510(1-2):1–86, 2012.
 - [22] S Ciliberto. Experiments in stochastic thermodynamics: Short history and perspectives. *Physical Review X*, 7(2):021051, 2017.
 - [23] Riccardo Rao and Massimiliano Esposito. Conservation laws and work fluctuation relations in chemical reaction networks. *The Journal of chemical physics*, 149(24):245101, 2018.
 - [24] JMR Parrondo and B Jiménez de Cisneros. Energetics of Brownian motors: a review. *Applied Physics A*,

- 75(2):179–191, 2002.
- [25] R Van Zon, S Ciliberto, and EGD Cohen. Power and heat fluctuation theorems for electric circuits. *Physical review letters*, 92(13):130601, 2004.
 - [26] Nicolas Garnier and Sergio Ciliberto. Nonequilibrium fluctuations in a resistor. *Physical Review E*, 71(6):060101, 2005.
 - [27] Sergio Ciliberto, Alberto Imparato, Antoine Naert, and Marius Tanase. Heat flux and entropy produced by thermal fluctuations. *Physical review letters*, 110(18):180601, 2013.
 - [28] Nahuel Freitas, Jean-Charles Delvenne, and Massimiliano Esposito. Stochastic and quantum thermodynamics of driven RLC networks. *Phys. Rev. X*, 10:031005, Jul 2020.
 - [29] Michel H Devoret, Daniel Estève, Hermann Grabert, G-L Ingold, Hugues Pothier, and Cristian Urbina. Effect of the electromagnetic environment on the Coulomb blockade in ultrasmall tunnel junctions. *Physical review letters*, 64(15):1824, 1990.
 - [30] Christoph Wasshuber. *Computational single-electronics*. Springer Science & Business Media, 2012.
 - [31] DA Bagrets and Yu V Nazarov. Full counting statistics of charge transfer in Coulomb blockade systems. *Physical Review B*, 67(8):085316, 2003.
 - [32] DV Averin and KK Likharev. Coulomb blockade of single-electron tunneling, and coherent oscillations in small tunnel junctions. *Journal of low temperature physics*, 62(3-4):345–373, 1986.
 - [33] D Ali and H Ahmed. Coulomb blockade in a silicon tunnel junction device. *Applied physics letters*, 64(16):2119–2120, 1994.
 - [34] David Andrieux and Pierre Gaspard. Fluctuation theorem for transport in mesoscopic systems. *Journal of Statistical Mechanics: Theory and Experiment*, 2006(01):P01011, 2006.
 - [35] Massimiliano Esposito, Upendra Harbola, and Shaul Mukamel. Fluctuation theorem for counting statistics in electron transport through quantum junctions. *Physical Review B*, 75(15):155316, 2007.
 - [36] Gregory Bulnes Cuetara and Massimiliano Esposito, and Pierre Gaspard. Fluctuation theorems for capacitively coupled electronic currents. *Physical Review B*, 84(16):165114, 2011.
 - [37] JV Koski, T Sagawa, OP Saira, Y Yoon, A Kutvonen, P Solinas, M Möttönen, T Ala-Nissila, and JP Pekola. Distribution of entropy production in a single-electron box. *Nature Physics*, 9(10):644, 2013.
 - [38] Gregory Bulnes Cuetara and Massimiliano Esposito. Double quantum dot coupled to a quantum point contact: a stochastic thermodynamics approach. *New Journal of Physics*, 17(9):095005, 2015.
 - [39] Jukka P Pekola. Towards quantum thermodynamics in electronic circuits. *Nature Physics*, 11(2):118–123, 2015.
 - [40] Giuliano Benenti, Giulio Casati, Keiji Saito, and Robert S Whitney. Fundamental aspects of steady-state conversion of heat to work at the nanoscale. *Physics Reports*, 694:1–124, 2017.
 - [41] Jiayin Gu and Pierre Gaspard. Microreversibility, fluctuations, and nonlinear transport in transistors. *Physical Review E*, 99(1):012137, 2019.
 - [42] Christian C Enz and Eric A Vittoz. Charge-based MOS transistor modeling. *John Wiley & Sons Inc*, 68, 2006.
 - [43] Yannis Tsividis and Colin McAndrew. *Operation and Modeling of the MOS Transistor*. Oxford Univ. Press, 2011.
 - [44] Rahul Sarpeshkar, Tobias Delbruck, and Carver A Mead. White noise in MOS transistors and resistors. *IEEE Circuits and Devices Magazine*, 9(6):23–29, 1993.
 - [45] Jiayin Gu and Pierre Gaspard. Stochastic approach and fluctuation theorem for charge transport in diodes. *Physical Review E*, 97(5):052138, 2018.
 - [46] Jiayin Gu and Pierre Gaspard. Counting statistics and microreversibility in stochastic models of transistors. *arXiv preprint arXiv:2004.13622*, 2020.
 - [47] Alice Wang, Benton H Calhoun, and Anantha P Chandrakasan. *Sub-threshold design for ultra low-power systems*, volume 95. Springer, 2006.
 - [48] Jin-Woo Han, Jae Sub Oh, and M Meyyappan. Vacuum nanoelectronics: Back to the future? - Gate insulated nanoscale vacuum channel transistor. *Applied Physics Letters*, 100(21):213505, 2012.
 - [49] Paul M Riechers. Transforming metastable memories: The nonequilibrium thermodynamics of computation. *arXiv preprint arXiv:1808.03429*, 2018.
 - [50] Alexander B Boyd, Dibyendu Mandal, and James P Crutchfield. Thermodynamics of modularity: Structural costs beyond the landauer bound. *Physical Review X*, 8(3):031036, 2018.
 - [51] David Wolpert and Artemy Kolchinsky. The thermodynamics of computing with circuits. *New Journal of Physics*, 2020.
 - [52] Artemy Kolchinsky and David H. Wolpert. Thermodynamic costs of Turing machines. *Phys. Rev. Res.*, 2(3):033312, Aug 2020.
 - [53] David H Ackley, Geoffrey E Hinton, and Terrence J Sejnowski. A learning algorithm for Boltzmann machines. *Cognitive science*, 9(1):147–169, 1985.
 - [54] Yoshua Bengio, Nicholas Léonard, and Aaron Courville. Estimating or propagating gradients through stochastic neurons for conditional computation. *arXiv preprint arXiv:1308.3432*, 2013.
 - [55] Kashif Nawaz, Léopold Van Brandt, Itamar Levi, François-Xavier Standaert, and Denis Flandre. A security oriented transient-noise simulation methodology: Evaluation of intrinsic physical noise of cryptographic designs. *Integration*, 68:71–79, Sep 2019.
 - [56] Andries J Scholten, Ronald Van Langevelde, Luuk F Tiemeijer, and Dick BM Klaassen. Compact modeling of noise in CMOS. In *IEEE Custom Integrated Circuits Conference 2006*, pages 711–716. IEEE, 2006.
 - [57] Matteo Polettini and Massimiliano Esposito. Irreversible thermodynamics of open chemical networks. I. emergent cycles and broken conservation laws. *The Journal of chemical physics*, 141(2):07B610-1, 2014.
 - [58] Leon O Chua, Charles A Desoer, and Ernest S Kuh. *Linear and nonlinear circuits*. McGraw-Hill College, 1987.
 - [59] Rolf Landauer. Solid-state shot noise. *Physical Review B*, 47(24):16427, 1993.
 - [60] William Shockley. The theory of p-n junctions in semiconductors and p-n junction transistors. *Bell System Technical Journal*, 28(3):435–489, 1949.
 - [61] Hermann Grabert and Michel H Devoret. *Single charge tunneling: Coulomb blockade phenomena in nanostructures*, volume 294. Springer Science & Business Media, 2013.
 - [62] Alexandre Lazarescu, Tommaso Cossetto, Gianmaria Falasco, and Massimiliano Esposito. Large devia-

- tions and dynamical phase transitions in stochastic chemical networks. *The Journal of Chemical Physics*, 151(6):064117, 2019.
- [63] Massimiliano Esposito and Christian Van den Broeck. Second law and landauer principle far from equilibrium. *EPL (Europhysics Letters)*, 95(4):40004, 2011.
- [64] Takahiro Sagawa. Thermodynamics of information processing in small systems. *Progress of theoretical physics*, 127(1):1–56, 2012.
- [65] Takahiro Sagawa. Thermodynamic and logical reversibilities revisited. *Journal of Statistical Mechanics: Theory and Experiment*, 2014(3):P03025, 2014.
- [66] Juan MR Parrondo, Jordan M Horowitz, and Takahiro Sagawa. Thermodynamics of information. *Nature physics*, 11(2):131–139, 2015.
- [67] Thomas Speck and Udo Seifert. Integral fluctuation theorem for the housekeeping heat. *Journal of Physics A: Mathematical and General*, 38(34):L581, 2005.
- [68] Artemy Kolchinsky and David H Wolpert. Entropy production and thermodynamics of information under protocol constraints. *arXiv preprint arXiv:2008.10764*, 2020.
- [69] Tim Schmiedl and Udo Seifert. Optimal finite-time processes in stochastic thermodynamics. *Physical review letters*, 98(10):108301, 2007.
- [70] David A Sivak and Gavin E Crooks. Thermodynamic metrics and optimal paths. *Physical review letters*, 108(19):190602, 2012.
- [71] Patrick R Zulkowski and Michael R DeWeese. Optimal finite-time erasure of a classical bit. *Physical Review E*, 89(5):052140, 2014.
- [72] Karel Proesmans, Jannik Ehrich, and John Bechhoefer. Finite-time Landauer principle. *arXiv preprint arXiv:2006.03242*, 2020.
- [73] Schuyler B Nicholson, Luis Pedro Garcia-Pintos, Adolfo del Campo, and Jason R Green. Time-information uncertainty relations in thermodynamics. *arXiv preprint arXiv:2001.05418*, 2020.
- [74] U Seifert. Fluctuation theorem for a single enzyme or molecular motor. *EPL (Europhysics Letters)*, 70(1):36, 2005.
- [75] André M Timpanaro, Giacomo Guarnieri, John Goold, and Gabriel T Landi. Thermodynamic uncertainty relations from exchange fluctuation theorems. *Physical review letters*, 123(9):090604, 2019.
- [76] Andrew Lucas. Ising formulations of many NP problems. *Frontiers in Physics*, 2:5, 2014.
- [77] Sabpreet Bhatti, Rachid Sbiaa, Atsufumi Hirohata, Hideo Ohno, Shunsuke Fukami, and SN Piramanayagam. Spintronics based random access memory: a review. *Materials Today*, 20(9):530–548, 2017.
- [78] Nahuel Freitas. Stochastic single electronics (SSE). <https://github.com/nfreitas/SSE>, 2020.
- [79] Peng Zheng. *Advanced MOSFET structures and processes for sub-7 nm CMOS technologies*. PhD thesis, UC Berkeley, 2016.
- [80] Timothy M Philip and Matthew J Gilbert. High-performance nanoscale topological inductor. In *2017 75th Annual Device Research Conference (DRC)*, pages 1–2. IEEE, 2017.
- [81] Léopold Van Brandt, Bahak Kazemi Esfeh, Valeriya Kilchytska, and Denis Flandre. Robust Methodology for Low-Frequency Noise Power Analyses in Advanced MOS Transistors. *2019 Joint International EUROSIOI Workshop and International Conference on Ultimate Integration on Silicon (EUROSIOI-ULIS)*, pages 1–4, Apr 2019.
- [82] Xiaoming Chen, Lin Wang, Boxun Li, Yu Wang, Xin Li, Yongpan Liu, and Huazhong Yang. Modeling Random Telegraph Noise as a Randomness Source and its Application in True Random Number Generation. *IEEE Trans. Comput. Aided Des. Integr. Circuits Syst.*, 35(9):1435–1448, Dec 2015.

Supplementary material for “Stochastic Thermodynamics of Non-Linear Electronic Circuits: A Realistic Framework for Thermodynamics of Computation”

Nahuel Freitas,¹ Jean-Charles Delvenne,² and Massimiliano Esposito¹

¹*Complex Systems and Statistical Mechanics, Department of Physics and Materials Science,
University of Luxembourg, L-1511 Luxembourg, Luxembourg*

²*Institute of Information and Communication Technologies, Electronics and Applied Mathematics,
Université catholique de Louvain, Louvain-La-Neuve, Belgium*

PACS numbers:

I. FLUCTUATION THEOREMS

In this section we provide additional details about the derivation of the different fluctuation theorems [1, 2]. The quantities defined in Section VI of the main text will be considered. We begin with the integral fluctuation theorem (IFT) for the total entropy production. To obtain it we need to define the concept of forward and backward protocols, and forward and backward trajectories. A *protocol* is an external manipulation of the circuit that leads to an inhomogeneous time evolution. This is reflected by the explicit time dependence on the Poisson rates $\lambda_\rho(\mathbf{q}, \tau)$. Given a *forward protocol* $\lambda_\rho(\mathbf{q}, \tau)$ up to time t , the corresponding *backward protocol* is given by $\lambda_\rho^\dagger(\mathbf{q}, \tau) = \lambda_\rho(\mathbf{q}, t - \tau)$. In the same way, given a *forward trajectory* \mathbf{Q}_t up to time t taking values \mathbf{q}_τ , the corresponding backward or time-reversed trajectory \mathbf{Q}_t^\dagger takes values $\mathbf{q}_\tau^\dagger = \mathbf{q}_{t-\tau}$. Note that the trajectory probability measure $\mathcal{P}[\cdot]$, defined in Eq. (95) in the main text, depends implicitly on the protocol λ_ρ . Thus, the probability density corresponding to the backward protocol λ_ρ^\dagger is denoted as $\mathcal{P}^\dagger[\cdot]$. Using these definitions, it is possible to see that the following property holds:

$$\frac{\mathcal{P}[\mathbf{Q}_t]}{\mathcal{P}^\dagger[\mathbf{Q}_t^\dagger]} = \prod_{l=1}^{N_t} \frac{\lambda_{\rho_l}(\mathbf{q}_{t_l}, t_l)}{\lambda_{-\rho_l}(\mathbf{q}_{t_l} + \mathbf{q}_e \Delta_{\rho_l}, t_l)} = \exp(\Sigma_e(\mathbf{Q}_t)/k_b), \quad (1)$$

since the factors corresponding to the waiting times between transitions in the forward and backward trajectories cancel out (the first factors in Eq. (95)). The last equality follows from the definition of Σ_e in Eq. (104) in the main text. In the same way, we can write:

$$\frac{\mathcal{P}[\mathbf{Q}_t]P(\mathbf{q}_0, 0)}{\mathcal{P}^\dagger[\mathbf{Q}_t^\dagger]P(\mathbf{q}_t, t)} = \exp(\Sigma(\mathbf{Q}_t)/k_b). \quad (2)$$

Rearranging the factors in the previous expression and integrating over all initial states \mathbf{q}_0 and trajectories \mathbf{Q}_t , we obtain the mentioned IFT:

$$\left\langle e^{-\Sigma/k_b} \right\rangle = 1. \quad (3)$$

A. Detailed fluctuation theorems

To derive the detailed fluctuation theorems it is convenient to introduce a particular splitting of the entropy production with respect to a, in principle arbitrary, reference state. Thus, let us consider an arbitrary probability distribution $P_{\text{ref}}(\mathbf{q}, t)$ over the state space, with an associated entropy and average currents:

$$S_{\text{ref}}(\mathbf{q}, t) = -k_b \log(P_{\text{ref}}(\mathbf{q}, t)), \quad (4)$$

$$J_\rho^{\text{ref}}(\mathbf{q}, t) = \lambda_\rho(\mathbf{q}, t)P_{\text{ref}}(\mathbf{q}, t). \quad (5)$$

Adding and subtracting the change ΔS_{ref} in the reference entropy during a trajectory to the full entropy production of Eq. (105), it is possible to arrive at the following decomposition:

$$\Sigma(\mathbf{Q}_t) = \Sigma_{\text{nc}}(\mathbf{Q}_t) + \Sigma_{\text{c}}(\mathbf{Q}_t), \quad (6)$$

where

$$\Sigma_{\text{nc}}(\mathbf{Q}_t) = -k_b \int_0^t d\tau \sum_{\rho, \mathbf{q}} j_\rho(\mathbf{q}, \tau) D_{\mathbf{q}}^\rho[\log(\mathcal{J}^{\text{ref}})|_\tau], \quad (7)$$

and

$$\begin{aligned} \Sigma_{\text{c}}(\mathbf{Q}_t) &= \int_0^t d\tau \partial_t S_{\text{ref}}(\mathbf{q}_\tau, \tau) - \Delta D \\ &= \Sigma_{\text{d}}(\mathbf{Q}_t) - \Delta D. \end{aligned} \quad (8)$$

In the last expression, ΔD is the change in the stochastic relative entropy between the actual distribution and the reference one, $D(t) = k_b \log(P(\mathbf{q}_t, t)/P_{\text{ref}}(\mathbf{q}_t, t))$. The subindices nc, c, and d, stand for ‘non-conservative’, ‘conservative’ and ‘driving’, respectively. The physical meaning of these different contributions to the entropy production will be clarified in the following.

Before proceeding it is necessary to update the previous definitions of forward and backward protocols. In the following by forward protocol we consider a process that is initiated at time $t = 0$ by selecting an initial state according to the distribution $P_{\text{ref}}(\mathbf{q}, 0)$, and subsequently evolves according to the rates $\lambda_\rho(\mathbf{q}, \tau)$ up to time t . In the backward protocol, the initial state is drawn from the distribution $P_{\text{ref}}(\mathbf{q}, t)$, and evolves with rates $\lambda_\rho^\dagger(\mathbf{q}, \tau)$. Crucially, the time inversion is also applied to the reference distribution, i.e., during the backward trajectory the reference distribution is $P_{\text{ref}}^\dagger(\mathbf{q}, \tau) = P_{\text{ref}}(\mathbf{q}, t - \tau)$. Under these conditions, it can be seen that the quantities Σ_{nc} and Σ_{d} are odd under time inversion:

$$\Sigma_{\text{nc}}(\mathbf{Q}_t^\dagger) = -\Sigma_{\text{nc}}(\mathbf{Q}_t) \quad \text{and} \quad \Sigma_{\text{d}}(\mathbf{Q}_t^\dagger) = -\Sigma_{\text{d}}(\mathbf{Q}_t). \quad (9)$$

Owing to this ‘involution’ property, as explained in [2], the following *detailed fluctuation theorem* (DFT) holds:

$$\frac{P(\Sigma_{\text{nc}}, \Sigma_{\text{d}})}{P^\dagger(-\Sigma_{\text{nc}}, -\Sigma_{\text{d}})} = \exp((\Sigma_{\text{nc}} + \Sigma_{\text{d}})/k_b). \quad (10)$$

Here, $P(\Sigma_{\text{nc}}, \Sigma_{\text{d}})$ is the probability of obtaining the values Σ_{nc} and Σ_{d} of the observables $\Sigma_{\text{nc}}(\mathbf{Q}_t)$ and $\Sigma_{\text{d}}(\mathbf{Q}_t)$ during the forward protocol, and $P^\dagger(\Sigma_{\text{nc}}, \Sigma_{\text{d}})$ is the same for the backward protocol. Integrating the previous expression over all possible values of Σ_{nc} and Σ_{d} we obtain a new IFT:

$$\left\langle e^{-(\Sigma_{\text{nc}} + \Sigma_{\text{d}})/k_b} \right\rangle = 1. \quad (11)$$

Notice that this is not equivalent to the IFT of Eq. (3). Also, we note that a DFT like Eq. (10) for the full entropy production Σ does not hold in general, due to the fact that this observable does not satisfy the involution property.

We now introduce a particular choice for the reference distribution, that naturally leads to the ‘conservative’ and ‘non-conservative’ labels introduced before. This choice is given by the equilibrium distribution of Eq. (80) in the main text, at a reference inverse temperature $\beta_{\text{ref}} = 1/(k_b T_{\text{ref}})$:

$$P_{\text{ref}}(\mathbf{q}, t) = \frac{e^{-\beta_{\text{ref}} \Psi(\mathbf{q}, t)}}{Z_{\text{ref}}(t)} \prod_{\nu_c} \delta[L_{\nu_c}(\mathbf{q}), L_{\nu_c}(\mathbf{q}^{(i)})]. \quad (12)$$

In this case the non-conservative contribution is

$$\Sigma_{\text{nc}} = \Sigma_e + (\sum_\rho Q_\rho + \sum_{n_f} W_{n_f})/T_{\text{ref}}, \quad (13)$$

and the driving contribution is

$$\Sigma_{\text{d}} = (W_\Psi - \Delta \langle \Omega \rangle_{\text{ref}})/T_{\text{ref}}, \quad (14)$$

where Ω is the potential defined in Eq. (84) in the main text and

$$\Delta \langle \Omega \rangle_{\text{ref}} = -k_b T_{\text{ref}} \log \left(\frac{Z_{\text{ref}}(t)}{Z_{\text{ref}}(0)} \right). \quad (15)$$

Note that this contribution to Σ_{d} is not fluctuating, i.e., it does not depend on the actual trajectory. We see that if the potential $\Psi(\mathbf{q}, t)$ is time independent, then the driving contribution vanishes. In the general case we have:

$$\Sigma_{\text{nc}} + \Sigma_{\text{d}} = \Sigma_e + (\Delta \Psi - \Delta \langle \Omega \rangle_{\text{ref}})/T_{\text{ref}}. \quad (16)$$

In isothermal conditions where $\beta_\rho = \beta_{\text{ref}} = (k_b T)^{-1}$ for all ρ , since $\Sigma_e = -\sum_\rho Q_\rho/T$, the non-conservative contribution is simplified to:

$$\Sigma_{\text{nc}} = \sum_{n_f} W_{n_f}/T. \quad (17)$$

Also, since the individual work contributions satisfy the involution property $W_{n_f}(\mathbf{Q}_t) = -W_{n_f}(\mathbf{Q}_t^\dagger)$, the DFT of Eq. (10) can be generalized to:

$$\frac{P(\{W_{n_f}\}, W_\Psi)}{P^\dagger(\{-W_{n_f}\}, -W_\Psi)} = \exp((W_\Psi + \sum_{n_f} W_{n_f})/(k_b T)), \quad (18)$$

where $P(\{W_{n_f}\}, W_\Psi)$ is the probability to observe the values $\{W_{n_f}\}$ of work for each of the fundamental forces and of W_Ψ for the driving work during the forward protocol, while $P^\dagger(\{W_{n_f}\}, W_\Psi)$ is the same for the backward protocol.

B. Adiabatic-Nonadiabatic decomposition

In the context of Eq. (10), another relevant option for the reference state is given by the instantaneous stationary distribution. That is, we consider the distribution $P_{\text{ref}}(\mathbf{q}, t)$ that is left invariant given the transition rates $\lambda_\rho(\mathbf{q}, t)$ for a fixed time t :

$$0 = \sum_\rho D_q^\rho[\mathcal{J}^{\text{ref}}|_t] \quad \forall \mathbf{q}. \quad (19)$$

Thus, $P_{\text{ref}}(\mathbf{q}, t)$ is the stationary distribution to which the system would eventually relax if the transition rates were fixed at their values at time t . For slowly varying protocols $d_t \langle \Sigma_{\text{nc}} \rangle$ approximates the entropy production in the instantaneous steady state, while $\langle \Sigma_c \rangle$ is associated to the driving and relaxation. Accordingly, these contributions are now referred to as ‘adiabatic’ and ‘non-adiabatic’, respectively. As explained in [1], in this case both expected values are positive: $\langle \Sigma_{\text{nc}} \rangle \geq 0$ and $\langle \Sigma_c \rangle \geq 0$.

If the instantaneous stationary distribution is an equilibrium state, and therefore satisfies the global detailed balance conditions $D_q^\rho[\mathcal{J}^{\text{ref}}] = 0$ for all \mathbf{q} and ρ , then the adiabatic contribution Σ_{nc} is strictly zero (at the trajectory level, not just on average). Thus, the DFT of Eq. (10) reduces to:

$$\frac{P(\Sigma_d)}{P^\dagger(-\Sigma_d)} = \exp(\Sigma_d/k_b). \quad (20)$$

On the other hand, if the circuit parameters do not depend on time, $\Sigma_d = 0$ and we have

$$\frac{P(\Sigma_{\text{nc}})}{P(-\Sigma_{\text{nc}})} = \exp(\Sigma_{\text{nc}}/k_b). \quad (21)$$

Note that only the probabilities for the forward protocol appear in the previous equation, since in this case the forward and backward protocols are equivalent (the starting distributions are the same, i.e., the stationary one, and there is no driving).

C. Asymptotic average rates

In typical out of equilibrium processes the entropy production for long times is dominated by the entropy flow Σ_e , since, contrary to the change ΔS in the internal entropy, it is an unbounded and time extensive quantity (we assume that the state \mathbf{q} dwells in a finite region of the state space). This property can be exploited to obtain a DFT for the stochastic asymptotic average work rates, or average powers. To see this we first note the following general identity:

$$\begin{aligned} \Sigma_{\text{nc}} + \Sigma_d &= \Sigma_e + \Delta S + \Delta D \\ &= \Sigma_e + \Delta S_{\text{ref}}, \end{aligned} \quad (22)$$

where $\Delta S_{\text{ref}} = -k_b \log(P_{\text{ref}}(\mathbf{q}_t, t)/P_{\text{ref}}(\mathbf{q}_0, 0))$. If we are considering a process in which the entropy production Σ is time extensive, then the entropy flow Σ_e should also be time extensive, since ΔS_{ref} is bounded and cannot grow indefinitely. Thus, recalling that $\Sigma_e = -\sum_\rho Q_\rho/T_\rho$, for long times we can write:

$$\Sigma_{\text{nc}} + \Sigma_d = -t \sum_\rho \bar{Q}_\rho(t)/T_\rho + \mathcal{O}(t^0), \quad (23)$$

where

$$\bar{\dot{Q}}_\rho(t) = \frac{1}{t} \int_0^t d\tau \dot{Q}_\rho(\tau) \quad (24)$$

is the average heat rate of device ρ during a trajectory. Thus, neglecting the non time-extensive terms in $\Sigma_{nc} + \Sigma_d$, it is possible to arrive to the following result:

$$\frac{P(\{\bar{\dot{Q}}_\rho\})}{P^\dagger(\{-\bar{\dot{Q}}_\rho\})} \simeq e^{-t \sum_\rho \beta_\rho \bar{\dot{Q}}_\rho} \quad (25)$$

for long times. This result can be further simplified for isothermal conditions, since in that case $T\Sigma_e = -Q = W_\Psi - \Delta\Psi + \sum_{n_f} W_{n_f}$. Again, assuming that the circuit state \mathbf{q} is restricted to a finite region of the state space during the trajectory, only the quantities W_Ψ and W_{n_f} can be time extensive, since $\Delta\Psi$ is bounded. Thus, again neglecting non time extensive terms, for long times we can write:

$$\frac{P(\{\bar{W}_{n_f}\}, \bar{W}_\Psi)}{P^\dagger(\{-\bar{W}_{n_f}\}, -\bar{W}_\Psi)} \simeq e^{t\beta(\bar{W}_\Psi + \sum_{n_f} \bar{W}_{n_f})}, \quad (26)$$

where we have defined the average work rates $\bar{W}_\Psi = t^{-1}W_\Psi$ and $\bar{W}_{n_f} = t^{-1}W_{n_f}$.

II. STEADY STATE OF THE CMOS INVERTER

In this section we find the steady state distribution for the NOT gate using the ladder operator method introduced in [3], where it was applied to a diode in thermal equilibrium. Thus, we define the ladder operator $X = e^{q_e d/dq}$ acting on functions over the state space:

$$Xf(q) = f(q + q_e), \quad \text{and therefore} \quad X^{-1}f(q) = f(q - q_e). \quad (27)$$

Then we can write the master equation for the NOT gate as

$$(q_e/I_0) e^{V_{th}/(nV_T)} d_t P(q, t) = \left\{ X^{-1} \left[\alpha_n \gamma e^{-q/(2C_o V_T)} + \alpha_p \right] + X \left[\alpha_n + \alpha_p \gamma e^{q/(2C_o V_T)} \right] - \left[\alpha_n \left(\gamma e^{-q/(2C_o V_T)} + 1 \right) + \alpha_p \left(\gamma e^{q/(2C_o V_T)} + 1 \right) \right] \right\} P(q, t), \quad (28)$$

where we have defined the constants

$$\alpha_n = e^{(V_{in} - V_{ss})/(nV_T)} \quad \alpha_p = e^{(V_{dd} - V_{in})/(nV_T)} \quad \gamma = e^{-(\Delta V/2 + q_e/(4C_o))/V_T} \quad q_T = 2C_o V_T. \quad (29)$$

Reorganizing the terms in Eq. (28) and using the identity $(X^{-1} - 1) = -(X - 1)X^{-1}$ we obtain:

$$(q_e/I_0) e^{V_{th}/(nV_T)} d_t P(q, t) = (X - 1) \left\{ \alpha_n \left[1 - X^{-1} \gamma e^{-q/q_T} \right] + \alpha_p \left[\gamma e^{q/q_T} - X^{-1} \right] \right\} P(q, t). \quad (30)$$

From this, we can conclude that for the stationary state $P_{st}(q)$ the quantity

$$\left\{ \alpha_n \left[1 - X^{-1} \gamma e^{-q/q_T} \right] + \alpha_p \left[\gamma e^{q/q_T} - X^{-1} \right] \right\} P_{st}(q) \quad (31)$$

should be constant. Also, this constant should be 0, since $P_{st}(q) \rightarrow 0$ for $q \rightarrow \pm\infty$. In this way we arrive at the following recurrence relation:

$$\left(\alpha_n + \alpha_p \gamma e^{q/q_T} \right) P_{st}(q) = \left(\alpha_p + \alpha_n \gamma e^{-(q - q_e)/q_T} \right) P_{st}(q - q_e), \quad (32)$$

which can be iterated in order to find $P_{st}(q)$. Its physical meaning is transparent: the left hand side is proportional to the probability of the transition $q \rightarrow q - q_e$, while the right hand side is proportional to the probability of the transition $q - q_e \rightarrow q$. The condition that these two probabilities must balance each other uniquely determines the steady state. At equilibrium it reduces to the detailed balance condition. Furthermore, by summing the previous relation over all values of q we obtain:

$$\alpha_n - \alpha_n \gamma \left\langle e^{-q/q_T} \right\rangle_{st} = \alpha_p - \alpha_p \gamma \left\langle e^{q/q_T} \right\rangle_{st}, \quad (33)$$

where $\langle \cdot \rangle_{st}$ indicates averaging over the stationary distribution. This condition is just equivalent to demanding that in the stationary state the average current through both transistors must be the same. In the next section we use this relation to obtain an approximate analytical expression for the transfer function of the gate.

III. STOCHASTIC CORRECTIONS TO THE TRANSFER FUNCTION OF THE CMOS INVERTER

The relation of Eq. (33) can be rewritten as:

$$\alpha_n - \alpha_n \gamma e^{-\langle q \rangle_{st}/q_T} \left\langle e^{-(q - \langle q \rangle_{st})/q_T} \right\rangle_{st} = \alpha_p - \alpha_p \gamma e^{\langle q \rangle_{st}/q_T} \left\langle e^{(q - \langle q \rangle_{st})/q_T} \right\rangle_{st}. \quad (34)$$

Now, one can notice that the quantities $\langle \exp(\pm(q - \langle q \rangle_{st})/q_T) \rangle_{st}$ will equal 1 in a deterministic limit. Their deviation from this value is a measure of the thermal fluctuations. If known, the previous equation could be solved to obtain $\langle q \rangle_{st}$. One possible approximation is to compute them using the equilibrium distribution. Doing so, one obtains:

$$\left\langle e^{\pm(q - \langle q \rangle_{eq})/q_T} \right\rangle_{eq} = e^{q_e/(2q_T)}. \quad (35)$$

Therefore, under this approximation, the average output charge $\langle q \rangle$ can be determined by finding the positive root of the following equation:

$$\alpha_p \gamma_0 x^2 + (\alpha_n - \alpha_p) x - \alpha_n \gamma_0 = 0, \quad (36)$$

where $\gamma_0 = \exp(-\Delta V/(2V_T))$, and we have defined $x = \exp(\langle q \rangle_{st}/q_T)$. This is precisely the same solution one finds with a classical deterministic analysis of the circuit (i.e., by finding the *fixed* value of the output charge or voltage that makes the currents through both transistors equal). Thus, we see that a deterministic analysis is only compatible with the assumption that the fluctuations in the circuit are the same as in equilibrium. To quantify the deviations of the actual fluctuations from equilibrium we define quantities a and b as follows:

$$\left\langle e^{\pm(q - \langle q \rangle_{st})/q_T} \right\rangle_{st} = e^{q_e/(2q_T)} e^{a \pm b}. \quad (37)$$

In this way, the parameters a and b account for the deviations with respect to equilibrium of the even central moments and odd central moments, respectively (if the stationary distribution is always symmetric around the mean value then $b = 0$). Then, given a and b , the output charge $\langle q \rangle$ is determined by the positive root of:

$$\alpha_p \gamma_0 e^{a+b} x^2 + (\alpha_n - \alpha_p) x - \alpha_n \gamma_0 e^{a-b} = 0. \quad (38)$$

IV. FULL COUNTING STATISTICS OF THE CURRENTS

In this section we review a semi-analytical method to evaluate the characteristic function of the current fluctuations [4, 5]. The main quantities we will consider are the numbers $\{N_\rho(t)\}$ indicating the number of charges that went through a given device ρ during a time t :

$$N_\rho(t) = \int_0^t d\tau I_\rho(\tau)/q_e, \quad (39)$$

where $I_\rho(\tau) = -q_e \sum_{\mathbf{q}} D_{\mathbf{q}}^\rho[\mathbf{j}]|_\tau$ is the stochastic electric current during a trajectory (see Section VI in the main text). The characteristic function for these stochastic quantities is:

$$\Phi(\chi) = \left\langle e^{i \sum_{\rho>0} \chi_\rho N_\rho} \right\rangle_{\mathbf{q}_t}, \quad (40)$$

where χ is a vector of ‘counting fields’ $\chi_\rho > 0$, one for each device, and the average is taken over all trajectories compatible with a given initial distribution. The function $\Phi(\chi)$ can be evaluated in terms of a modified version of the generator associated to the master equation for the circuit. Before proceeding it is convenient to define this generator as follows. First, we write the master equation (Eq. (12) in the main text) in matrix form:

$$d_t |P(t)\rangle = -\hat{L}(t) |P(t)\rangle \quad \text{with} \quad |P(t)\rangle = \sum_{\mathbf{q}} P(\mathbf{q}, t) |\mathbf{q}\rangle. \quad (41)$$

Thus, $\{|\mathbf{q}\rangle\}$ is a orthonormal basis in which each vector is associated to one particular circuit state ($\langle \mathbf{q} | \mathbf{q}' \rangle = \delta_{\mathbf{q}, \mathbf{q}'}$), and $|P(t)\rangle$ is a vector encoding the probability distribution at time t . The generator $\hat{L}(t)$ is split into diagonal and non-diagonal parts:

$$\hat{L}(t) = \hat{\gamma}(t) - \hat{\Gamma}(t) \quad \text{with} \quad \hat{\gamma}(t) = \sum_{\mathbf{q}} |\mathbf{q}\rangle \langle \mathbf{q}| \gamma(\mathbf{q}, t), \quad \text{and} \quad \hat{\Gamma}(t) = \sum_{\mathbf{q}} \sum_{\rho} |\mathbf{q}\rangle \langle \mathbf{q} - q_e \Delta_\rho| \lambda_\rho(\mathbf{q} - q_e \Delta_\rho). \quad (42)$$

Then, the diagonal part $\hat{\gamma}(t)$ encodes the escape rates $\gamma(\mathbf{q}, t) = \sum_{\rho} \lambda_{\rho}(\mathbf{q}, t)$, while the non-diagonal part encodes the transition rates. Since the evolution given by $\hat{L}(t)$ preserves the normalization of the distribution $|P(t)\rangle$, it always has a zero eigenvalue, with a left eigenvector $|l_0\rangle = (1, 1, \dots, 1)^T$ and a right eigenvector $|P_{\text{st}}\rangle$, where $P_{\text{st}}(\mathbf{q}, t)$ is the stationary state, that we assume to be unique. Also, we will consider the modified generator:

$$L_{\mathbf{X}}(t) = \hat{\gamma}(t) - \hat{\Gamma}_{\mathbf{X}}(t), \quad \text{with} \quad \hat{\Gamma}_{\mathbf{X}}(t) = \sum_{\mathbf{q}} \sum_{\rho} |\mathbf{q}\rangle \langle \mathbf{q} - q_e \mathbf{\Delta}_{\rho}| \lambda_{\rho}(\mathbf{q} - q_e \mathbf{\Delta}_{\rho}) e^{i\chi_{|\rho|} s(\rho)}, \quad (43)$$

where $\chi_{|\rho|}$ is the counting field associated with device ρ (note that the absolute value is necessary since in the previous expression the sum is over transitions, and therefore ρ takes positive and negative values), and $s(\rho)$ is just the sign of ρ . It is important to note that the modified generator $\lambda_{\mathbf{X}}(t)$ does not preserve normalization. In fact, as shown in [4], the characteristic function defined in Eq. 40 can be expressed as:

$$\Phi(\mathbf{X}) = \langle l_0 | T_{\tau} e^{-\int_0^t d\tau L_{\mathbf{X}}(\tau)} | P(0) \rangle, \quad (44)$$

where T_{τ} is the time-ordering operator and $|P(0)\rangle$ is the initial state. For $\mathbf{X} = 0$, $U(t, 0) = \exp(-\int_0^t d\tau L_{\mathbf{X}}(\tau))$ is just the evolution operator corresponding to the master equation. In that case, the previous equation is the sum of the probabilities in $|P(t)\rangle$ and therefore we have $\Phi(0) = 1$. For circuits with constant parameters we have the simpler result:

$$\Phi(\mathbf{X}) = \langle l_0 | e^{-t L_{\mathbf{X}}} | P(0) \rangle. \quad (45)$$

The previous expression can be numerically evaluated by truncating the state space to an appropriate number of dimensions and constructing the operator $L_{\mathbf{X}}$ in that truncated space. Once the characteristic function $\Phi(\mathbf{X})$ has been obtained, the probability distribution for the quantities $\{N_{\rho}(t)\}$ can be computed as:

$$P(\{N_{\rho}\}) = \int_{-\pi}^{\pi} \prod_{\rho>0} \frac{d\chi_{\rho}}{2\pi} \Phi(\mathbf{X}) e^{-i \sum_{\rho>0} \chi_{\rho} N_{\rho}}. \quad (46)$$

This is how the results of Section VII A in the main text were obtained.

Finally, we mention that from the previous definitions it is possible to obtain a fluctuation theorem that is a special case of Eq. (18) in the main text. Indeed, for time-independent circuits and isothermal settings ($\beta\rho = \beta$ for all ρ), we have the following symmetry of the operator $\hat{\Gamma}_{\mathbf{X}}$:

$$\hat{\Gamma}_{\mathbf{X}} = \hat{P}_{\text{eq}} \hat{\Gamma}_{\bar{\mathbf{X}}}^T \hat{P}_{\text{eq}}^{-1}, \quad (47)$$

where \hat{P}_{eq} is a diagonal operator encoding the equilibrium distribution $P_{\text{eq}}(\mathbf{q}) = Z^{-1} \exp(-\beta\Psi(\mathbf{q}))$ (Eq. (80) in the main text), and $\bar{\mathbf{X}} = \{-\chi_{\rho} + iq_e \beta \Delta V_{n_f(\rho)}\}_{\rho>0}$, where $\Delta V_{n_f(\rho)}$ is the voltage difference associated to device ρ , as defined in Section V E in the main text. From this symmetry it follows that $\Phi(\mathbf{X}) = \Phi(\bar{\mathbf{X}})$, and consequently

$$\frac{P(\{N_{\rho}\})}{P(\{-N_{\rho}\})} = e^{q_e \beta \sum_{\rho>0} \Delta V_{n_f(\rho)} N_{\rho}}, \quad (48)$$

which is our final result.

V. TRANSITION RATES FOR MOS TRANSISTORS WITH GROUNDED BODY

In this section we discuss the Poisson rates that one should assign to the drain-source conduction channel of a MOS transistor in which the body is grounded, instead of being connected to the source, as in Figure 3-(a). As discussed in the main text (recall Eq. (42)), in that case the symmetry between drain and source is preserved, but the mean current is not a function of the voltage bias $V_D - V_S$ only:

$$\langle I_D \rangle = I_0 e^{(V_G - V_{\text{th}})/(nV_T)} (e^{-V_S/V_T} - e^{-V_D/V_T}). \quad (49)$$

This is natural since the body potential introduces an internal voltage reference. However, the Poisson rates can still be considered functions of the voltage bias $V_D - V_S$ if we regard V_D and V_S as extra control parameters, in addition to V_G . Explicitly, we can consider the rates:

$$\begin{aligned} \lambda_+ &= (I_0/q_e) e^{-V_T/(nV_{\text{th}})} e^{V_G/(nV_{\text{th}})} e^{-V_D/V_{\text{th}}} e^{(V_D - V_S)/V_{\text{th}}} \\ \lambda_- &= (I_0/q_e) e^{-V_T/(nV_{\text{th}})} e^{V_G/(nV_{\text{th}})} e^{-V_S/V_{\text{th}}} e^{-(V_D - V_S)/V_{\text{th}}}. \end{aligned} \quad (50)$$

-
- [1] Riccardo Rao and Massimiliano Esposito. Conservation laws and work fluctuation relations in chemical reaction networks. *The Journal of chemical physics*, 149(24):245101, 2018.
 - [2] Riccardo Rao and Massimiliano Esposito. Detailed fluctuation theorems: A unifying perspective. *Entropy*, 20(9):635, 2018.
 - [3] NG Van Kampen. Non-linear thermal fluctuations in a diode. *Physica*, 26(8):585–604, 1960.
 - [4] DA Bagrets and Yu V Nazarov. Full counting statistics of charge transfer in Coulomb blockade systems. *Physical Review B*, 67(8):085316, 2003.
 - [5] Massimiliano Esposito, Upendra Harbola, and Shaul Mukamel. Fluctuation theorem for counting statistics in electron transport through quantum junctions. *Physical Review B*, 75(15):155316, 2007.