Models, metrics, and their formulas for typical electric power system resilience events

Ian Dobson, Iowa State University, March 2023

Abstract—We define Poisson process models for outage and restore processes in power system resilience events in terms of their rates. These outage and restore processes easily yield the performance curves that track the evolution of resilience events, and their area, nadir and duration are standard resilience metrics. We derive explicit and intuitive formulas for these metrics for mean performance curves in terms of the model parameters; these parameters can be estimated from utility data. This clarifies the calculation of metrics of typical resilience events, and shows what they depend on. We give examples of the metric formulas using a typical model of transmission system outages with lognormal rate restoration, and also for constant rate and exponential rate restorations. We give similarly nice formulas for the area metric for empirical power system data.

I. MODELING RESILIENCE PROCESSES WITH POISSON RATES

A resilience event is when many outages bunch up due to stress from extremes such as bad weather. Performance curves track the progress in time of outages and restores during a resilience event as shown by $\overline{P}(t)$ in Fig. 1. The dimensions of these performance curves are standard metrics of resilience [1]-[5]. Recent research reveals practical stochastic models of the outages and restores and the resulting performance curves in transmission [4] and distribution systems [5], [6]. These models are Poisson processes and their parameters can be estimated from standard data recorded by utilities [4]–[6]. The mean values of these stochastic models describe the evolution of typical resilience events. This letter derives formulas for the area, nadir and duration metrics describing the dimensions of the mean performance curve. This gives explicit formulas for the metrics for typical resilience events in terms of parameters that can be estimated from observed data. The formulas for area are particularly insightful. Of course actual resilience events (realizations of the Poisson processes) show variability about their mean behavior, but the mean behavior is useful in describing a typical behavior. We refer to [1]-[5] for further background and literature review.

The outages are modeled as occurring in a Poisson process of rate $\lambda_O(t)$, varying with time t. The outages occur in the time interval $[0,o_b]$ and $\lambda_O(t)$ is zero outside the interval $[0,o_b]$. The restores are modeled as occurring in a Poisson process of rate $\lambda_R(t)$ in the time interval $[r_a,r_b]$. $\lambda_R(t)$ is zero outside the interval $[r_a,r_b]$. $r_a\geq 0$ and r_b can be ∞ . We assume that there are n outages and n restores in the event. Given the n outages and n restores, the outages and restores are distributed in time according to the probability

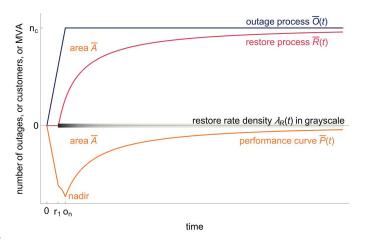


Fig. 1. Example of mean processes for a resilience event with constant rate outages in $[0,o_n]$ and restores for $t\geq r_1$ at a slowing, lognormal rate $\lambda_R(t)$. The area \overline{A} under $\overline{P}(t)$ is the same as the area between $\overline{O}(t)$ and $\overline{R}(t)$.

distributions $\lambda_O(t)/n$ and $\lambda_R(t)/n$ respectively [4]. One difference with the Poisson models in [4] is that [4] in extracting an outage or restore model from the data needs to define the start time of the process with an initial outage or restore, causing an initial delta function in the Poisson rate, whereas here when applying a Poisson outage or restore model, we can fix start times for the outage and restore processes (0 and r_a respectively) and then assume the outage or restore rate. This simplifies all the formulas.

The mean cumulative number of outages and the mean cumulative number of restores at time t are

$$\overline{O}(t) = \int_0^t \lambda_O(\tau) d\tau \text{ and } \overline{R}(t) = \int_0^t \lambda_R(\tau) d\tau.$$
 (1)

The mean outage and restore rates $\lambda_O(t)$, $\lambda_R(t)$ and mean cumulative outages and restores $\overline{O}(t)$, $\overline{R}(t)$ easily generalize to track outages and restores of other quantities such as customers in a distribution system [5] or MVA ratings of lines in a transmission system [7]. For example, $\lambda_O(t)$ can be the mean rate at which customers outage and $\overline{O}(t)$ can be the mean cumulative customers outaged. These choices change the vertical axis on which $\overline{O}(t)$, $\overline{R}(t)$, $\overline{P}(t)$ are plotted. The mean performance curve $\overline{P}(t)$ is the negative of the mean cumulative unrestored amount of the quantity tracked:

$$\overline{P}(t) = \overline{R}(t) - \overline{O}(t) \tag{2}$$

At time 0 at the start of the event, we have $\overline{P}(0) = 0$. $\overline{P}(t)$ becomes negative during the event as shown in Fig. 1. Eventually, at time ∞ , all the outages are restored, $\overline{P}(\infty) = 0$

I. Dobson is with the Department of Electrical and Computer Engineering, Iowa State University, Ames Iowa USA; email: dobson@iastate.edu. Support from USA NSF grant 2153163 is gratefully acknowledged.

and $\overline{O}(\infty)=\overline{R}(\infty)=n_c$. Depending on which quantity is tracked, n_c is the total number of outages n, the total number of customers outaged, or the total MVA of lines outaged. Since $n_c=\overline{O}(\infty)=\int_0^\infty \lambda_O(\tau)d\tau=\overline{R}(\infty)=\int_0^\infty \lambda_R(\tau)d\tau$, $f_o(t)=\lambda_O(t)/n_c$ and $f_r(t)=\lambda_R(t)/n_c$ integrate to one, and are probability distributions of the outage times and restore times respectively. We write $\overline{o}=\int_0^\infty \tau f_o(\tau)d\tau$ for the mean outage time and $\overline{r}=\int_0^\infty \tau f_r(\tau)d\tau$ for the mean restore time.

II. AREA AND NADIR METRICS

We give general formulas for the area under the mean performance curve. This area (regarded as a positive area by including the minus sign) is

$$\overline{A} = -\int_0^\infty \overline{P}(t)dt = \int_0^\infty [\overline{O}(t) - \overline{R}(t)]dt \tag{3}$$

Moreover, \overline{A} is also the mean of the area A under the performance curve P(t), since $\overline{A} = -\int_0^\infty \mathrm{E} P(t) dt = -\mathrm{E} \int_0^\infty P(t) dt = \mathrm{E} A$.

Integrating (3) by parts and using $\overline{P}(0) = \overline{P}(\infty) = 0$, and $\lambda_O(t) = \overline{O}'(t)$, $\lambda_R(t) = \overline{R}'(t)$ gives the very nice formulas

$$\overline{A} = -\int_0^\infty t \overline{P}'(t) dt = \int_0^\infty [t \lambda_R(t) - t \lambda_O(t)] dt = \mathbf{E}[\lambda_R] - \mathbf{E}[\lambda_O]
= n_c \int_0^\infty [t f_r(t) - t f_o(t)] dt = n_c(\overline{r} - \overline{o})$$
(4)

According to (3), \overline{A} is also the area between the mean outage and mean restore processes (e.g. Fig. 1), so that (4) can be understood as the height n_c of this area times its average width.

We define the nadir and observe where it occurs. The nadir \overline{N} of $\overline{P}(t)$ is the maximum mean number of elements simultaneously outaged during the event, or the negative of the minimum value of $\overline{P}(t)$:

$$\overline{N} = -\min\{\overline{P}(t), \ t > 0\} \tag{5}$$

Simulations and frameworks of resilience [1]–[3] often make the idealization that outages end before the restores start so that $r_a \geq o_b$. Then $\overline{P}(t)$ is decreasing for $t < o_b$, constant in $[o_b, r_a]$, and increasing for $t > r_a$. Therefore the nadir occurs at all the times in $[o_b, r_a]$ and is simply $\overline{N} = n_c$. For example, when $\overline{P}(t)$ is a trapezoid, the nadir occurs along the bottom of the trapezoid. However, in real data [4]–[6] the restores usually start before the end of the outages. Accordingly, we assume that $r_a < o_b$ in the next paragraph and section III.

Since $\overline{R}(t)=0$ and $\overline{O}(t)$ is increasing for $t< r_a$, and $\overline{O}(t)=n_c$ and $\overline{R}(t)$ is increasing for $t>o_b$, the nadir \overline{N} of $\overline{P}(t)=\overline{R}(t)-\overline{O}(t)$ must occur inside the time interval $[r_a,o_b]$ or at its endpoints. $\overline{P}(t)$ is a smooth function in $[r_a,o_b]$.

III. METRIC FORMULAS FOR DIFFERENT CASES

1) Constant rate outage and restore processes: The simplest model has outage and restore processes with constant rates so that $\lambda_O(t) = n_c/o_b, \ 0 \le t \le o_b$ and $\lambda_R(t) = n_c/(r_b-r_a), \ r_a \le t \le r_b$. Then

$$\lambda_O = \frac{n_c}{o_b} \text{ and } \overline{O}(t) = \lambda_O t, \ 0 \le t < o_b$$
 (6)

$$\lambda_R = \frac{n_c}{r_b - r_a}$$
 and $\overline{R}(t) = \lambda_R(t - r_a), \ r_a \le t \le r_b$ (7)

We obtain the mean area \overline{A} using (4) with the mean restore time $\overline{r} = \frac{1}{2}(r_a + r_b)$ and mean outage time $\overline{o} = \frac{1}{2}o_b$.

To compute the nadir \overline{N} , which always occurs in $[r_a,o_b]$, note that $\overline{P'}(t)=\lambda_R-\lambda_O$ in $[r_a,o_b]$. Therefore, if $\lambda_R>\lambda_O$ then $\overline{P'}(t)>0$ and $\overline{N}=\lambda_O r_a=n_c r_a/o_b$ occurs at time r_a . Or if $\lambda_R<\lambda_O$ then $\overline{P'}(t)<0$ and $\overline{N}=n_c-\lambda_R(o_b-r_a)=n_c(r_b-o_b)/(r_b-r_a)$ occurs at time o_b .

The restore duration can be measured by $\overline{D}_n = r_b - r_a$.

2) Lognormal rate restore process: Consider the case of constant rate outage process (6) and restore process $\lambda_R(t)$ proportional to lognormal with parameters μ and σ that is used to model typical North American transmission events in [4], so that $\lambda_R(t) = n_c f_r(t)$ has

$$f_r(t) = ((t - r_a)\sigma\sqrt{2\pi})^{-1} \exp[-(\ln(t - r_a) - \mu)^2/(2\sigma^2)]$$

$$\bar{R}(t) = n_c \Phi[(\ln(t - r_a) - \mu)/\sigma], \qquad t \ge r_a.$$
 (8)

 Φ is the CDF of the standard normal distribution. The lognormal distribution $f_r(t)$ in (8) has mean $\overline{r}=r_a+\exp[\mu+\sigma^2/2]$ and the area (4) becomes

$$\overline{A} = n_c \left(r_a + e^{\mu + \sigma^2/2} - o_b/2 \right)$$
 (9)

To compute the nadir, which is in $[r_a, o_b]$, note that the CDF of the lognormal distribution and hence $\overline{R}(t)$ and $\overline{P}(t)$ are convex in $[r_a, t_{\text{inflect}}]$ and concave for $t \geq t_{\text{inflect}}$, where $t_{\text{inflect}} = e^{\mu - \sigma^2} + r_a$ is the mode (maximum) of the lognormal distribution for which $\overline{R}''(t_{\text{inflect}}) = \overline{P}''(t_{\text{inflect}}) = 0$. We have

$$\overline{P}'(t_{\text{inflect}}) = n_c(\sigma\sqrt{2\pi})^{-1} \exp[-\mu + \sigma^2/2] - n_c/o_b \quad (10)$$

Write t_* for a local minimum of $\overline{P}(t)$. Then $0=\overline{P}(t_*)=n_cf_r(t_*)-n_c/o_b$, and some algebra yields a quadratic equation $[\ln(t_*-r_a)]^2+2(\sigma^2-\mu)[\ln(t_*-r_a)]+\mu^2+2\sigma^2\ln[\sigma\sqrt{2\pi}/o_b]=0$ that can be solved to give

$$t_* = \exp\left[\mu - \sigma^2 - \sigma\sqrt{2\ln[1 + (o_b/n_c)\overline{P'}(t_{\text{inflect}})]}\right] + r_a (11)$$

The negative sign for the square root in (11) is chosen to obtain the solution in the convex part of $\overline{P}(t)$ that can be the minimum. A real solution for t_* exists if $\overline{P}'(t_{\text{inflect}}) \geq 0$.

If $t_{\rm inflect} \leq o_b$, then we have $\overline{P'}(r_a) = -\lambda_O < 0$ and $\overline{P''}(t) \geq 0$ in $[r_a, t_{\rm inflect}]$ due to convexity. If $\overline{P'}(t_{\rm inflect}) \leq 0$, then, since $\overline{P''}(t) \leq 0$ in $[t_{\rm inflect}, o_b]$, $\overline{P'}(t) \leq 0$ in $[r_a, o_b]$ and the nadir occurs at o_b . If $\overline{P'}(t_{\rm inflect}) > 0$, the minimum of $\overline{P}(t)$ in $[r_a, t_{\rm inflect}]$ occurs at t_* and does not occur at $t_{\rm inflect}$. Since $\overline{P''}(t) \leq 0$ in $[t_{\rm inflect}, o_b]$, the minimum of $\overline{P}(t)$ in $[t_{\rm inflect}, o_b]$ could occur at o_b . So the nadir occurs at t_* or o_b .

If $t_{\text{inflect}} > o_b$, then reasoning on $[r_a, o_b]$ similar to the reasoning for $t_{\text{inflect}} < o_b$ on $[r_a, t_{\text{inflect}}]$ shows that if $\overline{P}'(o_b) \le 0$, the nadir occurs at o_b , and if $\overline{P}'(o_b) > 0$, the nadir occurs at t_* .

We conclude that the nadir occurs at t_* (if it exists in $[r_a, o_b]$) or at o_b so that $\overline{N} = -\min\{P(t_*), P(o_b)\}$.

The duration to reach 95% restoration can be measured by $\overline{D}_{95\%}^{\ln} = \exp[\mu + \sigma \, \Phi^{-1}(0.95)]$. The geometric mean and median of the restore times [4] is $\overline{D}_{\rm GM} = e^{\mu}$.

3) Exponential rate restore process: Another case is exponential recovery with time constant and mean restore time τ , so that $f_r(t) = \tau^{-1} \, e^{-(t-r_a)/\tau}$ and $\overline{R}(t) = n_c [1 - e^{-(t-r_a)/\tau}]$ for $t \geq r_a$. The area (4) becomes

$$\overline{A} = n_c \left(r_a + \tau - o_b / 2 \right) \tag{12}$$

 $\overline{R}(t)$ is concave, so the nadir occurs at either r_a or o_b and is $\overline{N}=-\min\{-\lambda_O r_a,n_c[1-e^{-(o_b-r_a)/\tau}]-\lambda_O o_b\}$ $=n_c\max\{r_a/o_b,e^{-(o_b-r_a)/\tau}\}.$ The duration to reach 95% restoration is $\overline{D}_{95\%}^{\rm exp}=\tau\ln20.$

4) Area A for empirical data: Similar methods apply to analyzing the data recorded from an actual event, except that O(t), R(t), P(t) are now actual instead of their means. We analyze the area A under P(t). Suppose the outages occur at times $o_1 \leq ... \leq o_n$, with quantities $c_1, ..., c_n$. Restores occur at $r_1 \leq ... \leq r_n$, with quantities $c_{\pi(1)}, ..., c_{\pi(n)}$, where π is the permutation of 1, 2, ..., n indicating the order in which the outages restore. The restores in the order of their outage are $r_{\pi^{-1}(1)}, ..., r_{\pi^{-1}(n)}$ where π^{-1} is the inverse permutation¹.

The rates are proportional to delta functions at the outage and restore times, and O(t) and R(t) become step functions:

$$\lambda_O(t) = \sum_{i=1}^n c_i \delta(t - o_i) \text{ and } O(t) = \sum_{k: o_k \le t} c_k$$
 (13)

$$\lambda_R(t) = \sum_{i=1}^n c_{\pi(i)} \delta(t - r_i) \text{ and } R(t) = \sum_{k: r_k \le t} c_{\pi(k)}$$
 (14)

Then
$$A = E[\lambda_R] - E[\lambda_O] = \sum_{i=1}^{n} (c_{\pi(i)} r_i - c_i o_i)$$
 (15)

Note that permuting the order of the restores in the sum in (15) makes no difference. Therefore if we write $\rho_i = r_{\pi^{-1}(i)} - o_i$ for the time to restore or repair outage i, we obtain

$$A = \sum_{i=1}^{n} c_i (r_{\pi^{-1}(i)} - o_i) = \sum_{i=1}^{n} c_i \rho_i$$
 (16)

We now analyze a useful but restricted case: Write A_x for the area when $c_1=c_2=...=c_n=x$ where x is a constant. For example, A_1 is the area under the performance curve when it tracks the number of outages, and $A_{\overline{c}}$ is the area under the performance curve when it tracks the number of customers out and we make the approximation that the average number of customers $\overline{c}=n_c/n$ is out at each outage so that $c_i=\overline{c}$. Equations (15) and (16) reduce to

$$A_{\overline{c}} = \overline{c} \sum_{i=1}^{n} (r_i - o_i) = n\overline{c}(\overline{r} - \overline{o}) = n_c(\overline{r} - \overline{o}) = n_c \,\overline{\rho} \quad (17)$$

where $\bar{\rho}$ is the mean time to repair in the event. Equation (17) recovers the useful (4) for empirical data in the case that the quantities outaged are interchangeable, including A_1 . Another approach [5] assumes $c_1, c_2, ..., c_n$ are sampled from a random variable independent of the outage and restore times with mean \bar{c} . Then taking the expectation of (16) gives $\bar{A} = EA = \sum_{i=1}^{n} Ec_i E[r_{\pi^{-1}(i)} - o_i] = n\bar{c}(\bar{r} - \bar{o}) = n\bar{c}\,\bar{\rho}$.

 $^1\mathrm{For}$ example, outages o_1,o_2,o_3 could restore in the order $o_{\pi(1)},o_{\pi(2)},o_{\pi(3)}=o_2,o_3,o_1$ where $\pi=\{1\to 2,2\to 3,3\to 1\}.$ $\pi^{-1}=\{2\to 1,3\to 2,1\to 3\}$ and the restores in the order of their outage are $r_{\pi^{-1}(1)},r_{\pi^{-1}(2)},r_{\pi^{-1}(3)}=r_3,r_1,r_2.$

IV. DISCUSSION AND CONCLUSIONS

We introduce Poisson process models in terms of their rates for outage and restore resilience processes (6,7,8) and performance curves (2). The model parameters can be calculated from standard utility outage data; e.g., a typical North American transmission resilience event has outages with constant rate λ_O and restores starting after a delay r_a with lognormal (μ,σ) rate; parameter values are given in [4]. The parameter n_c is the event total of the quantity tracked by the processes, such as number of outages or number of customers. Section III gives explicit formulas in terms of the parameters for area, nadir, and duration metrics describing the mean performance curve $\overline{P}(t)$ for a constant rate outage process and constant, lognormal, and exponential rate recovery processes. In each case, the restore duration has a different definition and formula, and the event duration is always the restore duration plus r_a . In all these cases, the nadir of $\overline{P}(t)$ is proportional to n_c and occurs only at the end of the outages o_b or at another time that can be explicitly calculated. Then the nadir is calculated as the minimum of P(t) at the two times. Moreover, for the parameters from the North American transmission events in [4], 98% of the nadirs occur at the end of the outages so that $\overline{N} = -\overline{P}(o_h)$.

 \overline{A} is area under the mean performance curve, expected area under the performance curve, and area between the mean outage and restore processes. \overline{A} is given by (4,9,12) as the difference between the average restore and outage rates, or n_c times the difference between the average restore and outage times. Thus 10% reduction in n_c causes the same 10% reduction of A as 10% faster restoration. The area A under the performance curve for empirical data is also the difference between average restore and outage rates (15), and is expressed in terms of component repair times in (16), which, in the case of interchangeable outages such as when counting the number of outages, simplifies to n_c times the average repair time in (17). This links the outage and restore process systems view with the individual component reliability view. Areas under performance curves represent component hours, customer hours, or MVA hours in a resilience event, and the usefulness of these metrics underlines the importance of giving new derivations for intuitive formulas showing how the areas depend on n_c and average outage, restore, and repair times.

REFERENCES

- A. Stankovic et al., Methods for analysis and quantification of power system resilience, early access in IEEE Trans. Power Systems, Oct 2022.
- [2] M. Panteli et al., Power systems resilience assessment: hardening and smart operational enhancement, Proc. IEEE, vol. 105, no. 7, July 2017.
- [3] C. Nan, G. Sansavini, A quantitative method for assessing resilience of interdependent infrastructures, Reliab. Eng. Syst. Safety, vol. 157, Jan. 2017, pp. 35-53.
- [4] I. Dobson, S. Ekisheva, How long is a resilience event in a transmission system?: Metrics and models driven by utility data, arXiv:2208.06985v2 [eess.SY], Jan. 2023. https://arxiv.org/abs/2208.06985
- [5] N.K. Carrington I. Dobson, Z. Wang, Extracting resilience metrics from distribution utility data using outage and restore process statistics, IEEE Trans. Power Systems, vol. 36, no. 2, Nov. 2021, pp. 5814-5823.
- [6] Y. Wei et al., Non-stationary random process for large-scale failure and recovery of power distribution, Appl. Math., vol.7, no.3, 2016, pp.233-249.
- [7] S. Ekisheva, I. Dobson, J. Norris, R. Rieder, Assessing transmission resilience during extreme weather with outage and restore processes, Prob. Methods Applied to Power Sys., Manchester UK, June 2022.