

Moving frames applied to shell elasticity

Niels Søndergaard

Div. of Mathematical Physics,

LTH , Sweden.

E-mail: niels.sondergaard@matfys.lth.se

Abstract. Exterior calculus and moving frames are used to describe curved elastic shells. The kinematics follow from the Lie-derivative on forms whereas the dynamics via stress-forms.

1. Introduction

Shell theory reduces the three-dimensional elasticity of a shell to an effective two-dimensional theory of its middle-section. This article presents a new short derivation of the shell equations of Kirchoff-Love based on the method of moving frames and exterior calculus.

Early shell theory dealt with church bells. Lord Rayleigh studied vibrating shells motivated by the question whether or not a full musical scale could be played on bells [1]. Vibrations of shells for airplanes and cars continue to be important in civil engineering. There, the numerical modelling of shells remain an active area of research relevant for e.g. car crashes. Also computer scientists have joined the efforts in order to present realistic computer graphics [2]. Lately, shell theory has been applied to cell membranes [3] and even nanotubes [4].

There are several approaches to shell theory. Kraus presents a variational method in [5]. Equivalently, assuming Newton's second law for an infinitesimal volume element and integrating over the thickness of the shell lead to the same results, see e.g. [6].

Unfortunately the calculations are complicated: the dynamic part of this well-known law involves a covariant derivative of the stress tensor and requires intricate manipulations of Christoffel symbols for the full shell, respectively its middle-section.

However, a general observation is that complexities in tensor calculus can be avoided if it is possible to work in an orthonormal frame, i.e. in the case of Riemannian manifolds. Then the number of connection coefficients are drastically reduced and calculations become simpler and more transparent. For example, Maxwell's equations in electrodynamics and calculations of curvature in general relativity become much simpler when using the exterior calculus of differential forms and Cartan's method of moving frames [7]. It is in this spirit we shall discuss shell theory.

1.1. Thin shell assumptions

For simplicity, we follow the assumptions of Kirchoff and Love for a thin shell: vertical coordinate z and intrinsic coordinates α_1, α_2 :

- (i) thickness small compared to radii of curvature
- (ii) small displacements
- (iii) vanishing normal stress $\sigma_{33} = 0$
- (iv) preservation of normals $\epsilon_{i3} = 0$
- (v) linear dependence of membrane field $U^i = u^i(\alpha^1, \alpha^2, t) + z\beta^i(\alpha^1, \alpha^2, t)$
- (vi) constant dependence of flexural field $W = w(\alpha^1, \alpha^2, t)$

1.2. Outline

The presentation centers around a proof of the shell equations. Some familiarity with differential forms and continuum mechanics is assumed. Sect. 2 introduces the geometry via differential forms, sect. 3 treats the kinematics of shell deformation and sect. 4 the equations of motion. A summary and some concluding remarks will be given in the last section.

2. Geometry

2.1. Geometry of the mid-section \mathcal{M}

The shell equations must be covariant and therefore it is enough to validate them in one set of coordinates. Hence, on the mid-section \mathcal{M} we can choose *lines of curvature* coordinates α^1 and α^2 having axes aligned with the principal directions of curvature. Such coordinates can always be chosen locally on a two-dimensional surface [8]. When the radii of curvature differ $R_1 \neq R_2$ the axes can be chosen uniquely. Otherwise, at an umbilic point $R_1 = R_2 \neq \infty$ or at a planar point $R_1 = R_2 = \infty$, we shall assume a choice made. Write in these coordinates, the *mid-section metric* in the Lamé-form

$$ds^2 = A_1^2 (d\alpha^1)^2 + A_2^2 (d\alpha^2)^2. \quad (1)$$

The A_i are called Lamé-parameters. Instead of working directly with the coordinates α^1

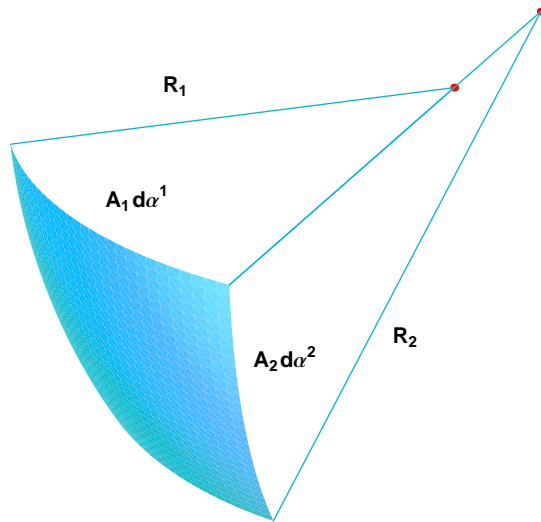


Figure 1. Middle section segment with curvature radii R_1, R_2 and increments $A_1 d\alpha^1, A_2 d\alpha^2$.

and α^2 as done traditionally we shall work with a frame derived from these particular coordinates. Thus define an orthonormal frame on the mid-section via the forms

$$\phi^a = A_a d\alpha^a. \quad (2)$$

Then the metric of the mid-section *the first fundamental tensor* takes the simple form

$$\mathbf{a} = g_{ab} dx^a \otimes dx^b \equiv \boldsymbol{\phi}^1 \otimes \boldsymbol{\phi}^1 + \boldsymbol{\phi}^2 \otimes \boldsymbol{\phi}^2 \equiv \delta_{ab} \boldsymbol{\phi}^a \otimes \boldsymbol{\phi}^b \quad (3)$$

and the curvature tensor of the mid-section *the second fundamental tensor* becomes

$$\mathbf{d} = d_{ab} dx^a \otimes dx^b \equiv \frac{1}{R_1} \boldsymbol{\phi}^1 \otimes \boldsymbol{\phi}^1 + \frac{1}{R_2} \boldsymbol{\phi}^2 \otimes \boldsymbol{\phi}^2. \quad (4)$$

2.2. Geometry of the shell \mathcal{S}

Denote the coordinates on the *three-dimensional shell* \mathcal{S} : α^1, α^2 and z . The latter coordinate is perpendicular to the middle section of the shell, see fig. 1. The direction of the z -axis follows that of [5] but is opposite from e.g. [6, 9]. The thickness of the shell is called h . z equal $\pm h/2$ defines the upper respective the lower section of the shell. Likewise $z = 0$ corresponds to the mid-section \mathcal{M} . The *shell metric* is

$$ds^2 = A_1^2(1 + z/R_1)^2(d\alpha^1)^2 + A_2^2(1 + z/R_2)^2(d\alpha^2)^2 + dz^2. \quad (5)$$

The factors $1 + z/R_i$ are understood as follows: An increment on the middle surface in the direction i spans the angle

$$d\varphi^i = A_i d\alpha^i / R_i$$

so the increment at the elevated position is

$$dx^i(z) = (R_i + z) d\varphi^i = A_i(1 + z/R_i) d\alpha^i.$$

Finally, we shall assume furthermore the existence of derivatives of A_i, R_j .

2.2.1. Orthornormal frame of \mathcal{S} We introduce a three-dimensional frame as done for the mid-section instead of working with the coordinates α^1, α^2 and z as in [5, 10]. Thus, from (5) define an orthonormal basis of one-forms as:

$$\boldsymbol{\Theta}^1 = A_1(1 + z/R_1) d\alpha^1, \quad \boldsymbol{\Theta}^2 = A_2(1 + z/R_2) d\alpha^2 \quad \text{and} \quad \boldsymbol{\Theta}^3 = dz. \quad (6)$$

From the one-forms construct the volume element

$$\mathbf{dV} = \boldsymbol{\Theta}^1 \wedge \boldsymbol{\Theta}^2 \wedge \boldsymbol{\Theta}^3 = A_1 A_2 (1 + z/R_1)(1 + z/R_2) d\alpha^1 \wedge d\alpha^2 \wedge dz \quad (7)$$

The Hodge-dual forms to the one-forms are oriented area-elements

$$\mathbf{dS}_a = \star \Theta^a \quad (8)$$

and fulfill

$$\Theta^a \wedge \mathbf{dS}_b = \delta_b^a \mathbf{dV}. \quad (9)$$

In component form

$$\mathbf{dS}_i = \varepsilon_{ijk} \Theta^j \otimes \Theta^k \quad (10)$$

with ε_{ijk} the totally antisymmetric tensor. Note, in the following we reserve ε_{ij} for another tensor, the strain, and hopefully no confusion will arise. As the area-forms are not closed $d(\mathbf{dS}_i) \neq 0$ they are not exact $\mathbf{dS}_i \neq d(1\text{-form})$, and hence the notation of these area forms is slightly misleading although conventional.

2.2.2. The connection of \mathcal{S} The one-forms of the frame lead to the connection coefficients via the condition of vanishing torsion [7]:

$$d\Theta^i + \omega^i_j \wedge \Theta^j = 0. \quad (11)$$

Calculating $d\Theta^i$ from (6) the connection form ω^i_j is found by inspection:

$$\omega = (\omega^i_j) \quad (12)$$

$$= \begin{pmatrix} 0 & \frac{(A_1(1+z/R_1))_{,2}\Theta^1 - (A_2(1+z/R_2))_{,1}\Theta^2}{A_1 A_2 (1+z/R_1)(1+z/R_2)} & \frac{\Theta^1}{R_1+z} \\ \frac{-(A_1(1+z/R_1))_{,2}\Theta^1 + (A_2(1+z/R_2))_{,1}\Theta^2}{A_1 A_2 (1+z/R_1)(1+z/R_2)} & 0 & \frac{\Theta^2}{R_2+z} \\ -\frac{\Theta^1}{R_1+z} & -\frac{\Theta^2}{R_2+z} & 0 \end{pmatrix}$$

$$= \begin{pmatrix} 0 & \frac{A_{1,2}\Theta^1/(1+z/R_1) - A_{2,1}\Theta^2/(1+z/R_2)}{A_1 A_2} & \frac{\Theta^1}{R_1+z} \\ \frac{-A_{1,2}\Theta^1/(1+z/R_1) + A_{2,1}\Theta^2/(1+z/R_2)}{A_1 A_2} & 0 & \frac{\Theta^2}{R_2+z} \\ -\frac{\Theta^1}{R_1+z} & -\frac{\Theta^2}{R_2+z} & 0 \end{pmatrix},$$

where derivatives are denoted with a comma $\partial f / \partial \alpha^i = f_{,i}$. The final simplification in (12) follows from the Gauss-Codazzi equations, shortly discussed in the following.

Finally, note that in the subsequent calculation of various covariant derivatives the number of connection coefficients $\Gamma_{kj}^i \equiv \iota_{\mathbf{e}_k} \omega^i_j$ are far less in an orthonormal frame as

compared to a general coordinate basis as these coefficients for one pair of indices now are antisymmetric and not just symmetric.

2.2.3. Gauss-Codazzi There exist constraints on the functions A_i and R_i in the metric (5) for defining a valid surface. These equations come about by expressing the curvature via the connection. Even though the shell is curved the metric (5) is just a metric for the flat three dimensional space \mathbb{R}^3 . Consequently the curvature is zero:

$$0 = \Omega^i_j = d\omega^i_j + \omega^i_k \wedge \omega^k_j \quad (13)$$

For instance for $i = 1$ and $j = 3$

$$d\omega^1_3 = (A_1/R_1)_{,2} d\alpha^2 \wedge d\alpha^1 \quad (14)$$

and

$$\omega^1_2 \wedge \omega^2_3 = \frac{(A_1(1+z/R_1))_{,2}}{R_2+z} d\alpha^1 \wedge d\alpha^2, \quad (15)$$

so

$$\frac{(A_1(1+z/R_1))_{,2}}{R_2} = \left(\frac{A_1}{R_1}\right)_{,2} (1+z/R_2). \quad (16)$$

At the middle surface $z = 0$ the classical Codazzi equation is found

$$\frac{A_{1,2}}{R_2} = \left(\frac{A_1}{R_1}\right)_{,2}. \quad (17)$$

Applying (17) to (16) gives

$$(A_1(1+z/R_1))_{,2} = A_{1,2} (1+z/R_2) \quad (18)$$

used in (12). Likewise other identities between A_1, A_2, R_1 and R_2 hold generalizing the Gauss-Codazzi-equations to the shell metric. By considering $i = 1$ and $j = 2$ the result of Gauss follows:

$$\left(\frac{A_{1,2}}{A_2}\right)_{,2} + \left(\frac{A_{2,1}}{A_1}\right)_{,1} = -\frac{A_1 A_2}{R_1 R_2}. \quad (19)$$

Hence using (19), the total curvature $K \equiv \frac{1}{R_1 R_2}$ related to the embedding may be expressed entirely in terms of the intrinsic functions A_i belonging to metric of the surface. This is the lines of curvature coordinates version of Gauss's theorema egregium [8].

2.2.4. *Covariant Derivative* Having defined the connection ω , the covariant derivative acting on forms is

$$\nabla = \mathbf{d} + \omega, \quad (20)$$

where \mathbf{d} is the flat exterior derivative and ω acts from the left with the wedge-product. From the condition of no torsion (11) follows that the covariant derivative vanish on frame co-vectors respective tangent-vectors. The latter holds since the metric is covariantly constant. Thus

$$\nabla \Theta^i = 0. \quad (21)$$

To exploit this structure we shall consequently define quantities of interest as forms.

2.2.5. *The derived connection of \mathcal{M}* The mid-section \mathcal{M} is embedded in the shell \mathcal{S} :

$$i : \mathcal{M} \rightarrow \mathcal{S} \quad (22)$$

so restricting differential forms to the mid-section is the *pull-back*

$$i^* : \Lambda^*(\mathcal{S}) \rightarrow \Lambda^*(\mathcal{M}). \quad (23)$$

This restriction is obtained by putting $z = 0$. For instance

$$i^*(\Theta^a) = \phi^a \quad \text{and} \quad i^*\Theta^3 = 0. \quad (24)$$

Likewise, pulling back the connection of the three-dimensional shell ω^i_j to the mid-section i^* gives *the* two-dimensional connection $\tilde{\omega}_b^a$ of \mathcal{M} . Namely

$$d\phi^a = -\omega^a_b|_{z=0} \wedge \phi^b \equiv -\tilde{\omega}_b^a \wedge \phi^b \quad (25)$$

with $a, b = 1, 2$ only, where the "tilde" shall be used in the following when referring to the mid-section. Formally (25) holds since the exterior derivative commutes with the pull-back

$$d i^* = i^* d \quad (26)$$

and

$$d\phi^a = d(i^*\Theta^a) = i^*d\Theta^a = i^*(-\omega^a_i \wedge \Theta^i) = -i^*(\omega^a_b) \wedge \phi^b. \quad (27)$$

Thus, all connection coefficients of the mid-section $\tilde{\Gamma}_{jk}^i$ are contained in the single one-form

$$\tilde{\omega}_2^1 = \frac{A_{1,2}\phi^1 - A_{2,1}\phi^2}{A_1A_2}. \quad (28)$$

where

$$\tilde{\omega}_b^a \equiv \tilde{\Gamma}_{cb}^a \phi^c = -\tilde{\omega}_a^b. \quad (29)$$

Finally, these connection coefficients allow us to define the covariant derivative on the mid-section, $\tilde{\nabla}$.

3. Shell kinematics

This section describes the kinematics of a shell. The appropriate deformation field is the strain field ϵ . This field corresponds to relative displacements or extensions.

3.1. The displacement field \mathbf{U}

The displacement is a tangent vector field and hence contra-variant. According to Kirchoff-Love:

$$\mathbf{U} = U^1\mathbf{e}_1 + U^2\mathbf{e}_2 + W\mathbf{e}_3 \equiv (u^1 + z\beta^1)\mathbf{e}_1 + (u^2 + z\beta^2)\mathbf{e}_2 + w\mathbf{e}_3 \quad (30)$$

More general functional forms exist: e.g. quadratic dependence in the flexural field w and even general Taylor expansions in z have been proposed by Vlasov [5].

3.1.1. Rotation angles β^i If the β in (30) is sufficiently small its components play the role of angles. Thus when seen from the middle section the displacement at height z in the direction i equals $z d\varphi^i \approx z\beta^i$. However, in Kirchoff-Love's theory, the rotations β^i are not considered as independent fields but can be found from u^i and the gradient of w . This we show in the following sect. 3.3 using the assumption of vanishing normal strain $\epsilon_{i3} = 0$.

3.2. Strain field: connection to the Lie-derivative

In linear elasticity the strain field follows from the displacement field by an application of a Lie-derivative on the metric [11]

$$\boldsymbol{\epsilon} = \epsilon_{ij} \boldsymbol{\Theta}^i \otimes \boldsymbol{\Theta}^j = \frac{1}{2} \mathcal{L}_{\mathbf{U}}(\mathbf{g}) \quad \text{with} \quad \mathbf{g} \equiv g_{ij} dx^i \otimes dx^j = \delta_{jk} \boldsymbol{\Theta}^j \otimes \boldsymbol{\Theta}^k \quad (31)$$

The Lie-derivative \mathcal{L} is with respect to the physical displacement field \mathbf{U} .

The strain field is calculated with respect to the orthonormal frame (6). As \mathcal{L} is a derivation:

$$\mathcal{L}(\boldsymbol{\Theta}^j \otimes \boldsymbol{\Theta}^k) = \mathcal{L}(\boldsymbol{\Theta}^j) \otimes \boldsymbol{\Theta}^k + \boldsymbol{\Theta}^j \otimes \mathcal{L}(\boldsymbol{\Theta}^k) \quad (32)$$

it suffices to investigate its action on a co-vector $\boldsymbol{\Theta}^j$. Using Cartan's formula [11] for the Lie-derivative and (21):

$$\begin{aligned} \mathcal{L}_{\mathbf{U}}(\boldsymbol{\Theta}^j) &\equiv (d \iota_{\mathbf{U}} + \iota_{\mathbf{U}} d) \boldsymbol{\Theta}^j = dU^j + \iota_{\mathbf{U}}(d\boldsymbol{\Theta}^j) = dU^j - \iota_{\mathbf{U}}(\boldsymbol{\omega}^j_k \wedge \boldsymbol{\Theta}^k) \\ &= dU^j + U^k \boldsymbol{\omega}^j_k - (\iota_{\mathbf{U}} \boldsymbol{\omega}^j_k) \boldsymbol{\Theta}^k = \nabla U^j - (\iota_{\mathbf{U}} \boldsymbol{\omega}^j_k) \boldsymbol{\Theta}^k. \end{aligned} \quad (33)$$

The antisymmetry $\boldsymbol{\omega}^j_k = -\boldsymbol{\omega}^k_j$ gives the familiar result from continuum mechanics:

$$\boldsymbol{\epsilon} = \frac{1}{2} (\nabla U^j \otimes \boldsymbol{\Theta}^k + \boldsymbol{\Theta}^k \otimes \nabla U^j) g_{jk} = \frac{1}{2} (\nabla \otimes \boldsymbol{\Theta}^j U_j + U_j \boldsymbol{\Theta}^j \otimes \nabla) = \frac{1}{2} (\nabla \mathbf{U} + \mathbf{U} \nabla). \quad (34)$$

In (34) the metric lowers the indices of the displacement field coordinates from a tangent vector to a co-vector. Sometimes this is made explicit by writing $\mathbf{U} = \mathbf{U}^\flat$.

3.3. Lie-derivative gives variation of curvature

We wish to emphasize the connection of the strain in shells to the variation of the second fundamental tensor. This is done using the Lie-derivative instead of the conventional expression of the strain (34).

Expanding the shell metric To find the strain with respect to the mid-section the full shell metric (5) is written out in terms of simpler mid-section one-forms

$$\begin{aligned} \mathbf{g} &= \boldsymbol{\phi}^1 \otimes \boldsymbol{\phi}^1 + \boldsymbol{\phi}^2 \otimes \boldsymbol{\phi}^2 + \boldsymbol{\Theta}^3 \otimes \boldsymbol{\Theta}^3 \\ &+ 2z \left(\frac{1}{R_1} \boldsymbol{\phi}^1 \otimes \boldsymbol{\phi}^1 + \frac{1}{R_2} \boldsymbol{\phi}^2 \otimes \boldsymbol{\phi}^2 \right) + z^2 \left(\frac{1}{R_1^2} \boldsymbol{\phi}^1 \otimes \boldsymbol{\phi}^1 + \frac{1}{R_2^2} \boldsymbol{\phi}^2 \otimes \boldsymbol{\phi}^2 \right) \\ &\equiv \mathbf{a} + \boldsymbol{\Theta}^3 \otimes \boldsymbol{\Theta}^3 + 2z \mathbf{d} + z^2 \mathbf{d}^2 \end{aligned} \quad (35)$$

with $d_{ab}^2 \equiv d_{ac} d_b^c$. Deriving with the Lie-derivative gives

$$\begin{aligned}
\boldsymbol{\epsilon} &\equiv \frac{1}{2} \mathcal{L}_{\mathbf{U}}(\mathbf{g}) \\
&= \frac{1}{2} \mathcal{L}_{\mathbf{U}}(\mathbf{a}) + \frac{1}{2} (\nabla w \otimes \boldsymbol{\Theta}^3 + \boldsymbol{\Theta}^3 \otimes \nabla w) + \mathcal{L}_{\mathbf{U}}(z \mathbf{d}) + \frac{1}{2} \mathcal{L}_{\mathbf{U}}(z^2 \mathbf{d}^2) \\
&= \frac{1}{2} \mathcal{L}_{\mathbf{U}}(\mathbf{a}) + w \mathbf{d} + z \mathcal{L}_{\mathbf{U}}(\mathbf{d}) + z w \mathbf{d}^2 + \frac{1}{2} (\nabla w \otimes \boldsymbol{\Theta}^3 + \boldsymbol{\Theta}^3 \otimes \nabla w) + O(z^2)
\end{aligned} \tag{36}$$

Above, the Lie-derivative contracts the mid-section forms $\boldsymbol{\phi}^a$ via the interior derivative $\iota_{\mathbf{U}}$. Hence, it is advantageous to express the frame coordinates of the displacement field with respect to the mid-section:

$$\begin{aligned}
(u^i + z \beta^i) e_i &\equiv (u^i + z \beta^i) \frac{1}{(1 + z/R_i) A_i} \frac{\partial}{\partial \alpha^i} \\
&= (u^i + z \beta^i) (\delta_i^j - z d_i^j) \frac{1}{A_j} \frac{\partial}{\partial \alpha^j} + O(z^2) \\
&\equiv (u^i + z(\beta^i - d_j^i u^j)) \tilde{e}_i + O(z^2) \equiv (\tilde{u}^i + z \tilde{\beta}^i) \tilde{e}_i + O(z^2)
\end{aligned} \tag{37}$$

with

$$\tilde{\mathbf{u}} = \mathbf{u} \tag{38}$$

$$\tilde{\boldsymbol{\beta}} = \boldsymbol{\beta} - \mathbf{d} \cdot \mathbf{u}. \tag{39}$$

To proceed consider the first term in (36)

$$\frac{1}{2} \mathcal{L}_{\mathbf{U}}(\mathbf{a}) = \frac{1}{2} \mathcal{L}_{\mathbf{u} + z \boldsymbol{\beta}}(\mathbf{a}) = \frac{1}{2} \mathcal{L}_{\mathbf{u}}(\mathbf{a}) + \frac{1}{2} \mathcal{L}_{z \boldsymbol{\beta}}(\mathbf{a}) \tag{40}$$

The first term in (40) reduces to a membrane strain expressed in mid-section coordinates

$$\frac{1}{2} \mathcal{L}_{\mathbf{U}}(\mathbf{a}) = \frac{1}{2} (\tilde{u}_{a;b} + \tilde{u}_{b;a}) \boldsymbol{\phi}^a \otimes \boldsymbol{\phi}^b = \frac{1}{2} (\tilde{\nabla} \otimes \mathbf{u} + \mathbf{u} \otimes \tilde{\nabla}) \tag{41}$$

with the corresponding covariant derivative. The second term in (40) gives a normal strain plus a strain similar to (41) of order $O(z)$:

$$\begin{aligned}
\frac{1}{2} \mathcal{L}_{z \boldsymbol{\beta}}(\mathbf{a}) &= \frac{1}{2} \tilde{\beta}^a (dz \otimes \boldsymbol{\phi}^b + \boldsymbol{\phi}^b \otimes dz) \delta_{ab} + z \frac{1}{2} (\tilde{\nabla} \otimes \tilde{\boldsymbol{\beta}} + \tilde{\boldsymbol{\beta}} \otimes \tilde{\nabla}) \\
&= \frac{1}{2} (\boldsymbol{\Theta}^3 \otimes \tilde{\boldsymbol{\beta}} + \tilde{\boldsymbol{\beta}} \otimes \boldsymbol{\Theta}^3) + z \frac{1}{2} (\tilde{\nabla} \otimes \tilde{\boldsymbol{\beta}} + \tilde{\boldsymbol{\beta}} \otimes \tilde{\nabla})
\end{aligned} \tag{42}$$

As $\frac{\partial w}{\partial z} = 0$ the normal strain ϵ_{33} vanishes in (36). So effectively

$$\nabla w = dw = dw(\alpha^1, \alpha^2) = \tilde{\nabla} w. \tag{43}$$

Then the requirement of *vanishing normal shear strain* $\epsilon_{a3} = 0$ with (36) and (42) reduces to

$$\tilde{\boldsymbol{\beta}} = -\tilde{\nabla}w + O(z). \quad (44)$$

An $O(z)$ -correction is indicated, since $\mathcal{L}_{z\boldsymbol{\beta}}(\mathbf{d})$ from $\mathcal{L}_{\mathbf{U}}(\mathbf{d})$ produces such a term. In conclusion

$$\begin{aligned} \boldsymbol{\epsilon} &\equiv \boldsymbol{\epsilon}^{(0)} + z\boldsymbol{\epsilon}^{(1)} = \frac{1}{2}(\tilde{\nabla} \otimes \mathbf{u} + \mathbf{u} \otimes \tilde{\nabla}) + w\mathbf{d} \\ &- z \left(\frac{1}{2}(\tilde{\nabla} \otimes \tilde{\nabla}w + \tilde{\nabla}w \otimes \tilde{\nabla}) - \mathbf{d}^2w - \mathcal{L}_{\mathbf{u}}(\mathbf{d}) \right) + O(z^2) \\ &= \frac{1}{2}(\tilde{\nabla} \otimes \mathbf{u} + \mathbf{u} \otimes \tilde{\nabla}) + w\mathbf{d} \\ &- z \left(\tilde{\nabla} \otimes \tilde{\nabla}w - \mathbf{d}^2w - \mathcal{L}_{\mathbf{u}}(\mathbf{d}) \right) + O(z^2). \end{aligned} \quad (45)$$

This result agrees with that in [9] (where $\mathbf{d} := -\mathbf{d}$) when the Lie-derivative in (45) is written out in full. Using [12] or performing similar calculations as in sect. 3.2 gives the standard result

$$\mathcal{L}_{\mathbf{u}}(\mathbf{d}) = (d_{ab;c}u^c + d_a^c u_{b;c} + d_b^c u_{a;c}) \phi^a \otimes \phi^b \quad (46)$$

with the covariant derivative corresponding to the mid-section. This Lie-derivative now measures the variation of the second fundamental tensor, the curvature tensor, with respect to membrane fields. It represents the change of curvature when only stretching.

First versus second fundamental tensor To summarize, the Lie-derivative of the first fundamental tensor a_{ab} produces parts of the leading in-plane strain $\boldsymbol{\epsilon}^{(0)}$, whereas on the second fundamental tensor d_{ab} parts of the bending tensor $\boldsymbol{\epsilon}^{(1)}$. [6, 9] introduce various measures of variation of the second fundamental tensor and linearize these. The same results are obtained here formally, where the Lie-derivative eventually acts on the curvature tensor in the expansion of the metric.

How unique is the bending tensor? The discussion in this text considers the variation of $\mathbf{d} = d_{ab}\phi^a \otimes \phi^b$ under deformation. Since the Lie-derivative does not commute with raising and lowering indices, in fact $\mathcal{L}_{\mathbf{U}}(\mathbf{g}) = 2\boldsymbol{\epsilon}$, the various measurements of bending

defined from the variation of d_{ab} , d_a^b or d^{ab} differ with terms of the form $\boldsymbol{\epsilon} \cdot \mathbf{d}$ [9]. For instance [6] considers the variation of d_b^c .

What dominates: bending or stretching ? The most important terms in the strains (45) at short wave lengths, the *principal part*, can be identified as the highest derivatives. The term of the strain proportional to the vertical displacement $\boldsymbol{\epsilon}^{(1)}$ has as its principal term $\tilde{\nabla} \otimes \tilde{\nabla} w$ associated with bending and arises from the $z\boldsymbol{\beta}$ contribution to the in-plane strain. On the other hand, the principal part of $\boldsymbol{\epsilon}^{(0)}$ comes from the tangential stretching field described by the $\tilde{\nabla} \odot \mathbf{U}$, the in-plane strain.

4. Shell dynamics

In this section the stresses and moments in the shell are found. We follow [6] but use exterior calculus instead.

4.1. Force conservation in the bulk

Forces acting on general surface elements \mathbf{dS} are described in continuum mechanics [13, 14] in terms of the stress tensor $\boldsymbol{\sigma}$. Thus the infinitesimal force on a surface element equals

$$\mathbf{df} = \mathbf{dS} \cdot \boldsymbol{\sigma}. \quad (47)$$

In the bulk, the force per unit volume becomes

$$\nabla \cdot \boldsymbol{\sigma}(\mathbf{U}) + \mathbf{X} = \rho \frac{\partial^2}{\partial t^2} \mathbf{U}, \quad (48)$$

where \mathbf{X} is an external volume body force. In this section we focus on the left-hand side of (48), that is the *dynamic* part of the equations of motion.

In exterior calculus it is convenient to collect the forces on an infinitesimal element via the *stress-form* [11]

$$\mathbf{f}^i = (\mathbf{dS} \cdot \boldsymbol{\sigma})^i = \sigma^{1i} \mathbf{dS}_1 + \sigma^{2i} \mathbf{dS}_2 + \sigma^{3i} \mathbf{dS}_3. \quad (49)$$

This form is a two-form and when integrated over a surface it gives the corresponding force (here in direction i , which by convention is put as the last index in the σ^{ia}). In continuum mechanics \mathbf{f}^i is infinitesimal as in (47) but in exterior calculus the notation does not indicate so as this form is not exact in general.

The total force is written as

$$\mathbf{f} = \mathbf{f}^i \mathbf{e}_i \equiv \mathbf{f}^i \otimes \mathbf{e}_i \quad (50)$$

Its covariant derivative is simple

$$\nabla \mathbf{f} = \nabla \mathbf{f}^i \otimes \mathbf{e}_i + \mathbf{f}^i \otimes \nabla \mathbf{e}_i = \nabla \mathbf{f}^i \otimes \mathbf{e}_i \quad (51)$$

as the frame and its dual are constant and similar for \mathbf{X} , $\ddot{\mathbf{u}}$.

In differential form (48) reads for the component i

$$\nabla \mathbf{f}^i + \mathbf{X}^i \mathbf{dV} = \rho \ddot{u}^i \mathbf{dV}. \quad (52)$$

4.2. Covariant derivative of stress form

First we discuss tangential directions. Hence, make a split in tangential and normal (indices $a, b \in \{1, 2\}$ versus 3) in (52):

$$\begin{aligned} \nabla \mathbf{f}^a &= \nabla(\sigma^{1a} \mathbf{dS}_1 + \sigma^{2a} \mathbf{dS}_2 + \sigma^{3a} \mathbf{dS}_3) \quad (53) \\ &= \partial_1(\sigma^{1a} A_2(1+z/R_2)) d\alpha^1 \wedge d\alpha^2 \wedge dz + \partial_2(\sigma^{2a} A_1(1+z/R_1)) d\alpha^2 \wedge dz \wedge d\alpha^1 \\ &\quad + \partial_3(\sigma^{3a}(1+z/R_1)(1+z/R_2) A_1 A_2) dz \wedge d\alpha^1 \wedge d\alpha^2 + \omega^a_b \wedge \mathbf{f}^b + \omega^a_3 \wedge \mathbf{f}^3 \end{aligned}$$

Consider the first component $a = 1$. A simplification occurs in the last two terms of (53), since e.g. $\omega^a_3 = \Theta^a/(R_a + z)$ restricts the relevant term in \mathbf{f}^3 to $\sigma^{a3} \mathbf{dS}_a$ by (9).

Likewise the second last term has $b = 2$, where

$$\omega^1_2 = \frac{1}{A_1 A_2} (A_{1,2} \Theta^1 / (1+z/R_1) - A_{2,1} \Theta^2 / (1+z/R_2)) \quad (54)$$

picks out corresponding terms of \mathbf{f}^2 , that is σ^{21} for the first term in (54) and σ^{22} for the second.

4.3. Momentum conservation

The degree of freedom in the direction perpendicular to the shell is eliminated by integrating (52) over the thickness coordinate, $\int_{z=-h/2}^{h/2}$.

4.3.1. Integrated stress tensor Consider the force per length with respect to an edge along the middle section. For example, assume the edge is perpendicular to the first direction. That force density equals,

$$N^{1a} \equiv \frac{\int_{-h/2}^{h/2} dS_1(z) \sigma^{1a}}{A_2 d\alpha^2} = \int_{-h/2}^{h/2} dz \sigma^{1a} (1 + z/R_2). \quad (55)$$

The notation is such that the first index denotes the direction to which the perpendicular edge is considered. Thus, N^{1a} is the force density along the edge 2. Likewise $Q^2 \equiv N^{23}$ is the force density perpendicular to the shell in the z -direction along edge 1.

In (53) the thickness integration produces precisely such terms:

$$\begin{aligned} N^a &= N^{aa} \\ N^{1a} &= \int_{-h/2}^{h/2} dz \sigma^{1a} (1 + z/R_2) \\ N^{2a} &= \int_{-h/2}^{h/2} dz \sigma^{2a} (1 + z/R_1) \\ Q^1 &= \int_{-h/2}^{h/2} dz \sigma^{13} (1 + z/R_2) \\ Q^2 &= \int_{-h/2}^{h/2} dz \sigma^{23} (1 + z/R_1). \end{aligned} \quad (56)$$

referred to as *stress resultants*. Also corresponding moments are defined as:

$$\begin{aligned} M^a &= M^{aa} \\ M^{1a} &= \int_{-h/2}^{h/2} dz \sigma^{1a} z (1 + z/R_2) \\ M^{2a} &= \int_{-h/2}^{h/2} dz \sigma^{2a} z (1 + z/R_1) \end{aligned} \quad (57)$$

following the conventions of [5].

The resultants satisfy the constraint

$$N^{12} - N^{21} = \frac{1}{R^2} M^{21} - \frac{1}{R_1} M^{12}. \quad (58)$$

(58) follows from the symmetry of the stress tensor

$$0 = \int dz (\sigma^{12} - \sigma^{21})(1 + z/R_1)(1 + z/R_2) = N^{12} + \frac{1}{R_1} M^{12} - N^{21} - \frac{1}{R_2} M^{21}. \quad (59)$$

We express the resultants in tensor form as

$$\begin{aligned} N^{ab} &= \int_{-h/2}^{h/2} dz (\delta_c^a + z \check{d}_c^a) \sigma^{cb} \\ Q^a &= \int_{-h/2}^{h/2} dz (\delta_c^a + z \check{d}_c^a) \sigma^{c3} \\ M^{ab} &= \int_{-h/2}^{h/2} dz z (\delta_c^a + z \check{d}_c^a) \sigma^{cb} \end{aligned} \quad (60)$$

where a modified curvature tensor $\check{\mathbf{d}}$ is introduced as

$$\check{\mathbf{d}} = \frac{1}{R_2} \boldsymbol{\phi}^1 \otimes \boldsymbol{\phi}^1 + \frac{1}{R_1} \boldsymbol{\phi}^2 \otimes \boldsymbol{\phi}^2 = (\text{tr } \mathbf{d}) \mathbf{a} - \mathbf{d}. \quad (61)$$

For other resultants, see [6].

4.3.2. Force balance for shell element We continue the example from sect. 4.2. When integrating over z and multiplying with $A_1 A_2$ note that A_a and R_a are independent of z . Also the symmetry $\sigma_{21} = \sigma_{12}$ is used to get a term N^{12} . The integration over the $\partial_3 (= \partial_z)$ -term is evaluated at the boundary. Collecting terms proportional to $d\alpha^1 \wedge d\alpha^2$ gives the first equation of motion:

$$\partial_1(A_2 N^1) + \partial_2(A_1 N^{21}) + A_{1,2} N^{12} - A_{2,1} N^2 + A_1 A_2 (Q^1/R_1 + q_1) = A_1 A_2 \rho h \ddot{u}^1 \quad (62)$$

with the effective load

$$q^1 = [\sigma^{13}(1 + z/R_1)(1 + z/R_2)]_{z=-h/2}^{h/2} + \int_{-h/2}^{h/2} dz X^1 (1 + z/R_1)(1 + z/R_2). \quad (63)$$

Similar calculations are done for the second component $a = 2$ in (53).

4.4. Moment conservation

The moment in the direction $\mathbf{z} \wedge \mathbf{e}_i$ is found by multiplying (52) with z . As before we consider $i = a = 1$ and the derivation is very similar to the above and differs only in a partial integration of the corresponding ∂_3 -term

$$\int_{-h/2}^{h/2} dz z \partial_3 (\sigma^{31}(1 + z/R_1)(1 + z/R_2)) A_1 A_2 d\alpha^1 \wedge d\alpha^2 \quad (64)$$

$$\begin{aligned}
&= \left(\left[z \sigma^{31} (1 + z/R_1)(1 + z/R_2) \right]_{z=-h/2}^{h/2} - \int_{-h/2}^{h/2} dz \sigma^{31} (1 + z/R_2) \right) A_1 A_2 d\alpha^1 \wedge d\alpha^2 \\
&- \int_{-h/2}^{h/2} dz \sigma^{31} (1 + z/R_2) z/R_1 A_1 A_2 d\alpha^1 \wedge d\alpha^2
\end{aligned}$$

The last term cancels with

$$\int_{z=-h/2}^{h/2} z \omega^1_3 \wedge \mathbf{f}^3 = \int_{z=-h/2}^{h/2} z \omega^1_3 \wedge \sigma^{31} \Theta^2 \wedge dz.$$

The second term in the parenthesis in (64) gives the integral for Q^1 , whereas the boundary term is grouped together with body moments as done above for the effective load q^i .

4.5. Normal resultants

The final stress resultant involves the normal stress and is denoted Q^a . The calculation can be done as in (62) and stated with derivatives of products of Lamé-coefficients A_i and resultants.

However, the derivatives of the products can be expanded and written as covariant derivatives of the mid-section using (28). This can also be seen at an earlier stage in the calculation by keeping the mid-section frame $\{\phi^1, \phi^2, dz\}$ and evaluating derivatives using (25). For simplicity we show this alternative approach for Q^a but similar calculations can be done for the other resultants.

The covariant derivative becomes

$$\nabla \mathbf{f}^3 = d\mathbf{f}^3 + \omega^3_a \wedge \mathbf{f}^a \tag{65}$$

with

$$\begin{aligned}
d\mathbf{f}^3 &= d(\sigma^{13} \Theta^2 \wedge dz) + d(\sigma^{23} dz \wedge \Theta^1) + d(\sigma^{33} \Theta^1 \wedge \Theta^2) \\
&= (\partial_1(\sigma^{13}(1 + z/R_2)) + \partial_2(\sigma^{23}(1 + z/R_1)) + \partial_3(\sigma^{33}(1 + z/R_1)(1 + z/R_2))) \phi^1 \wedge \phi^2 \wedge dz \\
&- (\sigma^{13}(1 + z/R_2)) \tilde{\omega}_1^2 \wedge \phi^1 \wedge dz + (\sigma^{23}(1 + z/R_1)) dz \wedge \tilde{\omega}_2^1 \wedge \phi^2 \\
&= [\partial_1(\sigma^{13}(1 + z/R_2)) + \partial_2(\sigma^{23}(1 + z/R_1)) + \partial_3(\sigma^{33}(1 + z/R_1)(1 + z/R_2)) \\
&+ (\sigma^{13}(1 + z/R_2)) \tilde{\Gamma}_{21}^2 + (\sigma^{23}(1 + z/R_1)) \tilde{\Gamma}_{12}^1] \phi^1 \wedge \phi^2 \wedge dz \tag{66}
\end{aligned}$$

and

$$\boldsymbol{\omega}^3_a \wedge \mathbf{f}^a = -\frac{\Theta^a}{R_a + z} \wedge \sigma^{ba} \mathbf{dS}_b = -\frac{1}{R_a + z} \sigma^{ba} \delta_{ab} \mathbf{dV} \quad (67)$$

so

$$\int \nabla \mathbf{f}^3 = \left(\partial_1 Q^1 + \tilde{\Gamma}_{12}^1 Q^2 + \partial_2 Q^2 + \tilde{\Gamma}_{21}^2 Q^1 - d_{ab} N^{ab} \right. \\ \left. + [\sigma^{33} (1 + z/R_1)(1 + z/R_2)]_{z=-h/2}^{h/2} \right) \boldsymbol{\phi}^1 \wedge \boldsymbol{\phi}^2 \equiv \left[\tilde{\nabla}_a Q^a - d_{ab} N^{ab} + q^3 \right] \boldsymbol{\phi}^1 \wedge \boldsymbol{\phi}^2. \quad (68)$$

as $\tilde{\Gamma}_{ji}^i \equiv \iota_{\tilde{\mathbf{e}}_j} \tilde{\boldsymbol{\omega}}_i^i = 0$ for all i, j (no summation) by the antisymmetry of the frame connection coefficients. On the other hand, the kinematic body force equals

$$\int_{z=-h/2}^{h/2} \rho \ddot{u}^3 \mathbf{dV} \equiv \rho h \ddot{u} \boldsymbol{\phi}^1 \wedge \boldsymbol{\phi}^2 + O(h^3). \quad (69)$$

Thus to leading order

$$\tilde{\nabla}_a Q^a - d_{ab} N^{ab} + q^3 = \rho h \ddot{u}. \quad (70)$$

4.6. Dynamical equations of motion

In summary, using exterior calculus and moving frames one finds directly the shell equations in classical form [5]:

$$\begin{aligned} \partial_1(A_2 N^1) + \partial_2(A_1 N^{21}) + A_{1,2} N^{12} - A_{2,1} N^2 + A_1 A_2 (Q^1/R_1 + q^1) &= A_1 A_2 \rho h \ddot{u}^1 \\ \partial_1(A_2 N^{12}) + \partial_2(A_1 N^2) + A_{2,1} N^{21} - A_{1,2} N^1 + A_1 A_2 (Q^2/R_2 + q^2) &= A_1 A_2 \rho h \ddot{u}^2 \\ \partial_1(A_2 Q^1) + \partial_2(A_1 Q^2) - A_1 A_2 (N^1/R_1 + N^2/R_2) + A_1 A_2 q^3 &= A_1 A_2 \rho h \ddot{u} \\ \partial_1(A_2 M^1) + \partial_2(A_1 M^{21}) + A_{1,2} M^{12} - A_{2,1} M^2 - A_1 A_2 (Q^1 - m^1) &= 0 \\ \partial_1(A_2 M^{12}) + \partial_2(A_1 M^2) + A_{2,1} M^{21} - A_{1,2} M^1 - A_1 A_2 (Q^2 - m^2) &= 0. \end{aligned} \quad (71)$$

The right hand sides, the *kinematic* part, are also quantities integrated over thickness. They will be discussed in sect. 4.7.

Yet, the equations for the resultants can also be written *covariantly*:

$$\begin{aligned} \tilde{\nabla}_b N^{ba} + d_b^a Q^b + q^a &= \rho h \ddot{u}^a \\ \tilde{\nabla}_a Q^a - N^{ab} d_{ba} + q^3 &= \rho h \ddot{u} \\ \tilde{\nabla}_b M^{ba} - Q^a + m^a &= 0, \end{aligned} \quad (72)$$

since in (71) in the equations for N^{ab} and M^{ab} all the first four terms come from a tangential covariant derivative when we recognize the connection coefficients given in (28). Likewise for Q^a as demonstrated in sect. 4.5.

Eliminating the normal stress Q^a and assuming no body forces and moments gives

$$\begin{aligned}\tilde{\nabla}_b N^{ba} + d_b^a \tilde{\nabla}_c M^{cb} &= \rho h \ddot{u}^a \\ \tilde{\nabla}_a \tilde{\nabla}_b M^{ba} - N^{ab} d_{ba} &= \rho h \ddot{w}.\end{aligned}\tag{73}$$

4.7. Inertia terms

When the acceleration displacement field $\ddot{\mathbf{u}}$ is integrated over thickness only those terms constant in z survive leading to the right hand sides of the three first equations in (71). But for the last two, the moment equations, (52) is already multiplied with z and only the acceleration of β^i remains. This leads to terms

$$\frac{h^3}{12} A_1 A_2 \rho \ddot{\beta}^i,$$

which go as the cube of thickness and are neglected in this treatment.

4.8. Plane stress

Although all that we wanted to consider concerning moving frames and shells was presented in the previous sections we mention for completeness one final subject, which is how to relate the resultants with the displacements. Here a link between stress and strain is needed. These are in the form of *constitutive equations* and can be thought of as a generalization of Hooke's law.

In the analysis of plates and shell the so-called plane stress approximation is used [5, 6]. In that approximation, the stress-tensor has almost the same form as in bulk elasticity except that the coefficients of elasticity are slightly altered. We refer the reader to [5, 6] for a full discussion and just state the approximation in the case of isotropic materials

$$\sigma^{ab} = \frac{E\nu}{1-\nu^2} a^{ab} \operatorname{tr} \epsilon + \frac{E}{1+\nu} \epsilon^{ab}.\tag{74}$$

Following the notation of [15] a 4-tensor is introduced

$$H^{abcd} = \frac{1-\nu}{2} (a^{ac} a^{bd} + a^{ad} a^{bc}) + \nu a^{ab} a^{cd} \quad (75)$$

such that

$$\sigma^{ab} = \frac{E}{1-\nu^2} H^{abcd} \epsilon_{cd}. \quad (76)$$

4.8.1. Stress resultants We are now prepared to integrate (56) to get the resultants.

Separate the stress tensor according to the different orders in the expansion in z :

$$\sigma^{ab(i)} = \frac{E}{1-\nu^2} H^{abcd} \epsilon_{cd}^{(i)} \quad (77)$$

for $i = 0, 1$ with $\epsilon^{(i)}$ given by (45). Plain calculation from (56) and (74) gives the resultants as

$$\begin{aligned} N^{ab} &= h \sigma^{ab(0)} + \frac{h^3}{12} \check{d}_c^a \sigma^{cb(1)} \\ M^{ab} &= \frac{h^3}{12} (\sigma^{ab(1)} + \check{d}_c^a \sigma^{cb(0)}) \end{aligned} \quad (78)$$

using $\check{\mathbf{d}}$ defined by (61). Or, in terms of the plane stress tensor H^{abcd}

$$\begin{aligned} N^{ab} &= C H^{abcf} \epsilon_{cf}^{(0)} + B \check{d}_c^a H^{cbfe} \epsilon_{fe}^{(1)} \\ M^{ab} &= B \left(H^{abcf} \epsilon_{cf}^{(1)} + \check{d}_c^a H^{cbfe} \epsilon_{fe}^{(0)} \right) \end{aligned} \quad (79)$$

The constants C and B are the stretching and bending rigidities

$$C = \frac{Eh}{1-\nu^2} \quad \text{with} \quad B = \frac{Eh^3}{12(1-\nu^2)}. \quad (80)$$

In (78) the factors z/R_i from (56) are included leading to corrections proportional to h^3/R_i , see [5, 6]. If included the relation (58) among the resultants is satisfied. Thus, some tensor algebra on (78) shows

$$\varepsilon_{ab} N^{ab} = -\varepsilon_{ab} d_c^a M^{cb}. \quad (81)$$

Therefore the antisymmetric part of \mathbf{N} equals that of $\mathbf{d} \cdot \mathbf{M}$ and in lines of curvature coordinates (81) has the form

$$N^{12} - N^{21} = \frac{1}{R_2} M^{21} - \frac{1}{R_1} M^{12} \quad (82)$$

which coincides with (58).

5. Summary and conclusion

The method of moving frames and exterior calculus allow a fast derivation of the equations of motion for a curved elastic shell. First, the kinematic stretching and bending field corresponds to a particular strain tensor field obtained using the Lie-derivative on the metric. Second, the equations describing the dynamics are found using stress forms which are differential two-forms encoding the stress tensor in a convenient way. Finally, all equations are seen to be covariant and hence valid in any coordinate system.

Acknowledgments

N.S. thanks the Swedish Research Council.

Bibliography

- [1] Lord Rayleigh, *The London, Edinburgh and Dublin Philosophical Magazine and Journal of Science, Fifth Series*, Vol. **29**, No. 176, January 1890.
- [2] E. Grinspun, A.N. Hirani et al., *Discrete Shells Eurographics/SIGGRAPH Symposium on Computer Animation*, (D. Breen, M. Lin Editors) (2003).
- [3] M. Sugawara and H. Wada, *Hearing Research* **160**, 63 (2001).
- [4] B.I. Yakobson, C.J. Brabec, and J. Bernholc, *Physical Review Letters* **76**, 2511 (1996).
- [5] H. Kraus, *Thin elastic shells*, (Wiley, New York, 1967).
- [6] W. Flügge, *Tensor Analysis and Continuum Mechanics*, (Springer, Berlin, 1972).
- [7] C. Misner, K. Thorne and A. Wheeler, *Gravitation* (W H Freeman, San Fransisco 1973).
- [8] W. Klingenberg, *A Course in Differential Geometry* (Springer, New York 1978).
- [9] F.I. Niordsson, *Shell Theory*, (North-Holland, Amsterdam, 1985)
- [10] A.L. Gol'denveizer, *Theory of Elastic Thin Shells*, (Pergamon, New York, 1961).
- [11] T. Frankel, *The Geometry of Physics* (Cambridge University Press, New York, 2004).
- [12] S.W. Hawking and G.F.R. Ellis, *The large scale structure of space-time*, (Cambridge University Press, Cambridge, 1973).
- [13] L.D. Landau and E.M. Lifshitz, *Theory of Elasticity* (Pergamon, Oxford 1959).
- [14] B.A. Auld, *Acoustic Fields and Waves in Solids I,II* (John Wiley and Sons, New York 1973).
- [15] A.N. Norris and D.A. Rebinsky, *Journ. of vibr. and Acoust.* **116** 457 (1994).