

# Quantum Chip Design Automation in Superconducting Coupler Architecture

Fei-Yu Li and Li-Jing Jin\*

*Institute for Quantum Computing, Baidu Research, Beijing 100193, China*

(Dated: December 29, 2022)

Superconducting coupler architecture demonstrates great potential for scalable and high-performance quantum processors, yet how to design efficiently and automatically “Qubit-Coupler-Qubit (QCQ)” from the layout perspective remains obscure. In this work, the optimal layout design for QCQ architecture is studied for the first time and we come up with three key findings. Firstly, we acquire the crucial zero-coupling condition that is only dependent on the geometric design of the layout. Secondly, the upper bound of the effective coupling between qubits is found out as  $0.187 \omega_q/\beta_s^2$ , and surprisingly it only depends on the qubit frequency  $\omega_q$  and the qubit-coupler dispersive rate  $\beta_s$  instead of the layout. Thirdly, we propose and demonstrate an efficient optimal layout design procedure to reach the very upper bound, which is critical to the efficiency of layout design and the realization of high-fidelity two-qubit gates. Our work takes an important step forward to superconducting quantum chip design automation.

Since the last century, several remarkable quantum algorithms such as Shor’s algorithm [1] and Grover’s algorithm [2] have been proposed to solve certain problems which are essentially inaccessible for current classical computers, revealing the overwhelming capability of quantum computation. As one of the promising physical realization for quantum computation, superconducting circuits draw people’s attention due to its better manipulability and scalability and have been developed intensively in the past two decades, see comprehensive reviews in Refs. [3–14]. As the kernel of superconducting quantum computation, the quantum processor through which quantum gates are implemented to realize quantum algorithms plays a critical role. In order to realize high-fidelity two-qubit gates which are crucial and challenging for scalable quantum computing, Yan et al. [15] proposed a novel tunable coupling architecture that can be used to completely turn off the coupling (i.e., “zero-coupling”) between neighboring qubits realizing a strong suppression of parasitic effects. Thanks to this architecture, the performance of superconducting quantum processors reaches a brand new level. As an impressive application, quantum advantages have been successfully demonstrated experimentally [16–18]. Despite the enlightenment of this architecture, however, challenges remain when it comes to the practical layout design. First and foremost, stronger qubit-qubit effective (QQe) couplings are preferred for high-fidelity two-qubit gates [19] when the coupling is turned on at a certain coupler frequency  $\omega_{\text{on}}$ , yet obstructed by various limitations. A primary one is the dispersive coupling between qubits and tunable couplers, which usually acts as a precondition in coupler architecture. Also, it is nontrivial to attain an optimal layout that can realize a strong QQe coupling at  $\omega_{\text{on}}$  and reach zero-coupling at the other coupler frequency  $\omega_{\text{off}}$  simultaneously. Together with other practical limitations (e.g., Micro and nanotechnology), a delicate and efficient layout design procedure instead of

laborious trials to enable a quantum processor of high performance is desired since no well-defined procedure exists yet to our knowledge, which significantly retards the development of quantum chip design automation.

To address this challenge, we concentrate on the layout of the QCQ architecture specifically and build an inspired layout design procedure for stronger QQe coupling under certain restrictions. Normally, the QCQ layout contains two main components: the geometric metal layout (m-layout) including element polar plates as well as the surrounding ground, and the Josephson junction layout (JJ-layout). Using circuit Quantum Electrodynamics (cQED) theory, we obtain three key findings that are significantly useful to the QCQ layout design. Firstly, we discover the general zero-coupling condition for neighboring qubits. To our surprise, it depends only on the geometric design of the m-layout. Secondly, an quantitative upper bound of QQe couplings is found. It is only restricted by the qubit-coupler dispersive coupling and limited element frequency, but independent of the specific layout design. Last but not least, to achieve the maximum QQe coupling, we propose an optimal procedure for QCQ layout design. Making use of this procedure, we offer practical QCQ layouts as examples and demonstrate their performance using the electromagnetic simulation method. The proposed design procedure can be used to optimize the performance of the existing coupler architecture, find out novel layouts, and advance the progress of quantum chip design automation.

The QCQ architecture based on capacitive couplings has several different configurations due to different structures of the qubit and coupler [15–18, 20–26] as shown in Fig. 1(a). Two main layout structures of qubit and coupler are distinguished as grounded (G) type and floating (F) type. Nevertheless, all these QCQ configurations share a uniform quantized Hamiltonian [27]

$$\begin{aligned} \hat{H} = & \sum_{k \in \{1,2,c\}} 4E_{Ck} \hat{n}_k^2 - E_{Jk} \cos(\hat{\phi}_k) \\ & + 4E_{1c} \hat{n}_1 \hat{n}_c + 4E_{2c} \hat{n}_2 \hat{n}_c + 4E_{12} \hat{n}_1 \hat{n}_2, \end{aligned} \quad (1)$$

where the indices 1, 2, c are denoted as two qubits and

\* jinlijing@baidu.com

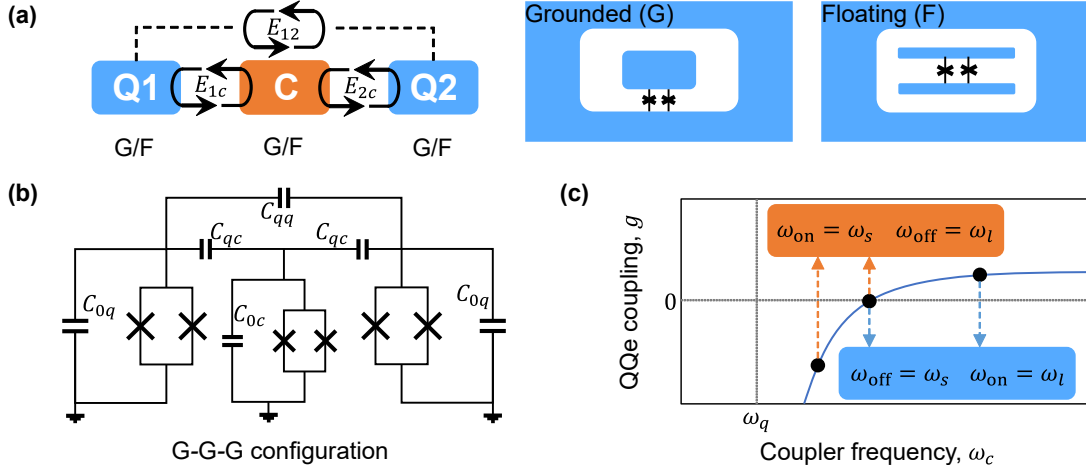


FIG. 1. (Color online) (a) (left) The QCQ configuration. (right) The layout diagrams of grounded (G) type and floating (F) types, where the region in blue represents superconducting metal and SQUIDs are connected between metal plates. (b) The equivalent circuit diagram of the QCQ system in G-G-G configuration, described in terms of  $\mathcal{C} = \{C_{0q}, C_{0c}, C_{qc}, C_{qq}\}$ . (c) Qq coupling characteristics in two different sub-regimes:  $\omega_{\text{on}} < \omega_{\text{off}}$  (orange) and  $\omega_{\text{on}} > \omega_{\text{off}}$  (blue), where  $\omega_{\text{off}}$  represents the zero-coupling between qubits and  $\omega_{\text{on}}$  corresponds to a switching on point.

coupler respectively;  $\hat{n}_k = \hat{Q}_k/2e$ ,  $\hat{\phi}_k = 2\pi\hat{\Phi}_k/\Phi_0$ ,  $E_{Ck}$ ,  $E_{Jk}$  ( $k \in \{1, 2, c\}$ ) are Cooper-pair number operators, reduced flux operators (or phase operators), charging energies and Josephson energies respectively with  $Q_k$ ,  $\Phi_k$ ,  $\Phi_0 = h/2e$  are charges on the capacitances, fluxes through the Josephson junctions and the flux quantum respectively;  $E_{1c}, E_{2c}, E_{12}$  are coupling energies. Due to the superconducting quantum interference device (SQUID),  $E_{Jk}$  can be manipulated with external flux biases through the SQUID loops,  $\hat{\phi}_k$  now corresponds to effective phase operators on account of external fluxes. We refer to this general Hamiltonian as our initial model, any QCQ architecture described by Eq. (1) applies to the results in this work. Obviously, the second term of the Hamiltonian corresponds to the JJ-layout, while the m-layout is described by the rest terms.

To ensure the scalability of the QCQ architecture in superconducting quantum chips and for simplicity as well, two qubits (i.e., Q1 and Q2 in Fig. 1(a)) are assumed to be identical, and symmetric about the intermediate coupler, thus we take  $E_{C1} = E_{C2} = E_{Cq}$ ,  $E_{J1} = E_{J2} = E_{Jq}$ ,  $|E_{1c}| = |E_{2c}|$  and the qubit frequency  $\omega_1 = \omega_2 = \omega_q$ . Considering dispersive coupling between the qubit and coupler so that the coupler remains in the ground state all the time, and applying a second-order Schrieffer-Wolff transformation, we are able to obtain the Qq coupling strength [15], which reads

$$g = \frac{\omega_q^{\text{lin}}}{4} \left( \frac{E_{12}}{E_{Cq}} - \frac{E_{1c}E_{2c}}{2E_{Cq}E_{Cc}} \frac{\omega_c^{\text{lin}}\omega_c}{\omega_c^2 - \omega_q^2} \right) \approx \frac{\omega_q}{4} \left( \frac{E_{12}}{E_{Cq}} - \frac{E_{1c}E_{2c}}{2E_{Cq}E_{Cc}} \frac{\omega_c^2}{\omega_c^2 - \omega_q^2} \right), \quad (2)$$

where  $\omega_k^{\text{lin}} = \sqrt{8E_{Ck}E_{Jk}}$  ( $k = q, c$ ) is the linear frequency of the qubit and coupler. Since  $E_{Jk} \gg E_{Ck}$  in

transmon qubits, the frequency and the linear frequency will not be distinguished in the regime of interest. The rationality of using this approximation has been verified both theoretically and numerically.

Note that for different QCQ structure configurations, the charging energies are always positive. However, it does not hold for coupling energies  $E_{12}, E_{1c}, E_{2c}$ . In order to achieve the crucial zero-coupling condition (i.e.,  $g = 0$ ),  $E_{12}$  and  $E_{1c}E_{2c}/(\omega_c^2 - \omega_q^2)$  must have the same sign. Thus there are two operating regimes:  $\omega_c > \omega_q$  with  $\text{sgn}(E_{12}E_{1c}E_{2c}) > 0$  and  $\omega_c < \omega_q$  with  $\text{sgn}(E_{12}E_{1c}E_{2c}) < 0$ , where  $\text{sgn}$  represents the sign function. Although several works have realized two-qubit gates in  $\omega_c < \omega_q$  regime [20, 26], the QCQ system in this regime is quite fragile. The lower coupler frequency results in the risk of energy leakage from the computational states of qubits into higher energy states of the coupler. As a consequence, the tunable range of the coupler frequency is restricted considerably, bringing about more complexity in both design and manipulation procedures. Therefore, we will concentrate on the regime  $\omega_c > \omega_q$ .

Under the regime of interest, the Qq coupling Eq. (2) can be rewritten in a simple form

$$g = \frac{2\omega_q}{B} \left( A - \frac{\omega_c^2}{\omega_c^2 - \omega_q^2} \right), \quad (3)$$

where we introduce two dimensionless variables  $A = 2E_{12}E_{Cc}/(E_{1c}E_{2c})$ ,  $B = 16E_{Cq}E_{Cc}/(E_{1c}E_{2c})$ . The previous discussion indicates that  $A$  keeps positive all the time while  $B$  shares the same sign of  $E_{12}$ . Because both of the charging energies and coupling energies are determined only by the m-layout which can be abstracted as a set of capacitances  $\mathcal{C}$  (including self capacitances of each element and mutual capacitances among different elements),  $A = A(\mathcal{C})$  and  $B = B(\mathcal{C})$  play an important

role in QQe coupling characteristics.

For later convenience, we introduce an important quantity: the dispersive rate of qubit-coupler coupling  $\beta$  that is defined as

$$\frac{1}{\beta} \equiv \frac{|g_{qc}|}{\omega_c - \omega_q} \approx \frac{1}{\sqrt{|B|}} \frac{\sqrt{\omega_q \omega_c}}{\omega_c - \omega_q}, \quad (4)$$

where  $g_{qc}$  is the qubit-coupler coupling strength since two qubits are identical. The dispersive coupling requires  $\beta \gg 1$  that is indeed the prerequisite of Eq. (2) as well. In the layout design or manipulation procedure, we generally set up a lower limit of the dispersive rate  $\beta_s$  above which the energy exchange between the qubits and the coupler is suppressed largely and thus negligible.

The zero-coupling condition (namely  $g = 0$ ) for QCQ architecture can be solved straightforwardly using Eqs. (3) and (4). It reads [27]

$$1 < A \leq \frac{1}{2} \left( 1 + \sqrt{1 + 4|B|/\beta_s^2} \right). \quad (5)$$

Note that  $A > 1$  is always a necessary condition even when the assumption of identical and symmetric qubits breaks down. Since  $\beta_s$  is given in advance and  $A, B$  are determined by  $\mathcal{C}$ , this condition only depends on the m-layout. As an essential application, one can either decide in advance which QCQ configuration is appropriate or estimate whether or not a QCQ m-layout is qualified after the design. For instance, designing a long qubit-qubit pitch receives considerable interest very recently [20, 28], a longer distance between two neighboring qubits opens up more space and significantly helps with wiring problems, moreover, the long-range pitch can suppress significantly correlated errors which is crucial to quantum error correction [29]. Once we intend to realize long-range qubit-qubit couplings in QCQ architectures, the condition Eq. (5) immediately tells us that choosing the grounded type for the coupler is no longer appropriate. More precisely, taking G-G-G configuration shown in Fig. 1(b) for instance,  $A$  reads [27]

$$A_{\text{G-G-G}} = \frac{(C_{0q} + C_{qc})(C_{qc}^2 + C_{0c}C_{qq} + 2C_{qc}C_{qq})}{C_{qc}^2(C_{0q} + C_{qc} + 2C_{qq})}$$

where  $C_{0q}, C_{0c}$  are the self capacitances of the qubit and coupler,  $C_{qc}, C_{qq}$  are the qubit-coupler, qubit-qubit mutual capacitances, respectively. The long-range qubit-qubit coupling means the direct mutual capacitance between qubits nearly vanishes, namely  $C_{qq} = 0$ . Therefore, we get  $A_{\text{G-G-G}} = 1$ , which implies the long-range QCQ structure with G-G-G configuration can never achieve  $g = 0$  no matter how well the other capacitances and JJ-layouts are managed. This conclusion indeed also holds for the F-G-F configuration [27], sentencing the grounded-type coupler of no use in long-range qubit-qubit coupling architecture.

When the QQe coupling is turned on, the coupling strength is generally expected to be stronger for imple-

menting faster two-qubit gates. However, several restraints prevent its realization. In addition to the zero-coupling condition and the dispersive limit  $\beta \geq \beta_s$ , one more restraint is the limited element frequency due to possible restrictions in chip fabrication, manipulation, and related facilities. Therefore, a possible upper limit on the coupler frequency  $\omega_c$  is considered.

In practice, we mainly concern two critical coupler frequencies  $\omega_{\text{on}}, \omega_{\text{off}}$ , where the QQe coupling is turned on or off respectively. The QQe coupling in the  $\omega_c > \omega_q$  regime also has two different sub-regimes dependent on the arrangement of  $\omega_{\text{on}}, \omega_{\text{off}}$  as shown in Fig. 1(c), where  $\omega_s, \omega_l$  represent the smaller one and the larger one of the critical frequencies. By this definition, the qubit-coupler dispersive rate reaches the lower limit  $\beta_s$  at  $\omega_s$ . Fortunately, these two sub-regimes can be analyzed uniformly if we consider the absolute value of QQe coupling strength at  $\omega_{\text{on}}$ . By introducing two additional dimensionless variables  $x = \omega_q/\omega_s, x \in (0, 1)$  and  $y = \omega_s/\omega_l, y \in (0, 1)$  as an essential technique, we are able to extract the restraints  $\beta_s, \omega_l$  as detached pre-factors, leading to a concise presentation of QQe coupling [27]

$$|g_{\text{on}}| = \frac{2\omega_l}{\beta_s^2} \left[ \frac{(1-x)(1-y^2)x^2y}{(1+x)(1-x^2y^2)} \right] = \frac{2\omega_l}{\beta_s^2} f(x, y). \quad (6)$$

All the other quantities of interest can also be depicted with  $\omega_l, \beta_s, x, y$ . In particular,  $A$  is different in two sub-regimes:  $A = 1/(1-x^2)$  if  $\omega_{\text{on}} > \omega_{\text{off}}$  and  $A = 1/(1-x^2y^2)$  if  $\omega_{\text{on}} < \omega_{\text{off}}$ ; as for  $B, \omega_q, \omega_s$ , they are the same in two sub-regimes, expressing as  $|B| = x\beta_s^2/(1-x)^2, \omega_q = xy\omega_l, \omega_s = y\omega_l$ .

For fixed  $\omega_l$  and dispersive rate  $\beta_s$ , we are able to obtain the maximum  $|g_{\text{on}}|_{\text{max}}$ . An analytical or numerical analysis of  $f(x, y)$  results in a maximum value 0.0411 at  $x \approx 0.675, y \approx 0.652$  as shown in Fig. 2, which leads to an upper bound of the QQe coupling strength

$$|g_{\text{on}}|_{\text{max}} = 0.0822 \frac{\omega_l}{\beta_s^2}. \quad (7)$$

Significantly and surprisingly, this bound only depends on  $\omega_l$  and  $\beta_s$ . This robust conclusion reveals the extremity of the two-qubit gate performance in QCQ architecture from a global perspective. One can immediately estimate the maximum QQe coupling with artificially given  $\omega_l$  and  $\beta_s$ , totally independent of any detailed layout design. Taking  $\omega_l = 15$  GHz and  $\beta_s = 10$  for instance, using Eq. (7) the maximum achievable QQe coupling is evaluated as 12.33 MHz. In addition, using  $\omega_q = xy\omega_l$ , Eq. (7) can be rewritten as  $|g_{\text{on}}|_{\text{max}} = 0.187 \omega_q/\beta_s^2$ . The upper bound can be used to explain roughly a part of experimental data in recent related work [16–18] as summarized in Tab. I where we assume  $\beta_s = 8$  approximately, despite that the detailed information of the layouts and coupler frequencies is unknown.

Nevertheless, the layout can be subtly designed to reach the upper bound  $|g_{\text{on}}|_{\text{max}}$ . As discussed, the m-layout is mainly determined by  $A$  and  $B$ , therefore the

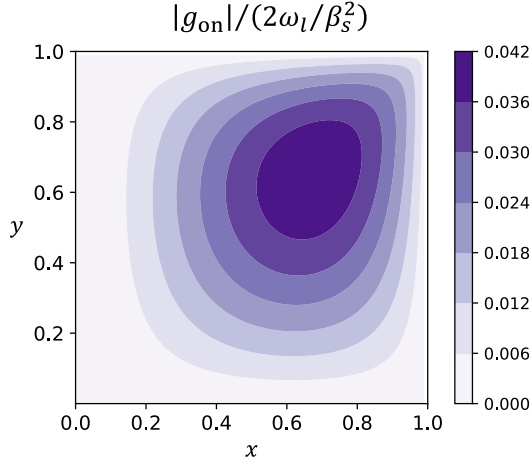


FIG. 2. (Color online) The QQe coupling  $|g_{\text{on}}|$  characteristics dependent of  $x$  and  $y$ . Apparently, a maximum QQe coupling does exist in QCQ architecture.

| Processor                      | Zuchongzhi 2.0   | Zuchongzhi 2.1   | Sycamore         |
|--------------------------------|------------------|------------------|------------------|
| reference $\omega_q$           | 4.811 GHz        | 5.099 GHz        | 6.924 GHz        |
| reference $ g_{\text{on}} $    | $\sim 10$ MHz    | $\sim 14$ MHz    | $\sim 20$ MHz    |
| $ g_{\text{on}} _{\text{max}}$ | <b>14.06 MHz</b> | <b>14.90 MHz</b> | <b>20.23 MHz</b> |

TABLE I. A part of experimental Data for different existing quantum processors, including *Zuchongzhi 2.0* [17], *Zuchongzhi 2.1* [18], and *Sycamore* [16]. The reference  $\omega_q$  refers to the median value among all qubits at their maximum frequencies, and the reference  $|g_{\text{on}}|$  refers to the coupling strength used to implement two-qubit gates. The  $|g_{\text{on}}|_{\text{max}}$  is evaluated using  $0.187 \omega_q/\beta_s^2$  where we take reference  $\omega_q$  and  $\beta_s = 8$ . Our estimated results exhibit high consistency with reference data.

optimal m-layout emerges in researching optimal  $A, B$ . As a contrast, the JJ-layout depends on the related optimal frequencies  $\omega_q$  and  $\omega_l$ . More specifically, the optimal  $A, B$  can be calculated using the relations between  $A, B$  and  $x, y$  (the optimal  $x$  and  $y$  are 0.675, 0.652 respectively) obtained before, leading to a set of capacitance equations:

$$\begin{cases} A(C) \approx \begin{cases} 1.84, & \omega_{\text{on}} > \omega_{\text{off}} \\ 1.24, & \omega_{\text{on}} < \omega_{\text{off}} \end{cases} \\ B(C) \approx \begin{cases} 6.4 \beta_s^2, & E_{12} > 0 \\ -6.4 \beta_s^2, & E_{12} < 0 \end{cases} \end{cases} \quad (8)$$

The sign of  $E_{12}(C)$  can be recognized in simple cases such as the G-G-G configuration, where one can always manage  $E_{12}$  to be positive [27]. However, the situation is different in some complicated cases such as F-F-F configuration where  $C$  contains a large number of capacitance variables. The sign  $E_{12}(C)$  is hard to tell ahead of time, thus we need to take both cases of  $B$  for discussion. To settle down an optimal m-layout, in addition to the above two equations (i.e., Eq. (8)) the other  $n(C) - 2$  equations of capacitances are needed, where  $n(C)$  is the cardinal

number of  $C$ . This implies that the optimal m-layout is not unique, providing enough degree of freedom and significant flexibility for us to count in other possible restraints. Besides, the optimal qubit frequency and the lower critical frequency of the coupler are evaluated as  $\omega_q \approx 0.44 \omega_l, \omega_s \approx 0.652 \omega_l$ .

As a crucial conclusion, we offer a systematic procedure for optimal layout design shown in Fig. 3. One remarkable feature is that the m-layout and JJ-layout can be designed independently. In the following, we will explain each step in details combined with a specific case.

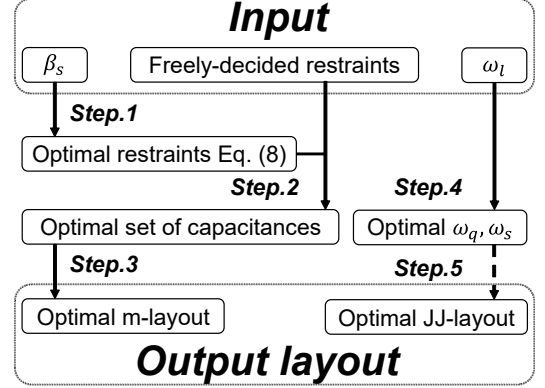


FIG. 3. The optimal layout design procedure. Following this workflow, the layout of coupler architecture can be designed automatically and efficiently.

To demonstrate the validity and high efficiency of the design procedure, we apply it to design an optimal layout with G-G-G configuration. Following the workflow illustrated in Fig. 3 processively, without loss of generality we take  $\beta_s = 10$  in Step.1, and obtain  $A(C) = 1.84$  (1.24),  $B(C) = 640$  for  $\omega_{\text{on}} > \omega_{\text{off}}$  ( $\omega_{\text{on}} < \omega_{\text{off}}$ ) regime. The explicit expressions in terms of capacitances for  $A(C)$  and  $B(C)$  are derived using cQED theory [27]. In Step.2, we first take a desired qubit anharmonicity, e.g.,  $-E_{Cq}(C) = -230$  MHz, and a certain mutual capacitance, e.g.,  $C_{qc} = 6$  fF, for extra restraints. Then by solving these four capacitance equations simultaneously, we obtain the optimal sets of capacitances for two different sub-regimes [27], as shown in the upper one of Tab. II. In step.3, the m-layouts corresponding to two different sub-regimes are procured with aid of capacitance simulation, as shown in Fig. 4(a) and (b) respectively. In Step.4, we take  $\omega_l = 15$  GHz in both regimes, leading to a 12.33 MHz maximum QQe coupling. Furthermore, the corresponding optimal  $\omega_q$  and  $\omega_s$  can also be calculated, and the results are presented in the lower one of Tab. II. The technique details for Step.5 are omitted since JJ-layouts are indeed related highly to the specific design and fabrication restraints. Till now, we have completed the whole layout design.

A natural task followed is to examine the characteristics of the layouts. The key characterized parameters  $g$  and  $\beta$  for two sub-regimes are calculated theoretically using Eqs. (3) and (4), and verified numerically using

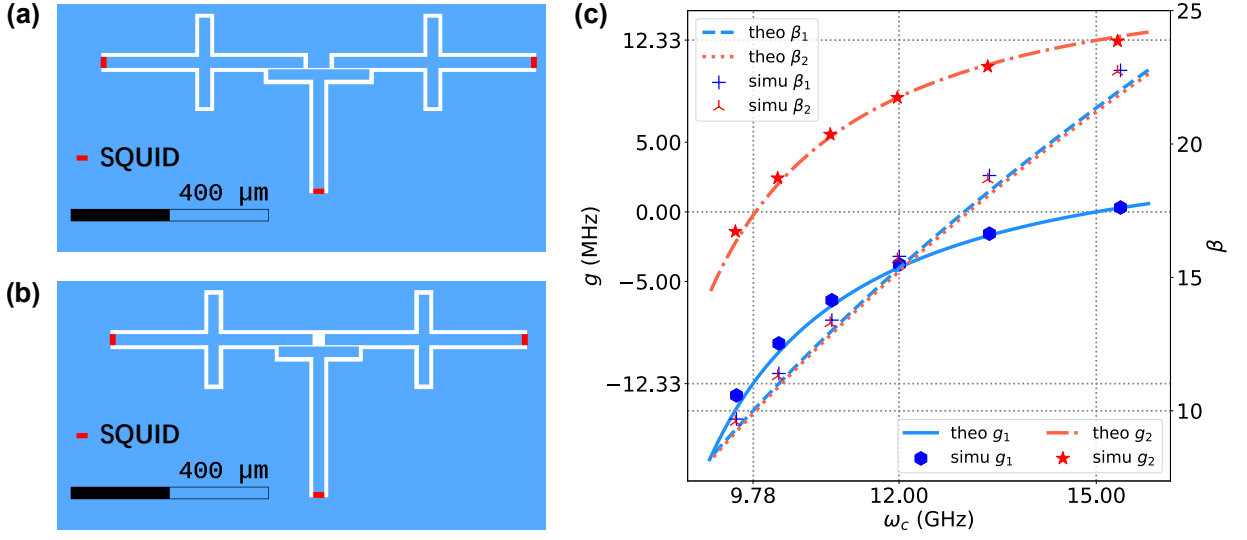


FIG. 4. (Color online) (a) and (b) are the QCC layouts corresponding to  $\omega_{\text{on}} < \omega_{\text{off}}$  and  $\omega_{\text{on}} > \omega_{\text{off}}$  regimes respectively. The regions in blue are the superconducting metal while the little red rectangles represent the SQUIDs which are treated as lumped inductances in electromagnetic simulation. Two qubits are located on the left and right sides with a tunable coupler capacitively coupled in the middle. We use sapphire as the substrates whose relative permittivity is 10. (c) The QCC coupling  $g$  and qubit-coupler dispersive rate  $\beta$  characteristics tuned by the coupler frequency  $\omega_c$  in two different sub-regimes [30]. It contains both theoretical (theo) and simulation (simu) results, where the subscripts 1,2 refer to  $\omega_{\text{on}} < \omega_{\text{off}}$  and  $\omega_{\text{on}} > \omega_{\text{off}}$  regimes respectively.

the iEPR method [31] based on eigenmode electromagnetic simulation. As shown in Fig. 4(c), the QCC couplings across the zero-coupling line at  $\omega_{\text{off}}$  and achieve a stronger QCC coupling at  $\omega_{\text{on}}$ , moreover maintain dispersive couplings all the time. Furthermore, the results obtained by theory and simulation are highly consistent, revealing the effectiveness of the layout design procedure. Besides, the slight geometric differences between the layouts (i.e., Fig. 4(a) and Fig. 4(b)) indeed cause a significant distinction in performance, revealing the hardness and vulnerability of the practical layout design. Therefore, the procedure proposed in this work provides great convenience, efficiency, and performance superiority for the practical layout design.

|                                            | $C_{0q}$ (fF) | $C_{0c}$ (fF) | $C_{qc}$ (fF) | $C_{qq}$ (fF) |
|--------------------------------------------|---------------|---------------|---------------|---------------|
| $\omega_{\text{on}} < \omega_{\text{off}}$ | 56.6          | 78.6          | 6             | 0.128         |
| $\omega_{\text{on}} > \omega_{\text{off}}$ | 57.1          | 78.3          | 6             | 0.448         |

|                                            | $\omega_l$ (GHz)             | $\omega_s$ (GHz)               | $\omega_q$ (GHz) | $g_{\text{on}}$ (MHz) |
|--------------------------------------------|------------------------------|--------------------------------|------------------|-----------------------|
| $\omega_{\text{on}} < \omega_{\text{off}}$ | 15 ( $\omega_{\text{off}}$ ) | 9.78 ( $\omega_{\text{on}}$ )  | 6.61             | -12.33                |
| $\omega_{\text{on}} > \omega_{\text{off}}$ | 15 ( $\omega_{\text{on}}$ )  | 9.78 ( $\omega_{\text{off}}$ ) | 6.61             | 12.33                 |

TABLE II. The detailed information for the two different designed layouts. (upper) The sets of capacitances for the optimal m-layouts. (lower) The optimal characterized frequencies and maximum QCC couplings with  $\omega_l = 15$  GHz.

In summary, we applied cQED theory to the QCC ar-

chitecture from the layout perspective and came up with three crucial results: a zero-coupling condition (Eq. (5)), an upper bound of QCC coupling (Eq. (7)), and an optimal layout design procedure (Fig. 3). Among these findings, we want to highlight especially the QCC coupling extremity, namely  $0.0822 \omega_l / \beta_s^2$ . Its dependence on the artificially given quantities  $\omega_l, \beta_s$  instead of specific layouts makes it a robust conclusion from a global architecture view and therefore significantly reveals the limitation of the prevalent tunable coupler architecture. In addition, the well-defined layout design procedure is expected to be used as a prominent instruction through which anyone can be an expert in designing QCC layouts of high performance. Last but not least, if one has special requirements and the procedure is not essential, the zero-coupling condition could kindly offer some help before or after the layout design. Although we fill up the gap between the design demands and capacitance parameters, how to transform automatically the targeted capacitance parameters to the geometric parameters remains to be studied. Looking forward, the train of thought and techniques introduced in this work could be extended to other architectures or other components, which will no doubt accelerate the research and development of superconducting quantum chips. We also expect more novel and promising QCC layouts with different distinguishing features will be developed in an efficient way, and the superconducting quantum chip design automation will be moved forward to a new level as well.

We would like to thank Yu-Xuan Wang and Ke-Hui Yu for helpful discussions.



- 
- [1] P. Shor, Algorithms for quantum computation: Discrete logarithms and factoring, in *Proceedings 35th Annual Symposium on Foundations of Computer Science* (1994) pp. 124–134.
- [2] L. K. Grover, A fast quantum mechanical algorithm for database search, in *Proceedings of the Twenty-Eighth Annual ACM Symposium on Theory of Computing*, STOC '96 (New York, NY, USA, 1996) pp. 212–219.
- [3] P. Krantz, M. Kjaergaard, F. Yan, T. P. Orlando, S. Gustavsson, and W. D. Oliver, A quantum engineer's guide to superconducting qubits, *Applied Physics Reviews* **6**, 021318 (2019).
- [4] J. Clarke and F. K. Wilhelm, Superconducting quantum bits, *Nature* **453**, 1031 (2008).
- [5] J. Q. You and F. Nori, Superconducting Circuits and Quantum Information, *Physics Today* **58**, 42 (2005).
- [6] J. Q. You and F. Nori, Atomic physics and quantum optics using superconducting circuits, *Nature* **474**, 589 (2011).
- [7] W. D. Oliver and P. B. Welander, Materials in superconducting quantum bits, *MRS Bulletin* **38**, 816 (2013).
- [8] M. H. devoret and J. M. Martinis, Implementing Qubits with Superconducting Integrated Circuits, *Quantum Information Processing* **3**, 163 (2004).
- [9] X. Gu, A. F. Kockum, A. Miranowicz, Y.-x. Liu, and F. Nori, Microwave photonics with superconducting quantum circuits, *Physics Reports* **718–719**, 1 (2017).
- [10] S. M. Girvin, Circuit QED: Superconducting qubits coupled to microwave photons, in *Quantum Machines: Measurement and Control of Engineered Quantum Systems* (2014) pp. 113–256.
- [11] R. J. Schoelkopf and S. M. Girvin, Wiring up quantum systems, *Nature* **451**, 664 (2008).
- [12] J. M. Gambetta, J. M. Chow, and M. Steffen, Building logical qubits in a superconducting quantum computing system, *npj Quantum Information* **3**, 2 (2017).
- [13] G. Wendin, Quantum information processing with superconducting circuits: A review, *Reports on Progress in Physics* **80**, 106001 (2017).
- [14] Y. Y. Gao, M. A. Rol, S. Touzard, and C. Wang, Practical Guide for Building Superconducting Quantum Devices, *PRX Quantum* **2**, 040202 (2021).
- [15] F. Yan, P. Krantz, Y. Sung, M. Kjaergaard, D. L. Campbell, T. P. Orlando, S. Gustavsson, and W. D. Oliver, Tunable Coupling Scheme for Implementing High-Fidelity Two-Qubit Gates, *Physical Review Applied* **10**, 054062 (2018).
- [16] F. Arute *et al.*, Quantum supremacy using a programmable superconducting processor, *Nature* **574**, 505 (2019).
- [17] Y. Wu *et al.*, Strong quantum computational advantage using a superconducting quantum processor, *Physical Review Letters* **127**, 180501 (2021).
- [18] Q. Zhu *et al.*, Quantum computational advantage via 60-qubit 24-cycle random circuit sampling, *Science Bulletin* **67**, 240 (2022).
- [19] S. Ashhab, P. C. de Groot, and F. Nori, Speed limits for quantum gates in multiqubit systems, *Physical Review A* **85**, 052327 (2012).
- [20] E. A. Sete, A. Q. Chen, R. Manenti, S. Kulshreshtha, and S. Poletto, Floating Tunable Coupler for Scalable Quantum Computing Architectures, *Physical Review Applied* **15**, 064063 (2021).
- [21] P. Zhang *et al.*, Many-body Hilbert space scarring on a superconducting processor, *Nature Physics* , 1 (2022).
- [22] Y. Xu *et al.*, High-Fidelity, High-Scalability Two-Qubit Gate Scheme for Superconducting Qubits, *Physical Review Letters* **125**, 240503 (2020).
- [23] M. C. Collodo, J. Herrmann, N. Lacroix, C. K. Andersen, A. Remm, S. Lazar, J.-C. Besse, T. Walter, A. Wallraff, and C. Eichler, Implementation of Conditional Phase Gates Based on Tunable ZZ Interactions, *Physical Review Letters* **125**, 240502 (2020).
- [24] X. Li *et al.*, Tunable Coupler for Realizing a Controlled-Phase Gate with Dynamically Decoupled Regime in a Superconducting Circuit, *Physical Review Applied* **14**, 024070 (2020).
- [25] Y. Sung *et al.*, Realization of High-Fidelity CZ and ZZ-Free iSWAP Gates with a Tunable Coupler, *Physical Review X* **11**, 021058 (2021).
- [26] J. Stehlik *et al.*, Tunable Coupling Architecture for Fixed-Frequency Transmon Superconducting Qubits, *Physical Review Letters* **127**, 080505 (2021).
- [27] See Supplemental Material for detailed derivations.
- [28] F. Marxer *et al.*, Long-distance transmon coupler with CZ gate fidelity above 99.8%, [arXiv:2208.09460](https://arxiv.org/abs/2208.09460).
- [29] C. D. Wilen *et al.*, Correlated Charge Noise and Relaxation Errors in Superconducting Qubits, *Nature* **594**, 369 (2021).
- [30] Note that  $\beta$  is taken as the average value of two identical-qubit-coupler dispersive rates since they are the same in theory but slightly diverge in electromagnetic simulation.
- [31] K.-H. Yu, Y.-H. Fu, X.-Y. Jiao, and L.-J. Jin, Superconducting quantum chip verification automation (private communication).

# Supplemental Material for “Quantum Chip Design Automation in Superconducting Coupler Architecture”

Fei-Yu Li and Li-Jing Jin\*

*Institute for Quantum Computing, Baidu Research, Beijing 100193, China*

(Dated: December 29, 2022)

## I. DERIVATION OF THE ZERO-COUPLING CONDITION

In this section, we derive the zero-coupling condition. Starting with the general case, we apply a second-order Schrieffer-Wolff transformation to the general Hamiltonian of the superconducting coupler architecture, and assume the coupler remains in ground state all the time, obtaining the well-known QQe coupling strength [1]

$$g = g_{12} - \frac{g_{1c}g_{2c}}{2} \left( \frac{1}{\Delta_1} + \frac{1}{\Delta_2} + \frac{1}{\Sigma_1} + \frac{1}{\Sigma_2} \right), \quad (\text{S1})$$

where  $g_{12}, g_{1c}, g_{2c}$  are qubit-qubit direct coupling and qubit-coupler couplings respectively and  $\Delta_j = \omega_c - \omega_j, \Sigma_j = \omega_c + \omega_j$  with  $j = 1, 2$  denoted as two qubits. Since the qubits and coupler are coupled capacitively, the coupling strengths can be further expressed in terms of charging energies and Josephson energies:

$$\begin{aligned} g_{12} &= \frac{E_{12}}{\sqrt{2}} \left( \frac{E_{J1}}{E_{C1}} \frac{E_{J2}}{E_{C2}} \right)^{\frac{1}{4}}, \\ g_{jc} &= \frac{E_{jc}}{\sqrt{2}} \left( \frac{E_{Jj}}{E_{Cj}} \frac{E_{Jc}}{E_{Cc}} \right)^{\frac{1}{4}}, \quad j \in \{1, 2\}. \end{aligned} \quad (\text{S2})$$

Substituting Eq. (S2) into Eq. (S1) and taking  $\omega_k \approx \sqrt{8E_{Ck}E_{Jk}}, k \in \{1, 2, c\}$ , we obtain the QQe coupling expressed in terms of the crucial quantity  $A, B$ :

$$g = \frac{2\sqrt{\omega_1\omega_2}}{B} \left[ A - \frac{\frac{\omega_c^2}{\omega_c^2 - \omega_1^2} + \frac{\omega_c^2}{\omega_c^2 - \omega_2^2}}{2} \right], \quad (\text{S3})$$

where the dimensionless parameters  $A = 2E_{12}E_{Cc}/(E_{1c}E_{2c})$  and  $B = 16\sqrt{E_{C1}E_{C2}E_{Cc}}/(E_{1c}E_{2c})$ .

To switch off the QQe coupling, namely let  $g = 0$ , therefore  $A = (\omega_c^2/(\omega_c^2 - \omega_1^2) + \omega_c^2/(\omega_c^2 - \omega_2^2))/2$ . Since  $\omega_c^2/(\omega_c^2 - \omega_j^2) > 1, j \in \{1, 2\}$  always holds in the  $\omega_c > \omega_j$  regime, it is natural to obtain the necessary condition for zero-coupling

$$A > 1. \quad (\text{S4})$$

Next, we look into the upper bound of  $A$ . In particular, we assume two qubits are identical and symmetric, namely  $\omega_1 = \omega_2 = \omega_q, E_{C1} = E_{C2}, |E_{1c}| = |E_{2c}|$ ,  $A$  reads

$$A = \frac{\omega_c^2}{\omega_c^2 - \omega_q^2}, \quad (\text{S5})$$

and the qubit-coupler dispersive rate can be defined as

$$\frac{1}{\beta} \approx \frac{1}{\sqrt{|B|}} \frac{\sqrt{\omega_c\omega_q}}{\omega_c - \omega_q}, \quad (\text{S6})$$

as we discussed in the main text.

Substituting Eq. (S6) into Eq. (S5), we obtain

$$A = \frac{1}{2} \left( 1 + \sqrt{1 + \frac{4|B|}{\beta^2}} \right). \quad (\text{S7})$$

Since the whole theory only works in dispersive limit  $\beta \geq \beta_s$  ( $\beta_s$  denotes the minimum dispersive rate permitted), thus we have

$$A \leq \frac{1}{2} \left( 1 + \sqrt{1 + \frac{4|B|}{\beta_s^2}} \right). \quad (\text{S8})$$

## II. DERIVATION OF CHARGING AND COUPLING ENERGIES IN TERMS OF CAPACITANCES

In the main text, we mentioned that charging energies  $E_{C1}, E_{C2}, E_{Cc}$  and capacitive coupling energies  $E_{1c}, E_{2c}, E_{12}$  are all functions of  $\mathcal{C}$ , here we show the derived procedure to obtain the explicit form. Let us start from the QCC system Langrangian:

$$\mathcal{L} = T - U, \quad (\text{S9})$$

$$T = \frac{1}{2} \dot{\Phi}_M^T \mathbf{M} \dot{\Phi}_M, \quad (\text{S10})$$

$$U = \sum_{k \in \{q_1, q_2, c\}} E_{Jk} \left( 1 - \cos \left( \frac{2\pi \Phi_{\Delta k}}{\Phi_0} \right) \right), \quad (\text{S11})$$

where  $T$  and  $U$  are the kinetic and potential energy respectively;  $\dot{\Phi}_M = \text{vec}(\dot{\Phi}_1, \dot{\Phi}_2, \dots)^T$  where  $\Phi_\mu$  ( $\mu = 1, 2, \dots$ ) is the node flux of the  $\mu$ -th metal plate and  $\dot{\Phi}_\mu$  corresponds to its node potential;  $\mathbf{M}$  is the Maxwell capacitance matrix where the diagonal element  $\mathbf{M}_{\mu\mu}$  is the sum of self-capacitance and all the mutual capacitances for the  $\mu$ -th metal plate, and the off-diagonal element  $\mathbf{M}_{\mu\nu}$  ( $\mu, \nu = 1, 2, \dots, \mu \neq \nu$ ) is the negative value of the mutual capacitance between the  $\mu$ -th and  $\nu$ -th metal plates;  $q_1, q_2, c$  refer to two qubits and the coupler respectively;  $\Phi_{\Delta k}$  is the flux through the element's Josephson junction (or SQUID), which we call the junction flux. Rather than the node flux  $\Phi_\mu$ , the junction flux  $\Phi_{\Delta k}$  is the one who contributes to the energy oscillation. Therefore, we will use junction fluxes as the primary variables

\* jinlijing@baidu.com

in the Hamiltonian. In addition, to be able to distinguish elements and metal plates clearly, it is noted that we use  $q_1, q_2, c$  as subscripts of two qubits and the coupler respectively in Sec. II-IV instead of 1, 2,  $c$  in the main text.

For grounded elements which contain single metal plates, the junction flux  $\Phi_{\Delta_k}$  equal to the node flux  $\Phi_k$  naturally. In contrast, for floating elements which contains double metal plates, the junction flux reads  $\Phi_{\Delta_k} = \Phi_{k1} - \Phi_{k2}$  where  $\Phi_{k1}, \Phi_{k2}$  represent the node fluxes of two metal plates. For substitution, we introduce an auxiliary flux  $\Phi_{\Sigma_k} = \Phi_{k1} + \Phi_{k2}$  [2], leading to

$$\begin{pmatrix} \Phi_{k1} \\ \Phi_{k2} \end{pmatrix} = \begin{pmatrix} 1/2 & 1/2 \\ 1/2 & -1/2 \end{pmatrix} \begin{pmatrix} \Phi_{\Sigma_k} \\ \Phi_{\Delta_k} \end{pmatrix}. \quad (\text{S12})$$

Together with  $\Phi_k = \Phi_{\Delta_k}$  for grounded elements, we can build a transform matrix  $\mathbf{S}$  for the transformation between node fluxes and junction fluxes. Taking grounded qubits  $q_1, q_2$  and floating coupler  $c$  for instance, the transformation reads  $\dot{\Phi}_M = \mathbf{S}\dot{\Phi}$  where

$$\dot{\Phi}_M = \begin{pmatrix} \dot{\Phi}_{q_1} \\ \dot{\Phi}_{c1} \\ \dot{\Phi}_{c2} \\ \dot{\Phi}_{q_2} \end{pmatrix}, \dot{\Phi} = \begin{pmatrix} \dot{\Phi}_{\Delta_{q_1}} \\ \dot{\Phi}_{\Sigma_c} \\ \dot{\Phi}_{\Delta_c} \\ \dot{\Phi}_{\Delta_{q_2}} \end{pmatrix}, \mathbf{S} = \begin{pmatrix} 1 & 0 & 0 & 0 \\ 0 & 1/2 & 1/2 & 0 \\ 0 & 1/2 & -1/2 & 0 \\ 0 & 0 & 0 & 1 \end{pmatrix}. \quad (\text{S13})$$

Note that the element orders in  $\dot{\Phi}_M, \dot{\Phi}$ , and  $\mathbf{S}$  must be consistent. Then we can rewrite the kinetic energy as

$$T = \frac{1}{2} \dot{\Phi}^T \mathbf{C} \dot{\Phi}, \quad (\text{S14})$$

where  $\mathbf{C} = \mathbf{S}^T \mathbf{M} \mathbf{S}$  naturally.

Introducing the charge variables

$$Q_{\Delta_k} = \frac{\partial \mathcal{L}}{\partial \dot{\Phi}_{\Delta_k}}, \quad Q_{\Sigma_k} = \frac{\partial \mathcal{L}}{\partial \dot{\Phi}_{\Sigma_k}}, \quad (\text{S15})$$

the kinetic energy is transformed as

$$T = \frac{1}{2} \mathbf{Q}^T \mathbf{C}^{-1} \mathbf{Q}, \quad (\text{S16})$$

where  $\mathbf{Q} = \text{vec}(Q_{\Delta_{q_1}}, Q_{\Sigma_c}, Q_{\Delta_c}, Q_{\Delta_{q_2}})^T$ . Again we introduce new variables, the Cooper pair number operators as  $\hat{n} = Q/2e$ , the kinetic energy further reads

$$T = 4e^2 \cdot \frac{1}{2} \mathbf{N}^T \mathbf{C}^{-1} \mathbf{N}, \quad (\text{S17})$$

where  $\mathbf{N} = \text{vec}(\hat{n}_{\Delta_{q_1}}, \hat{n}_{\Sigma_c}, \hat{n}_{\Delta_c}, \hat{n}_{\Delta_{q_2}})^T$ . As we mentioned before, only  $\Phi_{\Delta_k}$  is engaged in the energy oscillation, thus the element mode is represented by  $\hat{n}_{\Delta_k}$  [2], namely  $\hat{n}_k = \hat{n}_{\Delta_k}, k \in \{q_1, q_2, c\}$  for both grounded and floating elements. By expanding  $T$  and omitting all the  $\hat{n}_{\Sigma_k}$  terms, we obtain

$$T = \sum_{k \in \{q_1, q_2, c\}} 4E_{Ck} \hat{n}_k^2 + \sum_{i, j \in \{q_1, q_2, c\}, i \neq j} 4E_{ij} \hat{n}_i \hat{n}_j, \quad (\text{S18})$$

where

$$E_{Ck} = e^2 \frac{\mathbf{C}_{\Delta_k, \Delta_k}^{-1}}{2}, \quad (\text{S19})$$

$$E_{ij} = e^2 \mathbf{C}_{\Delta_i, \Delta_j}^{-1}, \quad i, j, k \in \{q_1, q_2, c\}, i \neq j. \quad (\text{S20})$$

As a consequence, the charging energies  $E_{Ck}$  and capacitive coupling energies  $E_{ij}$  are expressed in terms of capacitances  $\mathcal{C}$ . Besides, the result also indicates that all the QCQ systems of different configurations lead to a uniform Hamiltonian presentation as we stressed at the beginning of the main text. In the practical design, we firstly obtain the Maxwell capacitance matrix  $\mathbf{M}$  of the layout by capacitance simulation. According to different element structure types, we then build the corresponding transform matrix  $\mathbf{S}$  where the element and related metal plate orders is consistent with  $\mathbf{M}$ . At the end, we are able to obtain  $\mathbf{C} = \mathbf{S}^T \mathbf{M} \mathbf{S}$ , leading to the concerned  $E_{Ck}(\mathcal{C})$  and  $E_{ij}(\mathcal{C})$ .

### III. DERIVATION OF $A$ IN G-G-G AND F-G-F CONFIGURATIONS

#### A. G-G-G configuration

We now consider the general case in G-G-G configuration, as shown in Fig. S1(a). Then the capacitance matrix  $\mathbf{C}$  reads

$$\mathbf{C} = \mathbf{M} =$$

$$\begin{pmatrix} C_{01} + C_{1c} + C_{12} & -C_{1c} & -C_{12} \\ -C_{1c} & C_{0c} + C_{1c} + C_{2c} & -C_{2c} \\ -C_{12} & -C_{2c} & C_{02} + C_{2c} + C_{12} \end{pmatrix}, \quad (\text{S21})$$

with  $\dot{\Phi} = \dot{\Phi}_M = \text{vec}(\dot{\Phi}_{\Delta_{q_1}}, \dot{\Phi}_{\Delta_c}, \dot{\Phi}_{\Delta_{q_2}})^T$ . Then we obtain  $E_{Cq_1} = e^2 \mathbf{C}_{11}^{-1}/2, E_{Cc} = e^2 \mathbf{C}_{22}^{-1}/2, E_{Cq_2} = e^2 \mathbf{C}_{33}^{-1}/2, E_{q_1c} = e^2 \mathbf{C}_{12}^{-1}, E_{q_2c} = e^2 \mathbf{C}_{23}^{-1}, E_{q_1q_2} = e^2 \mathbf{C}_{13}^{-1}$ . Therefore,  $A$  reads

$$A_{\text{G-G-G}} = \frac{2E_{q_1q_2}E_{Cc}}{E_{q_1c}E_{q_2c}} = \frac{\mathbf{C}_{13}^{-1}\mathbf{C}_{22}^{-1}}{\mathbf{C}_{12}^{-1}\mathbf{C}_{23}^{-1}}. \quad (\text{S22})$$

Taking the assumption of identical and symmetric qubits namely  $C_{01} = C_{02} = C_{0q}, C_{1c} = C_{2c} = C_{qc}, C_{12} = C_{qq}$ , then we can obtain the explicit expression of  $A_{\text{G-G-G}}$  in the main text using Eq. (S21)

$$A_{\text{G-G-G}} = \frac{(C_{0q} + C_{qc})(C_{qc}^2 + C_{0c}C_{qq} + 2C_{qc}C_{qq})}{C_{qc}^2(C_{0q} + C_{qc} + 2C_{qq})}. \quad (\text{S23})$$

If we considering the long-range qubit-qubit coupling, namely taking  $C_{qq} = 0$ , then one can immediately obtain  $A_{\text{G-G-G}} = 1$ .



Also, we can further obtain

$$B_{G-G-G} = \frac{16E_{Cq}E_{Cc}}{E_{q1c}E_{q2c}} = \frac{4\mathbf{C}_{11}^{-1}\mathbf{C}_{22}^{-1}}{\mathbf{C}_{12}^{-1}\mathbf{C}_{23}^{-1}} \\ = \frac{4C_{0c}(C_{0q} + C_{qc})(C_{0q} + C_{qc} + C_{qq})}{C_{qc}^2(C_{0q} + C_{qc} + 2C_{qq})} \\ + \frac{4(C_{0q} + C_{qc})(2C_{0q} + C_{qc} + 2C_{qq})}{C_{qc}(C_{0q} + C_{qc} + 2C_{qq})}, \quad (\text{S24})$$

$$E_{Cq}/e^2 = \mathbf{C}_{11}^{-1}/2 = \frac{1}{4} \left( \frac{C_{0c} + 2C_{qc}}{C_{0c}(C_{0q} + C_{qc}) + 2C_{0q}C_{qc}} \right. \\ \left. + \frac{1}{C_{0q} + C_{qc} + 2C_{qq}} \right). \quad (\text{S25})$$

With the help of Eqs. (S23)-(S25), we can further realize the calculation in the main text to obtain the optimal set of capacitances in G-G-G configuration.

### B. F-G-F configuration

In F-G-F configuration, the number of capacitances is enormous in the general case, for simplification we consider all the mutual capacitances between floating qubits as zero in advance, as shown in Fig. S1(b). Then its node potentials and Maxwell capacitance matrix read

$$\dot{\Phi}_M = \begin{pmatrix} \dot{\Phi}_{q11} \\ \dot{\Phi}_{q12} \\ \dot{\Phi}_c \\ \dot{\Phi}_{q21} \\ \dot{\Phi}_{q22} \end{pmatrix}, \quad \mathbf{M} = \begin{pmatrix} \mathbf{M}_{11} & \mathbf{M}_{12} & \mathbf{M}_{13} & 0 & 0 \\ \mathbf{M}_{21} & \mathbf{M}_{22} & \mathbf{M}_{23} & 0 & 0 \\ \mathbf{M}_{31} & \mathbf{M}_{32} & \mathbf{M}_{33} & \mathbf{M}_{34} & \mathbf{M}_{35} \\ 0 & 0 & \mathbf{M}_{43} & \mathbf{M}_{44} & \mathbf{M}_{45} \\ 0 & 0 & \mathbf{M}_{53} & \mathbf{M}_{54} & \mathbf{M}_{55} \end{pmatrix},$$

$$\begin{aligned} \mathbf{M}_{11} &= C_{01} + C_{12} + C_{1c}, \\ \mathbf{M}_{22} &= C_{02} + C_{12} + C_{2c}, \\ \mathbf{M}_{33} &= C_{0c} + C_{1c} + C_{2c} + C_{3c} + C_{4c}, \\ \mathbf{M}_{44} &= C_{03} + C_{34} + C_{3c}, \\ \mathbf{M}_{55} &= C_{04} + C_{34} + C_{4c}, \\ \mathbf{M}_{12} &= \mathbf{M}_{21} = -C_{12}, \\ \mathbf{M}_{13} &= \mathbf{M}_{31} = -C_{1c}, \\ \mathbf{M}_{23} &= \mathbf{M}_{32} = -C_{2c}, \\ \mathbf{M}_{34} &= \mathbf{M}_{43} = -C_{3c}, \\ \mathbf{M}_{35} &= \mathbf{M}_{53} = -C_{4c}, \\ \mathbf{M}_{45} &= \mathbf{M}_{54} = -C_{34}, \end{aligned} \quad (\text{S26})$$

where  $\dot{\Phi}_{qk1}, \dot{\Phi}_{qk2}, k = 1, 2$  represent the node potentials of two metal plates contained in the floating qubits, and  $\dot{\Phi}_c$  is the node potential of the grounded coupler. Using the transform matrix

$$\mathbf{S} = \begin{pmatrix} 1/2 & 1/2 & 0 & 0 & 0 \\ 1/2 & -1/2 & 0 & 0 & 0 \\ 0 & 0 & 1 & 0 & 0 \\ 0 & 0 & 0 & 1/2 & 1/2 \\ 0 & 0 & 0 & 1/2 & -1/2 \end{pmatrix}, \quad (\text{S27})$$

we obtain

$$\dot{\Phi} = \begin{pmatrix} \dot{\Phi}_{\Sigma q1} \\ \dot{\Phi}_{\Delta q1} \\ \dot{\Phi}_{\Delta c} \\ \dot{\Phi}_{\Sigma q2} \\ \dot{\Phi}_{\Delta q2} \end{pmatrix}, \quad \mathbf{C} = \begin{pmatrix} \mathbf{C}_{11} & \mathbf{C}_{12} & \mathbf{C}_{13} & 0 & 0 \\ \mathbf{C}_{21} & \mathbf{C}_{22} & \mathbf{C}_{23} & 0 & 0 \\ \mathbf{C}_{31} & \mathbf{C}_{32} & \mathbf{C}_{33} & \mathbf{C}_{34} & \mathbf{C}_{35} \\ 0 & 0 & \mathbf{C}_{43} & \mathbf{C}_{44} & \mathbf{C}_{45} \\ 0 & 0 & \mathbf{C}_{53} & \mathbf{C}_{54} & \mathbf{C}_{55} \end{pmatrix},$$

$$\begin{aligned} \mathbf{C}_{11} &= (C_{01} + C_{02} + C_{1c} + C_{2c})/4, \\ \mathbf{C}_{22} &= (C_{01} + C_{02} + 4C_{12} + C_{1c} + C_{2c})/4, \\ \mathbf{C}_{33} &= C_{0c} + C_{1c} + C_{2c} + C_{3c} + C_{4c}, \\ \mathbf{C}_{44} &= (C_{03} + C_{04} + C_{3c} + C_{4c})/4, \\ \mathbf{C}_{55} &= (C_{03} + C_{04} + 4C_{34} + C_{3c} + C_{4c})/4, \\ \mathbf{C}_{12} &= \mathbf{C}_{21} = (C_{01} - C_{02} + C_{1c} - C_{2c})/4, \\ \mathbf{C}_{13} &= \mathbf{C}_{31} = (-C_{1c} - C_{2c})/2, \\ \mathbf{C}_{23} &= \mathbf{C}_{32} = (C_{2c} - C_{1c})/2, \\ \mathbf{C}_{34} &= \mathbf{C}_{43} = (-C_{3c} - C_{4c})/2, \\ \mathbf{C}_{35} &= \mathbf{C}_{53} = (C_{4c} - C_{3c})/2, \\ \mathbf{C}_{45} &= \mathbf{C}_{54} = (C_{03} - C_{04} + C_{3c} - C_{4c})/4. \end{aligned} \quad (\text{S28})$$

Therefore, the charging and coupling energies are  $E_{Cq1} = e^2\mathbf{C}_{22}^{-1}/2, E_{Cc} = e^2\mathbf{C}_{33}^{-1}/2, E_{Cq2} = e^2\mathbf{C}_{55}^{-1}/2, E_{q1c} = e^2\mathbf{C}_{23}^{-1}, E_{q2c} = e^2\mathbf{C}_{35}^{-1}, E_{q1q2} = e^2\mathbf{C}_{25}^{-1}$ , resulting in

$$A_{F-G-F} = \frac{\mathbf{C}_{25}^{-1}\mathbf{C}_{33}^{-1}}{\mathbf{C}_{23}^{-1}\mathbf{C}_{35}^{-1}}. \quad (\text{S29})$$

Through mathematical calculation with aid of software,  $A$  is evaluated as one as well in F-G-F configuration.

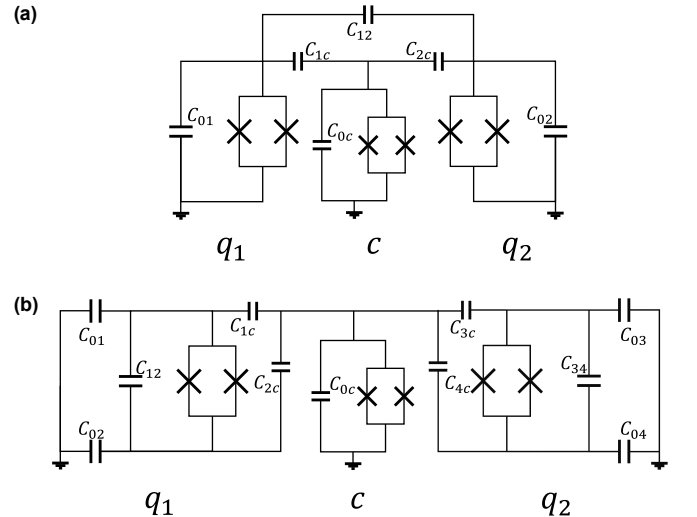


FIG. S1. (a) The equivalent circuit of the G-G-G configuration. (b) The equivalent circuit of the F-G-F configuration, where we already omit the mutual capacitances between the two qubits  $q_1$  and  $q_2$ .

#### IV. THE SIGN OF $E_{12}$

In the main text, we stressed that  $B$  shares the same sign with  $E_{12}$  (the coupling energy between two qubits). Next, let us look into the sign of  $E_{12}$ .

Taking G-G-G configuration as an example, and defining  $\Phi_{\Delta_k} = \Phi_k, k \in \{q_1, q_2, c\}$  for each element, we obtain  $\mathbf{C} = \mathbf{M}$  given in Eq. (S21), leading to

$$E_{12}/e^2 = \mathbf{C}_{13}^{-1} = \frac{C_{0c}C_{qq} + C_{qc}^2 + 2C_{qc}C_{qq}}{(C_{0c}(C_{0q} + C_{qc}) + 2C_{0q}C_{qc})(C_{0q} + C_{qc} + 2C_{qq})}, \quad (\text{S30})$$

where we take the assumption of identical and symmetric qubits. Apparently,  $E_{12}$  is always positive. However, if the flux through  $q_2$  is defined as  $\Phi_{\Delta_{q_2}} = -\Phi_{q_2}$  instead, then we need to use

$$\mathbf{S} = \begin{pmatrix} 1 & 0 & 0 \\ 0 & 1 & 0 \\ 0 & 0 & -1 \end{pmatrix} \quad (\text{S31})$$

for transformation, leading to

$$\mathbf{C} = \mathbf{S}^T \mathbf{M} \mathbf{S} = \begin{pmatrix} C_{01} + C_{1c} + C_{12} & -C_{1c} & C_{12} \\ -C_{1c} & C_{0c} + C_{1c} + C_{2c} & C_{2c} \\ C_{12} & C_{2c} & C_{02} + C_{2c} + C_{12} \end{pmatrix}. \quad (\text{S32})$$

In this case, we obtain

$$E_{12}/e^2 = \mathbf{C}_{13}^{-1} = -\frac{C_{0c}C_{qq} + C_{qc}^2 + 2C_{qc}C_{qq}}{(C_{0c}(C_{0q} + C_{qc}) + 2C_{0q}C_{qc})(C_{0q} + C_{qc} + 2C_{qq})}, \quad (\text{S33})$$

which is exactly the negative value of Eq. (S30). This implies the sign of  $E_{12}$  can be always managed artificially.

Particularly, for the QCQ system containing floating elements, we can also define  $\Phi_{\Delta_k} = \Phi_{k2} - \Phi_{k1}$  instead of  $\Phi_{\Delta_k} = \Phi_{k1} - \Phi_{k2}$  for a floating  $k$ -th element to manage the sign of  $E_{12}$ . Nevertheless, for a complicated QCQ system such as F-F-F configuration, it is indeed not straightforward to obtain a concise presentation of  $E_{12}$  to distinguish its sign, much less to manage it. Therefore, we need to take both cases of  $E_{12}$  to decide  $B$  for further discussion.

#### V. DERIVATION OF TURNED-ON QUBIT-QUBIT EFFECTIVE COUPLING STRENGTH AND RELATED PARAMETERS

We start with the QQe coupling

$$g = \frac{2\omega_q}{B} \left( A - \frac{\omega_c^2}{\omega_c^2 - \omega_q^2} \right). \quad (\text{S34})$$

In some cases, we care about the qubit-coupler dispersive rate  $\beta$  rather than the coupler frequency  $\omega_c$ , therefore, by the definition Eq. (S6) we obtain

$$\frac{\omega_q}{\omega_c} = 1 - \frac{\beta \left( \sqrt{\beta^2 + 4|B|} - \beta \right)}{2|B|}, \quad (\text{S35})$$

and then Eq. (S34) is rewritten as

$$g = \frac{2\omega_q}{B} \left[ A - \frac{1}{1 - \left( 1 - \frac{\beta \left( \sqrt{\beta^2 + 4|B|} - \beta \right)}{2|B|} \right)^2} \right]. \quad (\text{S36})$$

Using Eqs. (S34) and (S36), we can tie up the critical coupler frequencies  $\omega_{\text{on}}, \omega_{\text{off}}$  and consequently count in three constraints (namely the zero-coupling requirement, the qubit-coupler dispersive coupling, and the limited coupler frequency) altogether on the way studying the turned-on QQe coupling.

For the sub-regime  $\omega_{\text{on}} < \omega_{\text{off}}$ , we have  $\omega_s = \omega_{\text{on}}$  and  $\omega_l = \omega_{\text{off}}$ . We first use Eq. (S34) at  $\omega_l = \omega_{\text{off}}$  and let  $g = 0$ , leading to

$$A = \frac{\omega_l^2}{\omega_l^2 - \omega_q^2}. \quad (\text{S37})$$

While at  $\omega_s = \omega_{\text{on}}$  where  $\beta_s$  matters more than  $\omega_s$ , we substitute Eq. (S37) into Eq. (S36), leading to

$$|g_{\text{on}}| = \frac{2\omega_q}{|B|} \left[ \frac{1}{1 - \left( 1 - \frac{\beta_s \left( \sqrt{\beta_s^2 + 4|B|} - \beta_s \right)}{2|B|} \right)^2} - \frac{\omega_l^2}{\omega_l^2 - \omega_q^2} \right]. \quad (\text{S38})$$

For the regime  $\omega_{\text{on}} > \omega_{\text{off}}$ , we use Eq. (S36) at  $\omega_s = \omega_{\text{off}}$ , leading to

$$A = \frac{1}{1 - \left( 1 - \frac{\beta_s \left( \sqrt{\beta_s^2 + 4|B|} - \beta_s \right)}{2|B|} \right)^2}, \quad (\text{S39})$$

then substituting Eq. (S39) into Eq. (S34) and taking  $\omega_c = \omega_l$ , we obtain Eq. (S38) as well. As a result, the two regimes can be considered uniformly while distinguished by different  $A$ .

To simplify Eq. (S38), we further introduce

$$x = \frac{\omega_q}{\omega_s} = 1 - \frac{\beta_s \left( \sqrt{\beta_s^2 + 4|B|} - \beta_s \right)}{2|B|}, \quad (\text{S40})$$

$$y = \frac{\omega_s}{\omega_l} = \frac{1}{x} \frac{\omega_q}{\omega_l},$$

where  $x, y$  are both dimensionless. Since we always have  $\omega_q < \omega_s < \omega_l$  in  $\omega_q < \omega_c$  regime,  $x, y$  both lie in

(0, 1). Therefore, the turned-on QQe coupling strength Eq. (S38) can be finally derived as

$$|g_{\text{on}}| = \frac{2\omega_l}{\beta_s^2} \left[ \frac{(1-x)(1-y^2)x^2y}{(1+x)(1-x^2y^2)} \right], \quad (\text{S41})$$

where the restraints  $\omega_l$  and  $\beta_s$  are both extracted as detached pre-factors, leading to a concise presentation.

In addition, the related quantities  $A, B, \omega_q, \omega_s$  can also be expressed in terms of  $x, y, \omega_l, \beta_s$ . In particular, using Eq. (S40) we obtain

$$|B| = \frac{x}{(1-x)^2} \beta_s^2, \quad (\text{S42})$$

$$\omega_q = xy\omega_l, \quad (\text{S43})$$

$$\omega_s = y\omega_l. \quad (\text{S44})$$

Significantly,  $B, \omega_q, \omega_s$  are the same for both regimes. Using Eqs. (S37), (S39), (S40), we further obtain  $A$  for the two different sub-regimes, expressing as

$$A = \begin{cases} \frac{1}{1-x^2}, & \omega_{\text{on}} > \omega_{\text{off}}, \\ \frac{1}{1-x^2y^2}, & \omega_{\text{on}} < \omega_{\text{off}}. \end{cases} \quad (\text{S45})$$

---

[1] F. Yan, P. Krantz, Y. Sung, M. Kjaergaard, D. L. Campbell, T. P. Orlando, S. Gustavsson, and W. D. Oliver, Tunable Coupling Scheme for Implementing High-Fidelity Two-Qubit Gates, [Physical Review Applied](#) **10**, 054062

(2018).  
 [2] E. A. Sete, A. Q. Chen, R. Manenti, S. Kulshreshtha, and S. Poletto, Floating Tunable Coupler for Scalable Quantum Computing Architectures, [Physical Review Applied](#) **15**, 064063 (2021).