

Power Flows with Flat Voltage Profiles: an Exact Approach

Anthony B. Morton

July 2022

1 Background: the DC Power Flow conditions

Analysis of alternating-current electrical networks with prescribed power flows is complicated by the fact that network quantities are defined by two degrees of freedom, amplitude and phase displacement. This greatly complicates the mathematics compared with that of DC circuits and of AC circuits with prescribed currents.

When the focus for analysis is on the flows of active power and on the phase angle relationships between network voltages, it is common to adopt an idealised approach often described as *DC power flow*. Despite appearances, this does not mean solving a DC network with the same power flows. Rather, the ‘DC’ is a fossilised reference to DC network analysers, a type of mid-20th century analogue computer that embodied this approach to network solution in discrete electronics.

The ‘DC power flow’ idealisations for an AC power system are as follows:

- Network branches are assumed lossless or practically lossless, with series reactances X_α .
- Voltage magnitudes are assumed equal or nearly equal to nominal values, thus equal to 1 in a per-unit system based on nominal voltage V_{nom} and an arbitrarily chosen power base S_{base} .

With these idealisations, the full AC power flow equations can be replaced with a simplified set based on the familiar power-angle formula for a lossless branch

$$P_\alpha = \frac{|V_j||V_k|}{X_\alpha} \sin(\delta_j - \delta_k) \quad (1)$$

where P_α is the active power flow on branch α (nominally directed from bus j to bus k), X_α is the branch reactance, $|V_j|$ and $|V_k|$ the terminal bus voltage magnitudes, and δ_j , δ_k the corresponding voltage phase angles. Since by assumption $|V_j| = |V_k| = 1$, this further simplifies to

$$P_\alpha = B_\alpha \sin(\delta_j - \delta_k) \quad (2)$$

where $B_\alpha = 1/X_\alpha$ is the branch susceptance. Often the approximation is carried one step further, by supposing the phase difference small enough that the sine nonlinearity can be disregarded, thus

$$P_\alpha = B_\alpha (\delta_j - \delta_k). \quad (3)$$

Whether equations (2) or (3) are used to represent the network, the state of the idealised system is described by the phase angle δ_k at each busbar, and the power flow P_α on each branch. In the approximate form (3), the network equations can be physically modelled by DC circuit branches with conductances B_α , the DC node voltages serving as analogues of the angles δ_k and DC branch current (not power) as the analogue of P_α . This was the principle behind the DC network analyser.

Neither of the above idealising assumptions is truly valid in practical AC systems, especially that of lossless branches. All network branches have positive resistance and this can often be significant relative to the branch reactance. The complication, when nonzero resistances are considered, is that active power losses are determined by both the active and reactive power flows in the branch.

The assumption of uniform nominal or ‘flat’ voltages is also contradicted in practical scenarios, but is arguably more defensible than the zero-resistance assumption, at least for steady-state analysis of transmission networks where relatively abundant voltage controls ensure magnitudes remain within a few percent of nominal values.

This note provides methods for analysing AC power flows when the lossless assumption is discarded but the voltage profile is still assumed ‘flat’ in the sense that all voltages have 1pu magnitude. By moderating the level of idealisation, these methods can yield results that are more practically relevant in cases where network losses are non-negligible. They can also assist in demonstrating that theoretical results, obtained for lossless networks, are robust to nonzero resistance values. One such application is to the existence of circulating flows in wide-area networks [2], discussed toward the end of this note.

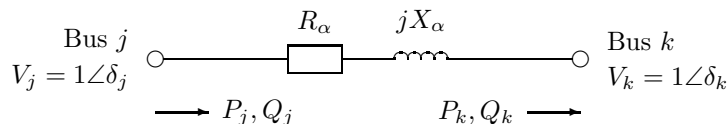


Figure 1: A single branch α in an AC network, with active power flow from bus j to bus k .

2 Definitions

Figure 1 depicts a generic branch α within an AC network, having series impedance $R_\alpha + jX_\alpha$ with $X_\alpha > 0$ and $R_\alpha \geq 0$. The relative size of the resistance can be measured by the ratio

$$\rho_\alpha = \frac{R_\alpha}{X_\alpha} \geq 0. \quad (4)$$

The terminal buses (nodes) are labelled j and k , and for present purposes the voltage magnitude is assumed to be nominal (1pu) at both buses. The voltage phase angles are denoted δ_j and δ_k respectively.

The complex power flow into the branch at bus j ('source end') is defined as $P_j + jQ_j$, with P denoting active power and Q denoting reactive power. Similarly, the complex power flow out of the branch at bus k ('receiving end') is denoted $P_k + jQ_k$. For definiteness it will be assumed that the orientation of the branch from j to k matches the direction of active power flow, and so

$$P_j \geq P_k \geq 0 \quad (5)$$

with $P_j = P_k$ when the branch is lossless ($R_\alpha = 0$).

The current flow in the branch will be denoted I_α , with magnitude $|I_\alpha|$, in terms of which the active and reactive power consumption satisfy the identities

$$P_j - P_k = R_\alpha |I_\alpha|^2 \geq 0, \quad Q_j - Q_k = X_\alpha |I_\alpha|^2 \geq 0, \quad (6)$$

from which also follows the identity

$$\mu_\alpha = X_\alpha P_j - R_\alpha Q_j = X_\alpha P_k - R_\alpha Q_k. \quad (7)$$

The *flow coefficient* μ_α will play an important role in the power flow solution below.

Lastly, the notation σ_α will denote the (dimensionless) ratio between the reactive power consumption on the branch and the receiving end active power:

$$\sigma_\alpha = \frac{X_\alpha |I_\alpha|^2}{P_k} \quad (\text{when } P_k > 0, \text{ else } \sigma_\alpha = 0). \quad (8)$$

This is denoted the branch *coefficient of support* and will also prove useful below.

3 Exact solution for a branch

From Ohm's law together with the fundamental complex power and voltage identities

$$V_j I_\alpha^* = P_j + jQ_j, \quad V_k I_\alpha^* = P_k + jQ_k, \quad V_j V_k^* = |V_j| |V_k| \exp j(\delta_j - \delta_k), \quad (9)$$

can be derived two key formulae that provide the exact power flow solution for the branch α of Figure 1. The first is the identity relating the flow coefficient to the phase angle shift

$$\mu_\alpha = X_\alpha P_j - R_\alpha Q_j = X_\alpha P_k - R_\alpha Q_k = |V_j| |V_k| \sin(\delta_j - \delta_k) \quad (10)$$

which generalises formula (1) to branches with arbitrary series resistances. The second is a quadratic equation relating the (squared) magnitudes of the endpoint voltages, written here for the receiving end k :

$$|V_k|^4 - [|V_j|^2 - 2(R_\alpha P_k + X_\alpha Q_k)] |V_k|^2 + (R_\alpha^2 + X_\alpha^2)(P_k^2 + Q_k^2) = 0. \quad (11)$$

Equation (11) is a useful tool for determining $|V_k|$ in situations where $|V_j|$, P_k and Q_k are known. Together with (10) it provides the general branch flow solution when any three of the five quantities $|V_j|$, $|V_k|$, P_k , Q_k and $\delta_j - \delta_k$ are known.

Under the ‘flat voltage’ assumption $|V_j| = |V_k| = 1$, formula (11) leads directly to the condition

$$(R_\alpha^2 + X_\alpha^2) (P_k^2 + Q_k^2) = -2 (R_\alpha P_k + X_\alpha Q_k). \quad (12)$$

For a given P_k , this yields a quadratic equation for Q_k

$$(R_\alpha^2 + X_\alpha^2) Q_k^2 + 2X_\alpha Q_k + [2R_\alpha P_k + (R_\alpha^2 + X_\alpha^2) P_k^2] = 0 \quad (13)$$

with solutions

$$Q_k = \frac{1}{R_\alpha^2 + X_\alpha^2} \left[-X_\alpha \pm \sqrt{X_\alpha^2 - 2R_\alpha (R_\alpha^2 + X_\alpha^2) P_k - (R_\alpha^2 + X_\alpha^2)^2 P_k^2} \right]. \quad (14)$$

Observe that with $X_\alpha > 0$ and $R_\alpha, P_k \geq 0$ by assumption, both solutions for Q_k are negative or zero (the latter only when $P_k = 0$). The solution with the positive sign is closer to zero, while the other is of order $1/X_\alpha$ (and lies on an ‘inverted branch’ of the network Q – V curve). Taking the former, therefore, as the ‘practical’ solution for Q_k and invoking the ratio (4) gives

$$Q_k = -\frac{1/X_\alpha}{1 + \rho_\alpha^2} \left[1 - \sqrt{1 - 2\rho_\alpha (1 + \rho_\alpha^2) (X_\alpha P_k) - (1 + \rho_\alpha^2)^2 (X_\alpha P_k)^2} \right]. \quad (15)$$

Except in the quiescent condition $P_k = 0$, the value Q_k given by (15) is strictly negative. That is to say, maintaining a flat voltage profile necessitates that there be an injection of reactive power Q_k at the receiving end of the branch, in the contrary direction to the active power P_k .

Aside from confirming Q_k is negative, (15) does not give immediate insight into the quantity required, although it points to a breakdown in the solution (voltage collapse) when P_k is of order $1/X_\alpha$. In most practical situations the magnitude of P_k is a good deal smaller, and it is helpful to approximate the square root using the Taylor expansion

$$\sqrt{1 - x} = 1 - \frac{x}{2} - \frac{x^2}{8} - \frac{x^3}{16} - O(x^4) \quad (16)$$

which leads to

$$\begin{aligned} & \sqrt{1 - 2\rho_\alpha (1 + \rho_\alpha^2) (X_\alpha P_k) - (1 + \rho_\alpha^2)^2 (X_\alpha P_k)^2} \\ &= 1 - \rho_\alpha (1 + \rho_\alpha^2) (X_\alpha P_k) - \frac{(1 + \rho_\alpha^2)^3}{2} (X_\alpha P_k)^2 - \frac{\rho_\alpha (1 + \rho_\alpha^2)^4}{2} (X_\alpha P_k)^3 - O((X_\alpha P_k)^4). \end{aligned} \quad (17)$$

Substituting in (15) and simplifying yields a more practical formula for Q_k when $X_\alpha P_k \ll 1$:

$$Q_k = -P_k \left[\rho_\alpha + \frac{(1 + \rho_\alpha^2)^2}{2} (X_\alpha P_k) + \frac{\rho_\alpha (1 + \rho_\alpha^2)^3}{2} (X_\alpha P_k)^2 + O((X_\alpha P_k)^3) \right]. \quad (18)$$

This formula reveals a qualitative difference between the reactive support requirements in a near-lossless branch relative to one with substantial resistance. In the lossless or near-lossless case, ρ_α is practically zero and so the leading term vanishes; the required reactive power is $Q_k \approx -(X_\alpha/2)P_k^2$ to leading order. On the other hand, when ρ_α is larger the leading term dominates, so that $Q_k \approx -\rho_\alpha P_k$ to leading order, and scales linearly with active power flow rather than quadratically.

Having solved for Q_k it is straightforward to determine the current I_α , sending-end reactive power Q_j , and the phase displacement $\delta_j - \delta_k$. To obtain practically useful formulae for these quantities, however, it is useful to introduce a dimensionless parameter that can temporarily set aside purely mathematical complications.

4 The Coefficient of Support

The *coefficient of support* σ_α is defined by (8) above:

$$\sigma_\alpha = \frac{X_\alpha |I_\alpha|^2}{P_k} \quad (\text{when } P_k > 0, \text{ else zero}).$$

To recap, if P_k is the power flow at the ‘receiving’ end of the branch α , then by definition $\Delta Q = \sigma_\alpha P_k$ is the total reactive power consumed in the branch reactance. Reactive power is a conserved quantity,

so there must be a compensating net injection of reactive power at the terminal buses to ‘support’ the power flow P_k .

Assuming $X_\alpha > 0$, the reactive power requirement is always positive when $P_k > 0$. If $P_k = 0$, then there is clearly no current flow on the branch and so the reactive power consumption is also zero: it will be seen below that in fact $\sigma_\alpha \rightarrow 0$ as $P_k \rightarrow 0$, which motivates extending the definition (8) to set $\sigma_\alpha = 0$ when $P_k = 0$.

The coefficient σ_α can be expressed explicitly in terms of P_k and the branch impedance alone, using the solution in the previous section. The identity $V_k I_\alpha^* = P_k + jQ_k$ immediately gives

$$|I_\alpha|^2 = \frac{1}{|V_k|^2} (P_k^2 + Q_k^2) = P_k^2 + Q_k^2 \quad (19)$$

and combining with the condition (12) for a flat voltage profile gives

$$|I_\alpha|^2 = P_k^2 + Q_k^2 = -\frac{2}{R_\alpha^2 + X_\alpha^2} (R_\alpha P_k + X_\alpha Q_k). \quad (20)$$

(Note this implies that Q_k is both negative and large enough that $R_\alpha P_k + X_\alpha Q_k$ is also negative.) It follows that

$$\sigma_\alpha = -2 \frac{R_\alpha X_\alpha}{R_\alpha^2 + X_\alpha^2} - 2 \frac{X_\alpha^2}{R_\alpha^2 + X_\alpha^2} \frac{Q_k}{P_k} = \frac{2}{1 + \rho_\alpha^2} \left(\frac{(-Q_k)}{P_k} - \rho_\alpha \right), \quad (21)$$

where Q_k is given in terms of P_k and the branch impedance by equation (15). The exact formula for σ_α that results is cumbersome, but when the asymptotic formula (18) for Q_k is used instead, a much nicer expression results:

$$\sigma_\alpha = (1 + \rho_\alpha^2) (X_\alpha P_k) + \rho_\alpha (1 + \rho_\alpha^2)^2 (X_\alpha P_k)^2 + O\left((X_\alpha P_k)^3\right). \quad (22)$$

It is evident that this expression for σ_α can in principle be continued as a power series in the quantity $X_\alpha P_k$, the coefficients being polynomials in ρ_α . To leading order σ_α is just $(X_\alpha + R_\alpha^2/X_\alpha)P_k$, and if the branch is lossless then σ_α is just $X_\alpha P_k$ with residual error of order $(X_\alpha P_k)^3$.

The power series (22) also hints at σ_α being a strictly increasing function of P_k , as intuition might suggest. This property can be confirmed by direct calculation using (21) and (15), which reveals that

$$\frac{\partial \sigma_\alpha}{\partial P_k} = \frac{\sigma_\alpha}{P_k \sqrt{\Delta}} > 0 \quad (P_k > 0) \quad (23)$$

where Δ is the discriminant under the square root in (15). When $P_k \rightarrow 0$ one may use L’Hôpital’s rule to find

$$\lim_{P_k \rightarrow 0} \frac{\partial \sigma_\alpha}{\partial P_k} = \frac{2}{1 + \rho_\alpha^2} \lim_{P_k \rightarrow 0} \left(\frac{1}{2} \frac{\partial^2 (-Q_k)}{\partial P_k^2} \right) = (1 + \rho_\alpha^2) X_\alpha > 0, \quad (24)$$

agreeing with the power series (22) and showing that σ_α is strictly increasing with $P_k \geq 0$.

With a little more effort it may also be shown that provided $P_k > 0$, σ_α is strictly increasing with the ratio ρ_α , all else being equal (in other words, strictly increasing with R_α for fixed X_α). Starting again from (15) and some algebraic manipulations, one may show that

$$\frac{\partial (-Q_k)}{\partial \rho_\alpha} = \frac{2\rho_\alpha}{(1 + \rho_\alpha^2) \sqrt{\Delta}} (-Q_k) + \frac{1 - \rho_\alpha^2}{1 + \rho_\alpha^2} \frac{P_k}{\sqrt{\Delta}} = \frac{P}{\sqrt{\Delta}} (1 + \rho_\alpha \sigma_\alpha), \quad (25)$$

from which it can be shown using (21) that

$$\frac{\partial \sigma_\alpha}{\partial \rho_\alpha} = \frac{2X_\alpha}{\sqrt{\Delta}} (1 + \rho_\alpha \sigma_\alpha) (-Q_k) > 0 \quad \text{when } P_k > 0. \quad (26)$$

Of course when $P_k = 0$, then $\sigma_\alpha = 0$ has no dependence on ρ_α .

It should likewise come as little surprise that σ_α is strictly increasing with X_α , when all other parameters are held constant (including the ratio ρ_α). Direct calculation using (21) and (15) confirms that indeed

$$\frac{\partial \sigma_\alpha}{\partial X_\alpha} = \frac{\sigma_\alpha}{X_\alpha \sqrt{\Delta}} > 0 \quad \text{when } P_k > 0. \quad (27)$$

As a consequence of all the above, it may be seen that if two of the three parameters P_k , X_α and ρ_α are fixed, there is a one-to-one mapping between σ_α and the third parameter in the set, such that the two variables increase or decrease together.

The coefficient of support yields simple exact formulae for all quantities associated with the branch power flow solution, given P_k and the branch impedance, as follows.

$$\text{Branch current:} \quad |I_\alpha| = \sqrt{\frac{\sigma_\alpha P_k}{X_\alpha}} \quad (28)$$

$$\text{Power losses:} \quad P_j - P_k = R_\alpha |I_\alpha|^2 = \rho_\alpha \sigma_\alpha P_k \quad (29)$$

$$\text{Receiving end Q:} \quad Q_k = \left(-\frac{1 + \rho_\alpha^2}{2} \sigma_\alpha - \rho_\alpha \right) P_k \quad (30)$$

$$\text{Sending end Q:} \quad Q_j = Q_k + \sigma_\alpha P_k = \left(\frac{1 - \rho_\alpha^2}{2} \sigma_\alpha - \rho_\alpha \right) P_k \quad (31)$$

$$\text{Sending end P:} \quad P_j = (1 + \rho_\alpha \sigma_\alpha) P_k \quad (32)$$

$$\text{Flow coefficient:} \quad \mu_\alpha = X_\alpha P_k - R_\alpha Q_k = X_\alpha P_k (1 + \rho_\alpha^2) \left(1 + \frac{\rho_\alpha \sigma_\alpha}{2} \right) \quad (33)$$

$$\text{Phase shift:} \quad \delta_j - \delta_k = \arcsin \mu_\alpha. \quad (34)$$

Formulae (30) and (31), specifically, indicate how reactive power support must be configured at the two ends of the branch in order to maintain the active power flow P_k under a flat voltage profile. For a lossless branch, this amounts to a symmetric injection $Q = (\sigma_\alpha/2)P$ at both ends. With nonzero resistance, there must be an additional Q flow superimposed on this symmetric injection, contrary to the direction of P flow and with magnitude $(\rho_\alpha + \rho_\alpha^2 \sigma_\alpha/2)P_k$.

Based on the fact observed above that σ_α is strictly increasing with $P_k \geq 0$, one may also confirm that the current $|I_\alpha|$, the power losses, the flow coefficient and the phase shift are also all strictly increasing functions of $P_k \geq 0$.

There is of course a limit to the power flow P_k that can be sustained in this manner: as P_k increases, the discriminant Δ under the square root in (15) decreases until eventually it reaches zero, beyond which point there is no solution for Q_k . Equating Δ to zero reveals that the limiting values for P_k and Q_k are

$$P_k = \frac{1}{X_\alpha} \cdot \frac{\sqrt{1 + \rho_\alpha^2} - \rho_\alpha}{1 + \rho_\alpha^2}, \quad \text{and} \quad Q_k = -\frac{1}{X_\alpha} \cdot \frac{1}{1 + \rho_\alpha^2}. \quad (35)$$

Formulae (21) and (33) and a little algebra then show that under the same conditions

$$\sigma_\alpha = \frac{2}{\sqrt{1 + \rho_\alpha^2}} \quad \text{and} \quad \mu_\alpha = \frac{1}{\sqrt{1 + \rho_\alpha^2}}. \quad (36)$$

These identities have notable practical implications for the limiting power flow condition: first, that at the limit the reactive power consumption on the branch can be up to twice the active power flow; and second, that the phase shift in bus voltages at the limit is equal to the ‘impedance angle’

$$\phi = \arcsin \frac{X_\alpha}{\sqrt{R_\alpha^2 + X_\alpha^2}}. \quad (37)$$

In particular, if $R_\alpha > 0$ then the maximum phase shift is strictly less than $\pi/2$. When $R_\alpha = 0$ on the other hand one has $P_k = -Q_k = 1/X_\alpha$, $\sigma_\alpha = 2$, $\mu_\alpha = 1$ and the phase shift is $\pi/2$ at the limit.

5 The power–angle relation with flat voltages

As noted at the outset, the ‘DC power flow’ approach to network solution hinges on the relation (1) between phase displacement and active power flow in a lossless branch:

$$\sin(\delta_j - \delta_k) = X_\alpha P_\alpha. \quad (|V_j| = |V_k| = 1, R_\alpha = 0)$$

It was seen above that after factoring in resistance, this must be modified to equation (33):

$$\sin(\delta_j - \delta_k) = \mu_\alpha = X_\alpha P_k (1 + \rho_\alpha^2) \left(1 + \frac{\rho_\alpha \sigma_\alpha}{2} \right),$$

where $P_k \leq P_j$ is the receiving end power, ρ_α is the R -to- X ratio, and the coefficient of support σ_α increases monotonically with any one of $(P_k, X_\alpha, \rho_\alpha)$ when the others are held fixed.

The monotonicity properties of σ_α assist greatly in understanding the *qualitative* behaviour of the relation (33) between power flow and angle displacement. To begin with, it asserts that all else being equal, an increase (reduction) in any of the parameters P_k , X_α or R_α will also increase (reduce) μ_α and, consequently, the angle displacement. Importantly, it also asserts that if the value of μ_α is fixed, then an increase (reduction) in one of these same parameters requires a corresponding reduction (increase) in one of the others to keep μ_α constant.

Equation (33) is however of limited assistance in obtaining *quantitative* solutions for μ_α or (especially) P_k . This requires working with an explicit formula for σ_α in terms of $(P_k, X_\alpha, \rho_\alpha)$, which can be obtained using (21) from the previous section and substituting (15) for Q_k . When the resulting formula for σ_α is used in (33), the result is

$$\mu_\alpha = X_\alpha P_k + \frac{\rho_\alpha}{1 + \rho_\alpha^2} \left(1 - \sqrt{1 - 2\rho_\alpha (1 + \rho_\alpha^2) (X_\alpha P_k) - (1 + \rho_\alpha^2)^2 (X_\alpha P_k)^2} \right). \quad (38)$$

This formula remains cumbersome, but simplifies substantially when rearranged to clear the square root. A subtle point emerges when doing so however: observe that the nonnegativity of the square root in (38) implies that μ_α and P_k must satisfy the inequality

$$\mu_\alpha - X_\alpha P_k \leq \frac{\rho_\alpha}{1 + \rho_\alpha^2}. \quad (39)$$

(This inequality ultimately stems from having excluded at the outset the ‘impractical’ solution for the reactive power Q_k .) Since (33) already implies that $\mu_\alpha \geq X_\alpha P_k$, one now has two-sided bounds for the difference between μ_α and $X_\alpha P_k$ that arises when $\rho_\alpha > 0$. Furthermore, given that the quantity under the square root in (38) is the same discriminant Δ from (15), one can readily characterise the conditions leading to these bounds: the difference $\mu_\alpha - X_\alpha P_k$ is a minimum (zero) for a lossless branch, and is a maximum (39) in the limiting flow condition given by (35) and (36).

Isolating the square root in (38), squaring and simplifying now yields a quadratic equation linking P_k and μ_α :

$$(1 + \rho_\alpha^2) \mu_\alpha^2 - 2\rho_\alpha \mu_\alpha + 2(\rho_\alpha - \mu_\alpha) (1 + \rho_\alpha^2) (X_\alpha P_k) + (1 + \rho_\alpha^2)^2 (X_\alpha P_k)^2 = 0. \quad (40)$$

When this is rewritten to complete the square in P_k as

$$[(1 + \rho_\alpha^2) (X_\alpha P_k) + (\rho_\alpha - \mu_\alpha)]^2 + (\mu_\alpha^2 - 1) \rho_\alpha^2 = 0, \quad (41)$$

it can be solved directly for P_k given μ_α . This would ordinarily yield two solutions for P_k , but one may verify that only one of these actually satisfies the inequality (39)—the other solution enters when squaring both sides to clear the square root in (38), and does not actually satisfy (38) itself. Accordingly, one has the unique solution for P_k given μ_α

$$P_k = \frac{1/X_\alpha}{1 + \rho_\alpha^2} \left[\mu_\alpha - \rho_\alpha \left(1 - \sqrt{1 - \mu_\alpha^2} \right) \right]. \quad (42)$$

Note first that for $\rho_\alpha = 0$ this reproduces the lossless solution (1), in the form $X_\alpha P_k = \mu_\alpha$. One may also verify that when μ_α takes its limiting value $1/\sqrt{1 + \rho_\alpha^2}$, formula (42) reduces to formula (35) for P_k as it should. Finally, it may be verified that

$$\frac{\partial P_k}{\partial \mu_\alpha} = \frac{1/X_\alpha}{1 + \rho_\alpha^2} \left(1 - \frac{\rho_\alpha \mu_\alpha}{\sqrt{1 - \mu_\alpha^2}} \right), \quad (43)$$

and this is strictly positive for $\mu_\alpha < 1/\sqrt{1 + \rho_\alpha^2}$, decreasing to zero when μ_α reaches this limiting value. This confirms that P_k and μ_α always increase together when the branch impedance is held constant, hence that the P_k value (35) at the flow limit is also the largest active power transfer that can be achieved on a branch of fixed impedance, subject to the flat voltage profile.

6 Circulating flows and winding numbers in large networks

The preceding analysis for a single network branch can be applied to each of the branches making up a wider network, with varying power flows P_k on each branch and injections of active and reactive power at the network buses. Equation (33) and its converse (42) provide the necessary linkage between each branch power flow, the impedance, and the displacement between the terminal bus

voltage phase angles. In particular, they show that when branch resistance is taken into account, the angle displacement is always larger than suggested by the formula $\sin(\delta_j - \delta_k) = X_\alpha P_k$ for lossless branches. The difference between $\mu_\alpha = \sin(\delta_j - \delta_k)$ and $X_\alpha P_k$ ranges from zero (when the branch is lossless) up to the limit given by equation (39) in terms of the R/X ratio ρ_α .

The most immediate application is to a network with ‘string’ topology, where successive branches are connected end-to-end, and the sending power P_j on one branch is the sum of receiving power P_k for the previous branch and any additional power injected at the intermediate bus. Assuming each $P_k > 0$, the voltage phase angles δ_k at successive busbars form a strictly decreasing sequence, the lag being determined at each stage by the power flow P_k and branch impedance. Reactive power injection is also required at each intermediate busbar in order to meet the support requirement $\Delta Q = \sigma_\alpha P_k > 0$ on each branch and maintain the flat voltage profile.

It turns out to be possible to ‘close the loop’ on such a network, identifying an upstream bus with a remote downstream bus to form a ring network with a positive circulating power flow. Let such a ring network comprise n buses (numbered 0 through $n - 1$) and n branches (numbered 1 through n), with branch k linking buses $k - 1$ and k , and bus indices n and 0 identified. For $1 \leq k \leq n$ it is assumed that P_k , the receiving-end power on the k th branch, is strictly positive. Then one may identify the *circulating power* P_o as the minimum of P_k over all indices k , since the measured active power flow is uniform in direction and no less than P_o at any point in the ring.

Of course, since $\delta_{k-1} - \delta_k > 0$ for all k when $P_o > 0$ it is not possible for δ_0 and δ_n to be identical as real numbers, but this is not necessary: as they represent angle variables it is only necessary that they differ by an integer multiple of 2π [2]. That is to say,

$$\sum_{k=1}^n (\delta_{k-1} - \delta_k) = \sum_{\alpha=1}^n \arcsin \mu_\alpha = 2m\pi, \quad m \in \mathbb{Z}_+. \quad (44)$$

The integer m is termed the *winding number* in the literature, and can be defined for any cycle of branches in networks with node states characterised by angles, on the understanding that the differences $(\delta_{k-1} - \delta_k)$ in (44) are always restricted to the interval $(-\pi, \pi)$ [1]. As seen above, a nonzero winding number is necessary for circulating power to exist, and so a winding number of zero for all cycles in the network certifies the absence of circulating power flow.

Circulating power flows can in principle exist in any ring network of sufficient size, with (in general) non-uniform impedances $R_\alpha + jX_\alpha$ and nonuniform power flows, subject only to there being net power injections at each busbar sufficient to maintain the reactive power consumption $\sigma_\alpha P_k$ and active power losses $\rho_\alpha \sigma_\alpha P_k$ on every branch, for some $P_k \geq P_o$. However, the ‘homogenous’ case with uniform impedances and power flows is worth considering in further detail as a pointer to the behaviour in the general case.

Suppose then that in a ring network of n branches, every branch has the same impedance $R + jX$ and the same power flow $P = P_o$ at the receiving end, directed uniformly. (Subscripts are now dropped given all branches are identical.) To relate this to real-world applications it is useful to recall that these quantities are expressed in a per-unit system, so that if R_{branch} , X_{branch} and P_{branch} are the equivalent branch quantities in SI units and V_{nom} is the nominal voltage at each bus, then

$$R = \frac{R_{\text{branch}}}{Z_{\text{base}}}, \quad X = \frac{X_{\text{branch}}}{Z_{\text{base}}}, \quad P = \frac{P_{\text{branch}}}{S_{\text{base}}} \quad \text{where} \quad Z_{\text{base}} = \frac{V_{\text{nom}}^2}{S_{\text{base}}}, \quad (45)$$

with S_{base} chosen arbitrarily as a convenient base scale for power flows (often taken as 100MVA in large transmission systems).

Since each branch has the same impedance and power flow, each also has the same coefficient of support σ and the same flow coefficient μ . The winding number condition (44) therefore becomes

$$\mu = \sin\left(\frac{2m}{n}\pi\right), \quad m \in \mathbb{Z}_+, \quad 1 \leq m \leq \left\lfloor \frac{n}{4} \right\rfloor, \quad (46)$$

where the restriction on m is to ensure $\delta_j - \delta_k \leq \pi/2$ for each individual branch, and implies in particular that there are at least 4 branches making up the ring. (In the context of steady state power flows, angle differences greater than $\pi/2$ across a single branch are not practical, as they invert the increasing relationship between active power and angle difference that underpins system stability, and also, much like the second solution to (14), lead to impractical reactive power flows.)

Formula (42) then implies a unique circulating power

$$P_o = \frac{1/X}{1 + \rho^2} \left[\sin\left(\frac{2m}{n}\pi\right) - \rho \left(1 - \cos\left(\frac{2m}{n}\pi\right)\right) \right], \quad (47)$$

Ring size n	Largest feasible R/X ratio	Limiting flow $P_o(\rho_{\max})$ (all in units of $V_{\text{nom}}^2/X_{\text{branch}}$)	Q consumption per branch σP_o	P losses per branch $\rho\sigma P_o$
4	0	1	2	0
5	0.3249	0.6572	1.25	0.4061
6	0.5774	0.4330	0.75	0.4330
7	0.7975	0.2944	0.4603	0.3671
8	1	0.2071	0.2929	0.2929
9	1.1918	0.1504	0.1933	0.2304
10	1.3764	0.1123	0.1320	0.1817

Table 1: Limits on R/X and circulating power for ring networks with small numbers of branches.

for each admissible winding number m , given the impedance of a single branch and the number n of branches. This is clearest in the lossless case $R = 0$, where the solutions are

$$P_o = \frac{1}{X} \sin\left(\frac{2m}{n}\pi\right) \quad \text{for} \quad 1 \leq m \leq \left\lfloor \frac{n}{4} \right\rfloor. \quad (48)$$

The practice is adopted here and below (as in both (35) and (42) above) of expressing power quantities as a multiple of $1/X$, which provides a convenient scale for circulating flows. Note from above that using a scale of $1/X$ for per-unit power is equivalent to using a scale of $V_{\text{nom}}^2/X_{\text{branch}}$ for power in engineering units (watts or VA).

For a more quantitative analysis, consider first the limiting values of $\rho = R/X$ and P_o for fixed values of n and X . Recall that from (36) the maximum feasible value of μ is $1/\sqrt{1+\rho^2}$. Combined with taking $m = 1$ in (46) to get the *smallest* feasible value of μ for fixed n , this prescribes an *upper* bound on ρ to achieve any circulating flow in a ring of n branches. This upper bound ρ_{\max} is tabulated in Table 1 along with the P_o value at ρ_{\max} from either (35) or (47), the reactive power consumption $\Delta Q = \sigma P_o$ (where $\sigma = 2\mu$ by (36)), and the active power losses on each branch.

It should be stressed the values in Table 1 only pertain to the (normalised) limiting flow at this largest feasible R/X ratio ρ_{\max} . So it should not be too surprising that for this extreme limiting flow, the Q consumption on each branch is often larger than the actual active power flow P_o —indeed by (36) the coefficient of support σ at the limit exceeds 1 whenever $\rho < \sqrt{3}$. Likewise, for networks of 7 branches or more having the largest possible resistance in accordance with ρ_{\max} , the P losses on each branch actually exceed P_o . (The threshold case is that of 6 branches, where $\mu = \sqrt{3}/2$, $\rho_{\max} = 1/\sqrt{3}$ and $\sigma = \sqrt{3}$, so $\rho\sigma = 1$ and the losses are the same as P_o , both $\sqrt{3}/4$ in per-unit.)

If the actual R/X ratio is smaller than ρ_{\max} , flows with larger circulating power P_o are possible. So for example when $n = 7$, a flow with winding number $m = 1$ must have $\mu = \sin(2\pi/7) = 0.7818$ irrespective of the ratio $\rho = R/X$, but any value $\rho \leq 0.7975$ yields feasible solutions P_o given by equation (42), right down to $\rho = 0$ where the solution is $P_o = \mu/X = 0.7818/X$. It is readily seen from (42) that XP_o increases monotonically with decreasing ρ when μ is fixed, from 0.2944 at $\rho = \rho_{\max}$ to 0.7818 at $\rho = 0$. This also follows from equation (33) due to the monotonicity properties of σ found earlier.

It follows that for a fixed reactance X per branch and a fixed number of branches n , the values $P_o(\rho_{\max})$ in Table 1 are in fact the *minimum* feasible circulating flows, corresponding to the *maximum* feasible network resistances. Conversely, the *maximum* feasible circulating flows with a fixed X and n (and winding number 1) are the values given by (48) with $m = 1$ and $R = \rho = 0$. For values intermediate between these extremes, there will be a ratio $\rho = R/X \in (0, \rho_{\max})$ that achieves this value of circulating power with a winding number of 1.

Larger winding numbers are achievable when n is sufficiently large, as suggested by (46). Each winding number generates a fixed value of μ by (46), which when equated to $1/\sqrt{1+\rho^2}$ yields an equivalent ρ_{\max} value. A continuum of feasible circulating flows P_o again results, corresponding to values of ρ between zero and ρ_{\max} . The endpoints of the feasible continuum for P_o are given by (48) for $\rho = 0$ and by (35) or (47) for $\rho = \rho_{\max}$.

One may further note, as already found above, that whenever $R > 0$ the circulating power P_o is always accompanied by a circulating Q flow in the opposite direction, of magnitude $(\rho + \rho^2\sigma/2)P_o$. This circulating Q flow is additional to the consumption $\Delta Q = \sigma P_o$ on each branch, which must be supplied as a Q injection at each intervening busbar.

7 Conclusion

Working through the exact AC power flow solution with a ‘flat’ voltage profile provides important insights into the relationship between active and reactive power flows, reactive compensation requirements and phase angle differences when the resistance of network branches is taken into account. Through use of the ‘coefficient of support’ associated with the power flow on each network branch, the inevitable mathematical complications can be de-emphasised without sacrificing precision.

The simple relation $\sin(\delta_j - \delta_k) = XP$ for a lossless network branch is generalised by recognising that with a flat voltage profile, the correct value on the right hand side of this relation is the flow coefficient $\mu = XP - RQ$. Solving for Q from first principles, it is found that a positive injection of reactive power is always required to sustain a flat voltage profile with $|V| = 1\text{pu}$ at both ends of a network branch with positive reactance X . The required injection is readily quantifiable in terms of the coefficient of support $\sigma = X|I|^2/P$. For branches with positive resistance one always has $\sin(\delta_j - \delta_k) > XP$, and bounds for the difference $\sin(\delta_j - \delta_k) - XP$ are readily derived.

The generalised analysis has a ready application to the study of circulating power flows that can arise in large ring systems. For the case of a uniform ring with a circulating flow, the analysis provides bounds on the maximum allowable network resistance and the minimum attainable power flow in terms of the other configuration parameters. It also reveals that when resistance is taken into account, a real circulating power flow is always accompanied by a contrary flow of reactive power.

References

- [1] S. Jafarpour, E.Y. Huang, K.D. Smith, and F. Bullo. Flow and elastic networks on the n -torus: Geometry, analysis and computation. *SIAM Review*, 64(1):59–104, February 2022.
- [2] N. Janssens and A. Kamagate. Loop flows in a ring AC power system. *Electrical Power and Energy Systems*, 25:591–597, 2003.